# 524D, 724D, 826D, 828D, and 1032D Walk-Behind Snowblowers

# TECHNICAL MANUAL

John Deere Worldwide Commercial and Consumer Equipment Division TM1612 (OCT99)

TM1612 (OCT99) Replaces (01JUL96)

Litho in U.S.A

# **Walk-Behind Snowblowers**



Model 524D



Model 724D



Model 826D



Model 828D



Model 1032D


Safety	$\triangle$
Specifications and Information	
Engine	
Electrical	+
Power Train	P

Miscellaneous



### HANDLE FLUIDS SAFELY-AVOID FIRES

#### • BE PREPARED FOR EMERGENCIES

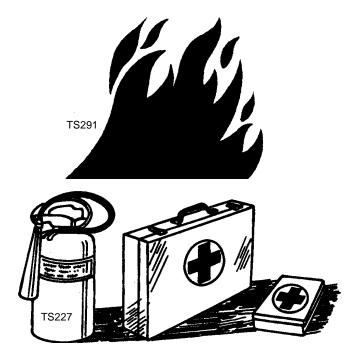

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.


Do not store oily rags; they can ignite and burn spontaneously.

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

### HANDLE CHEMICAL PRODUCTS SAFELY

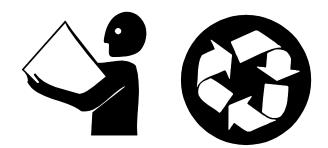

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

#### • DISPOSE OF WASTE PROPERLY

Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries. Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them. Do not pour waste onto the ground, down a drain, or into any water source. Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

# **USE SAFE SERVICE PROCEDURES**

#### • WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.




• SERVICE MACHINES SAFELY



#### • USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards. Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, use the correct size tools. **DO NOT** use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches. Use only service parts meeting John Deere specifications.

• PARK MACHINE SAFELY

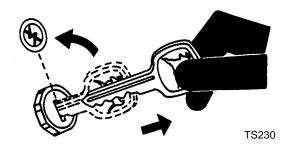

- Before working on the machine:
  - 1. Lower all equipment to the ground.
  - 1. Stop the engine and remove the key.
  - 1. Disconnect the battery ground strap.
  - 1. Hang a "DO NOT OPERATE" tag in operator station.
- SUPPORT MACHINE PROPERLY AND USE
  PROPER LIFTING EQUIPMENT



If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

Lifting heavy components incorrectly can cause severe injury or machine damage. Follow recommended procedure for removal and installation of components in the manual.

#### • WORK IN CLEAN AREA

#### · Before starting a job

- 1. Clean work area and machine:
- 1. Make sure you have all necessary tools to do your job.
- 1. Have the right parts on hand.
- 1. Read all instructions thoroughly; do not attempt shortcuts.



#### ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

#### • WORK IN VENTILATED AREA

#### WARNING: California Proposition 65 Warning


Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Gasoline engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos. Keep bystanders away from the area.

#### SERVICE TIRES SAFELY



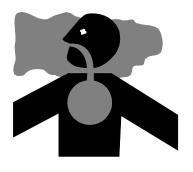

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

#### • REMOVE PAINT BEFORE WELDING OR HEATING

Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area. Dispose of paint and solvent properly. Remove paint before welding or heating: If you sand or grind paint, avoid breathing the dust. Wear an approved respirator. If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

#### • AVOID HARMFUL ASBESTOS DUST

:Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos

Explosive separation of a tire and rim parts can cause serious injury or death.


Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

• Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

# AVOID INJURY FROM ROTATING AUGERS

Keep hands and feet away from auger housing. Never try to work on auger or clear any material from auger housing while machine is running or spark plug is connected.

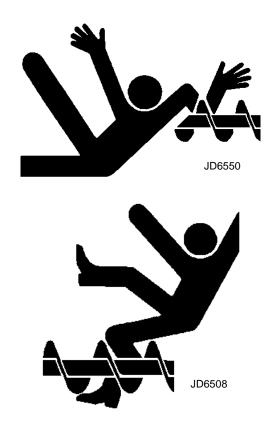




LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

# **REPLACE SAFETY SIGNS**

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

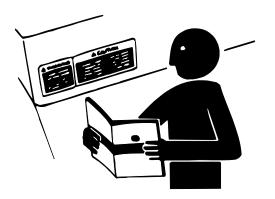

# CONTENTS

#### Page

## SPECIFICATIONS AND INFORMATION

ENGINE
FUEL
ELECTRICAL
AUGER
FRICTION DRIVE DIFFERENTIAL SPEEDS
OVERALL DIMENSIONS
FRICTION DRIVE SYSTEM
METRIC FASTENER TORQUE VALUES
INCH FASTENER TORQUE VALUES
GASOLINE— NORTH AMERICA
GASOLINE STORAGE— NORTH AMERICA
GASOLINE—EUROPE
GASOLINE STORAGE—EUROPE
ENGINE OIL—NORTH AMERICA8
ENGINE OIL—EUROPE
ENGINE BREAK-IN OIL- NORTH AMERICA9
ENGINE BREAK-IN OIL— EUROPE
ANTI-CORROSION GREASE
ALTERNATIVE LUBRICANTS
SYNTHETIC LUBRICANTS
LUBRICANT STORAGE11
MIXING OF LUBRICANTS
GREASE — NORTH AMERICA
GREASE — EUROPE
AUGER GEAR GREASE —NORTH AMERICA
AUGER GEAR GREASE — EUROPE
PRODUCT IDENTIFICATION LOCATIONS14

**BUY NOW** Then Instant Download the Complete Manual Thank you very much!