

7000 Folding Max-Emerge Planter



JOHN DEERE

TECHNICAL MANUAL 7000 Folding Max-Emerge Planter

TM1211 (01FEB85) English

John Deere Plow Planter Works
TM1211 (01FEB85)

LITHO IN U.S.A.
ENGLISH



7000 FOLDING MAX-EMERGE® PLANTER

TECHNICAL MANUAL

TM-1211 (FEB-85)

CONTENTS—REPAIR SECTIONS

SECTION 10 - GENERAL

- Group 05 - Specifications
- Group 10 - Predelivery, Delivery Service, and After-Sale Inspection
- Group 15 - Lubrication

SECTION 40 - ELECTRICAL REPAIR

- Group 05 - Specifications
- Group 10 - Console
- Group 15 - Master Cylinder Switches
- Group 20 - Junction Boxes

SECTION 70 - HYDRAULIC REPAIR

- Group 05 - Specifications and Tools
- Group 10 - Cylinders
- Group 15 - Flow Dividers
- Group 20 - Solenoid Valves

SECTION 100 - DRIVES REPAIR

- Group 05 - Specifications
- Group 10 - Drive Wheels
- Group 15 - Countershaft Drive System
- Group 20 - Seed Drive Transmission
- Group 25 - Seed Drive Shaft
- Group 30 - Fertilizer Drive

SECTION 110 - PLANTING UNIT REPAIR

- Group 05 - Seed Metering Mechanisms
- Group 10 - Seed Openers
- Group 15 - Closing Wheels

CONTENTS—OPERATION AND TEST SECTIONS

SECTION 240 - ELECTRICAL/HYDRAULIC OPERATION AND TEST

- Group 05 - Specifications
- Group 10 - Operation of 8-Row Wide and 12-Row Narrow
- Group 15 - Diagnosing and Testing 8-Row Wide and 12-Row Narrow
- Group 20 - Operation of 12-Row Wide, 16- and 18-Row Narrow
- Group 25 - Diagnosing and Testing 12-Row Wide, 16- and 18-Row Narrow
- Group 30 - Operation of 24-Row Narrow
- Group 35 - Diagnosing and Testing of 24-Row Narrow

SECTION 310 - PLANTING UNIT OPERATION AND TEST

- Group 05 - Seed Metering Mechanisms
- Group 10 - Seed Openers
- Group 15 - Closing Wheels
- Group 20 - Checking Row Unit Meters with Run-In Unit
- Group 25 - Checking Population

All information, illustrations and specifications contained in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Because John Deere sells its products world-wide, U.S. units of measure are shown with their respective Metric equivalents throughout this technical manual. These equivalents are the SI (International System) Units of Measure.

NOTE: Monitor Sections 130 and 330 have been removed from this manual. Refer to TM-1270 for ALL planter monitoring system information.


Copyright© 1985 Deere & Company
Moline, Illinois All rights reserved
Previous Editions
Copyright© 1982 Deere & Company
Copyright© 1980 Deere & Company
Copyright© 1979 Deere & Company


SAFETY AND YOU



T27999N

INTRODUCTION

 This safety alert symbol identifies important safety messages in this manual and on the planter. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

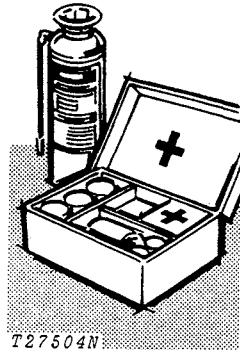

T27504N

Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located—know how to use them.

SERVICE AREA


Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment.

Make sure the service area is adequately vented.

Be sure all electrical outlets and tools are properly grounded.

Use adequate light for the job at hand.

Protect Against Noise

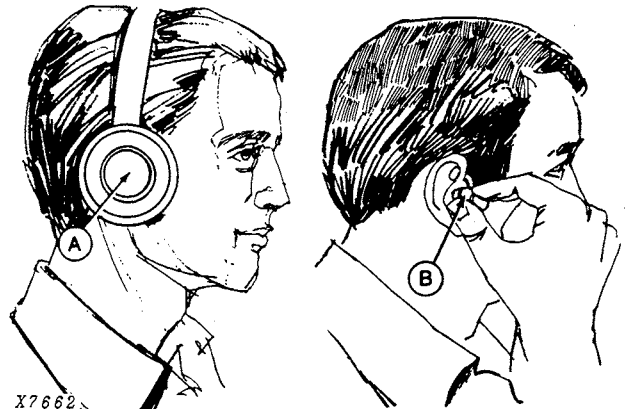

X7662

A—Earmuffs

X7062

B—Earplugs

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

SERVICE

Always lower the planter to the ground when not in use. Whenever possible, perform service work and adjustments with the planter on the ground.


Never clean, lubricate, or adjust a machine that is in motion.

TRANSPORTING

When transporting the planter on a smooth surface road, do not exceed maximum tractor transport speed. Reduce speed considerably when traveling over rough ground.

When transporting the planter on a road or highway at night or during the day, use accessory lights and devices for adequate warning to operators of other vehicles. In this regard, check local governmental regulations. Various safety lights and devices are available from your John Deere dealer.

AVOID HIGH-PRESSURE HYDRAULIC FLUIDS

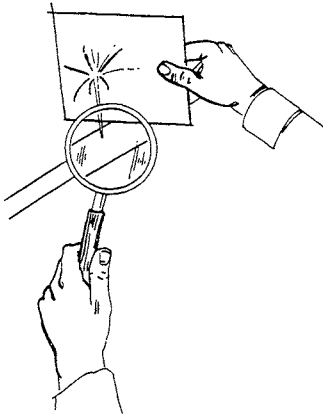

H05336

Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious personal injury. Before disconnecting lines, be sure to relieve all pressure. Before applying pressure to the system, be sure all connections are tight and that lines, pipes and hoses are not damaged. Hydraulic oil escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands, to search for suspected leaks.

If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

Always relieve pressure in the hydraulic system before working with hydraulic system components.

PERSONAL SAFETY

RIGHT



H23440N

H23440N

Always avoid loose clothing or any accessory—flopping cuffs, dangling neckties and scarves—that can catch in moving parts and put you out of work. Always wear your safety glasses while on the job.

MOUNTING TIRES

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.

When sealing tire beads on rims, never exceed 35 psi or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead, and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

Section 10 GENERAL

CONTENTS

	Page		Page
Group 05 - SPECIFICATIONS		Group 15 - LUBRICATION	
General	05-1	Lubrication	15-1
Serial Number	05-1		
 Group 10 - PREDELIVERY, DELIVERY, AND AFTER-SALES SERVICE			
Torque Chart	10-1		
Predelivery Service	10-1		
Delivery Service	10-2		
After-Sales Inspection	10-2		
Planter Run-In	10-3		

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**

Group 05 SPECIFICATIONS

GENERAL

- PLANTING UNIT TYPES Plate or Plateless.
- SEED OPENERS Tru-Vee double-disk openers.
- ROW SPACING 8-Row Wide - 36- and 38-in. (91 cm and 97 cm) row widths.
12-Row Narrow - 30-in. (76 cm) row widths.
12-Row Wide - 36- and 38-in. (91 cm and 97 cm) row widths.
16-, 18- and 24-Row Narrow - 30-in. (76 cm) row widths.
- TYPE OF LIFT Wheel hydraulic cylinders.
- TYPE OF DRIVE Sprocket and chain from drive wheels.
- TIRES 8-Row Wide 7.60-15 6PR rib implement type.
12-Row Narrow 7.60-15 8PR rib implement type.
12-Row Wide, 16- and 18-Row Narrow 7.50-20 6PR rib implement type.
24-Row Narrow 7.50-20 6PR and 9-16 10PR rib implement type.
- SEED HOPPERS 1.6 bu. (58 L) or 3.0 bu. (106 L) capacity.
- MARKERS Automatic alternating or manual controlled.
- MONITORS 8-Row Wide and 12-Row Narrow - COMPUTER TRAK™ 100
12-Row Wide and 16-Row Narrow - COMPUTER TRAK 200
18- and 24-Row Narrow - COMPUTER TRAK 300