

Contents

1 GENERAL INFORMATION AND MAINTENANCE	1-2 HOW TO USE THIS BOOK	1-10 ROUTINE MAINTENANCE AND TUNE-UP
	1-2 TOOLS AND EQUIPMENT	1-35 FLUIDS AND LUBRICANTS
	1-4 SERVICING YOUR VEHICLE SAFELY	1-46 TRAILER TOWING
	1-5 FASTENERS, MEASUREMENTS AND CONVERSIONS	1-47 JUMP STARTING A DEAD BATTERY
	1-7 SERIAL NUMBER IDENTIFICATION	1-48 JACKING
		1-50 MAINTENANCE INTERVALS
2 ENGINE ELECTRICAL	2-2 HIGH ENERGY IGNITION (HEI) SYSTEM	2-7 CHARGING SYSTEM
	2-2 DISTRIBUTOR IGNITION (DI) SYSTEM	2-8 STARTING SYSTEM
	2-6 FIRING ORDERS	2-9 SENDING UNITS AND SENSORS
3 ENGINE AND ENGINE OVERHAUL	3-2 ENGINE MECHANICAL	3-58 ENGINE RECONDITIONING
	3-56 EXHAUST SYSTEM	
4 DRIVEABILITY AND EMISSION CONTROLS	4-2 GASLINE ENGINE EMISSION CONTROLS	4-25 DIESEL ELECTRONIC ENGINE CONTROLS
	4-10 DIESEL ENGINE EMISSION CONTROLS	4-29 TROUBLE CODES
	4-11 CARBURETED ELECTRONIC ENGINE CONTROLS	4-39 COMPONENT LOCATIONS
	4-17 FUEL INJECTED ELECTRONIC ENGINE CONTROLS	4-55 VACUUM DIAGRAMS
5 FUEL SYSTEM	5-2 BASIC FUEL SYSTEM DIAGNOSIS	5-14 MULTI-PORT FUEL INJECTION (MFI)
	5-2 FUEL LINE FITTINGS	5-19 CENTRAL SEQUENTIAL FUEL INJECTION (CSFI)
	5-3 CARBURETED FUEL SYSTEM	5-22 DIESEL FUEL SYSTEM
	5-10 THROTTLE BODY INJEC- TION (TBI)	5-26 FUEL TANK
6 CHASSIS ELECTRICAL	6-2 UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS	6-13 ENTERTAINMENT SYSTEMS
	6-7 BATTERY CABLES	6-17 WINDSHIELD WIPERS AND WASHERS
	6-7 SUPPLEMENTAL INFLATABLE RESTRAINT (SIR) SYSTEM	6-19 INSTRUMENTS AND SWITCHES
	6-8 HEATING AND AIR CONDITIONING	6-22 LIGHTING
	6-12 CRUISE CONTROL	6-26 TRAILER WIRING
		6-26 CIRCUIT PROTECTION
		6-28 WIRING DIAGRAMS

Contents

7-2	MANUAL TRANSMISSION	7-9	DRIVELINE
7-4	CLUTCH	7-13	SOLID FRONT DRIVE AXLE
7-6	AUTOMATIC TRANSMISSION	7-16	INDEPENDENT FRONT DRIVE AXLE
7-8	TRANSFER CASE	7-19	REAR AXLE

DRIVE TRAIN

7

8-2	WHEELS	8-18	K-SERIES 4WD FRONT SUSPENSION
8-4	C AND R SERIES 2WD FRONT SUSPENSION	8-24	C3HD FRONT SUSPENSION
8-14	V-SERIES 4WD FRONT SUSPENSION	8-26	REAR SUSPENSION
		8-30	STEERING

SUSPENSION AND STEERING

8

9-2	BRAKE OPERATING SYSTEM	9-20	FOUR WHEEL ANTI-LOCK BRAKE SYSTEM
9-6	DISC BRAKES	9-25	REAR WHEEL ANTI-LOCK (RWAL) BRAKE SYSTEM
9-12	DRUM BRAKES		
9-18	PARKING BRAKE		

BRAKES

9

10-2	EXTERIOR	10-5	INTERIOR
-------------	----------	-------------	----------

BODY AND TRIM

10

10-15	GLOSSARY
--------------	----------

GLOSSARY

10-19	MASTER INDEX
--------------	--------------

MASTER INDEX

**Thank you very much
for your reading.**

**Please click here and go
back to the website.**

**Then, you can
download the complete
manual instantly.**

No waiting.