



MULE 610 4x4
MULE 600



Utility Vehicle Service Manual

Quick Reference Guide

General Information	1
Periodic Maintenance	2
Fuel System	3
Engine Top End	4
Converter System	5
Engine Lubrication System	6
Engine Removal/Installation	7
Engine Bottom End	8
Transmission	9
Wheels/Tires	10
Final Drive	11
Brakes	12
Suspension	13
Steering	14
Frame	15
Electrical System	16
Appendix	17

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.

**Thank you very much
for your reading.**

**Please click here and go
back to our website.**

**Then, you can
download the complete
manual instantly.**

No waiting.