




01 - Introduction - Specifications

CONTENTS

5400

- 1A10 - Using the manual
- 1B10 - SPECIFICATIONS - General specifications
- 1B11 - SPECIFICATIONS - Forward speeds
- 1B12 - SPECIFICATIONS - Dimensions
- 1B13 - SPECIFICATIONS - Capacities
- 1C10 - Miscellaneous

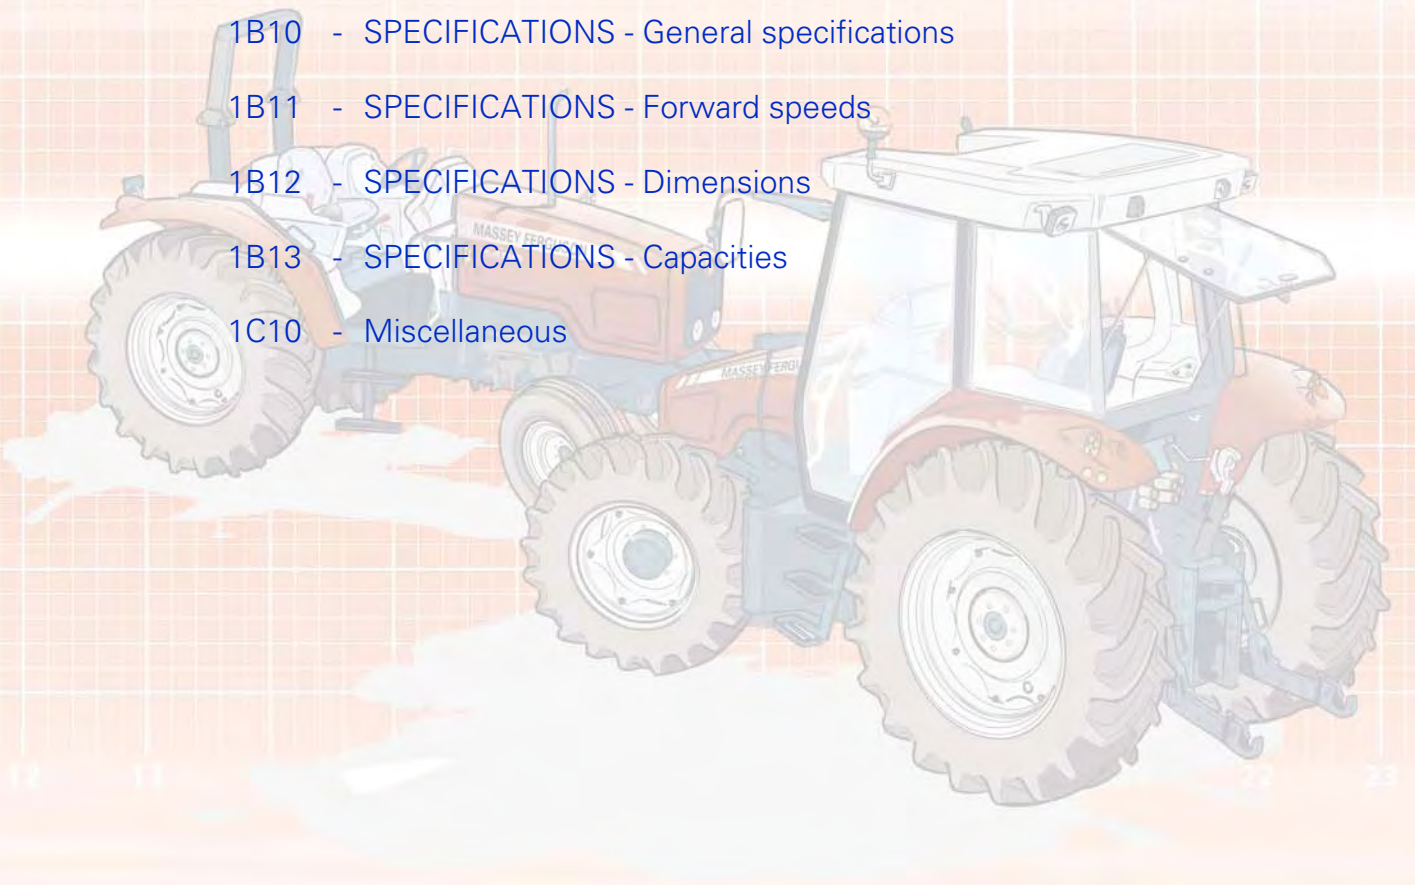

1A10- Using the manual

CONTENTS

A . General	3
B . Structure of the manual	3
C . Service tools	3
D . Repairs and parts replacement	3

A . General

The purpose of this manual is to assist Dealers and Agents in the efficient installation, maintenance and repair of AGCO equipment. Carrying out the procedures as detailed, together with the use of special tools where appropriate, will enable the operations to be completed within the time stated in the repair time schedule.

B . Structure of the manual

Page numbering

This manual is divided into chapters and sections, each page containing the following information:

Example: **10A12.1**

10 = chapter

A12 = section

1 = page number within the section

The issue number is indicated at the bottom of the page.

Summaries

For quick reference, each chapter starts with a table of contents, listing the various sections included in that chapter.

Meaning of references

(...): identification of parts and components

Amendments

Modified pages will be edited using the same page numbering as the preceding pages—only the issue number changes.

The old pages should be destroyed.

C . Service tools

Where the use of a service tool is necessary to carry out an operation, the tool reference is mentioned with the relevant instruction.

Tool drawings for locally made tools are given at the end of the relevant sections.

D . Repairs and parts replacement

When parts have to be replaced, it is essential that only genuine AGCO parts are used.

The following points are of particular importance when carrying out repairs and fitting replacement parts and accessories.

Tractor safety may be compromised if non-genuine parts are fitted.

Legislation in certain countries prohibits the fitting of parts that do not comply with the tractor manufacturer's specifications. Torque wrench setting figures given in the workshop manual must be strictly adhered to. Locking devices must be fitted where specified. If the efficiency of a locking device is impaired during removal, it must be replaced.

The tractor warranty may be invalidated if non-genuine AGCO parts are fitted. All AGCO spare parts are guaranteed by the manufacturer. AGCO Dealers and Agents are required to supply genuine service parts only.

1B10- SPECIFICATIONS - General specifications

CONTENTS

A . General specifications 3

**Thank you very much
for your reading.**

**Please click here and go
back to the website.**

**Then, you can
download the complete
manual instantly.**

No waiting.