


**Official**

# HONDA

## SHOP MANUAL

### ATC250R

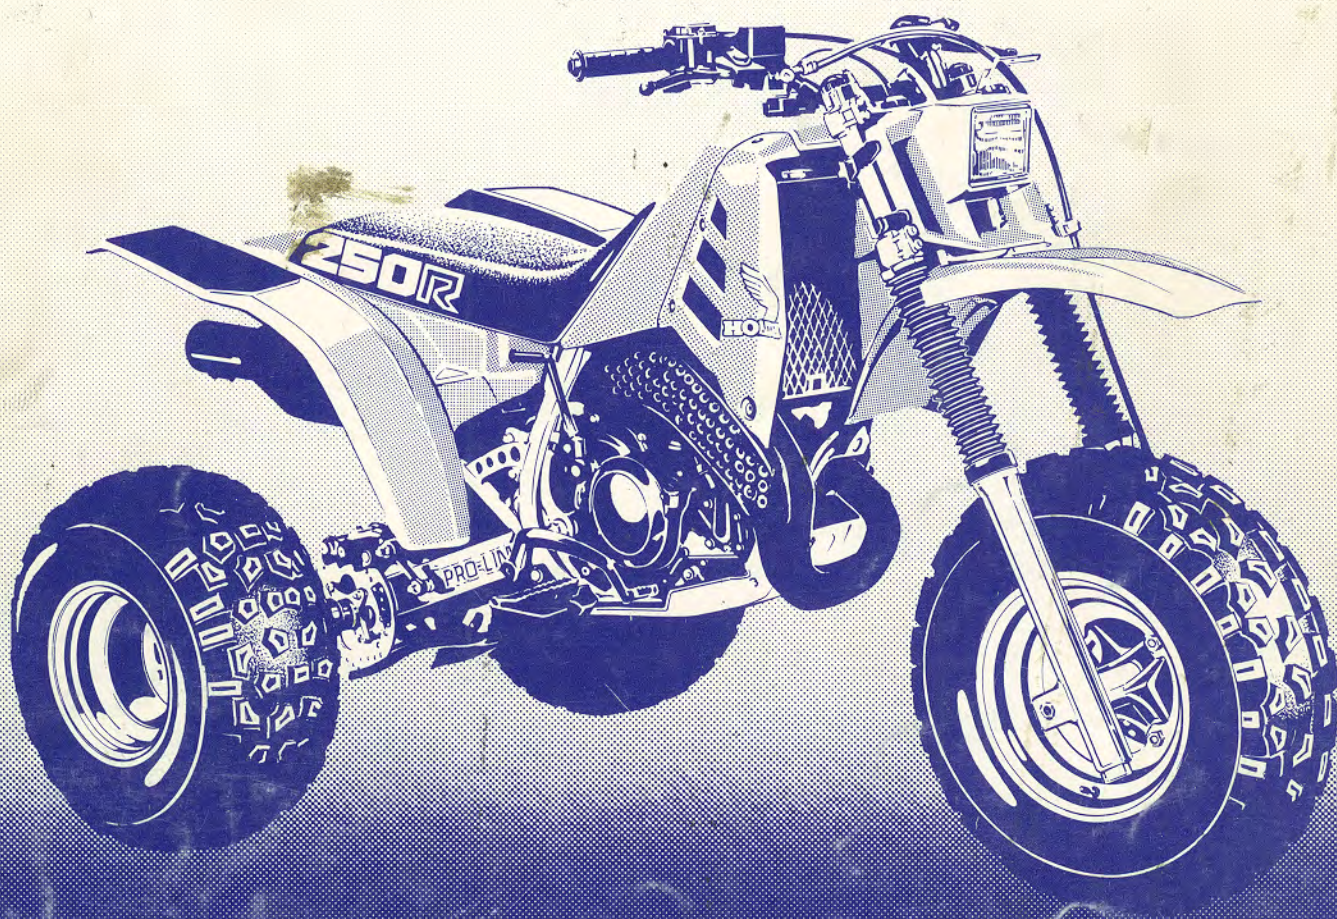

**'85~'86**



## HOW TO USE THIS MANUAL

Sections 1 and 2 apply to the whole ATC while sections 3 through 15 describe parts of the ATC, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration, general instructions, specifications, torque values, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of a problem, see section 16, TROUBLESHOOTING.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing.

Honda Motor CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever.

No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.  
Service Publications Office

## CONTENTS

	GENERAL INFORMATION	1
	MAINTENANCE	2
ENGINE	FUEL SYSTEM	3
	ENGINE REMOVAL/INSTALLATION	4
	CYLINDER HEAD/CYLINDER/PISTON	5
	ALTERNATOR	6
	CLUTCH/GEARSHIFT LINKAGE/KICK STARTER	7
	TRANSMISSION/CRANKSHAFT/BALANCER	8
	COOLING SYSTEM	9
CHASSIS	FRONT WHEEL/SUSPENSION/STEERING	10
	REAR WHEEL/DRIVE MECHANISM	11
	REAR SUSPENSION	12
	HYDRAULIC DISC BRAKES	13
	REAR FENDER/SEAT/EXHAUST SYSTEM	14
	ELECTRICAL SYSTEM	15
	TROUBLESHOOTING	16

**Thank you very much  
for your reading.**

**Please click here and go  
back to the website.**

**Then, you can  
download the complete  
manual instantly.**

**No waiting.**