

Repair Manual



Diesel Engine

D 2565 ME

D 2566 ME / MTE / MLE

D 2866 E / TE / LE

Item	Chapter / Page
ALPHABETICAL INDEX	5 to 6
ENGINE VIEWS	7 to 14
LONGITUDINAL SECTION D 2565 ME	15
LONGITUDINAL SECTION D 2566 ME	16
CROSS SECTION D 2565 ME/D 2566 ME	17
CROSS SECTION D 2566 MLE	18
LONGITUDINAL SECTION D 2866 E	19
CROSS SECTION D 2866 E	20
LONGITUDINAL SECTION D 2866 LE	21
CROSS SECTION D 2866 LE	22
SCHEMATIC DIAGRAM OF ENGINE LUBRICATION SYSTEM	23
SCHEMATIC DIAGRAM OF FUEL SYSTEM	24
SCHEMATIC DIAGRAM OF FLAME STARTING DEVICE	25
SCHEMATIC DIAGRAM OF TIMING GEARS	26
 Checking, controlling, adjusting	
Checking compression	1/1
Checking drive belt tightness	2/1
Adjusting valve clearance	3/1
Checking/adjusting start of delivery	4/1
 Fuel system	
Removing and installing fuel injection pump	5/1
Removing and installing fuel injection lines	6/1
Removing, repairing and installing fuel injectors	7/1
Removing, installing and repairing flame starting device	8/1
Removing and installing shut-down devices	9/1
Removing and installing speed governor	10/1
Removing and installing speed adjuster	11/1
 Cooling System	
Removing, repairing and installing water pump	12/1
Removing and installing surge tank and plenum tank	13/1
Removing and installing heat exchanger and thermostats	13/1
Removing and installing raw water pump	14/1
PTO for raw water pump	14/1
Removing and installing intercooler	15/1
 Lubricating System	
Replacing oil filter element	16/1
Removing and installing oil cooler	17/1
Removing and installing oil pan and oil drain	18/1
Removing and installing oil separating valve	19/1
Removing and installing oil spray jets	20/1
Removing, repairing and installing oil pump	21/1
 Flywheel, Crankshaft Seals	
Removing and installing clutch shaft pilot bearing	22/1
Removing, installing and repairing flywheel	23/1
Replacing starter gear ring	24/1
Replacing rear crankshaft seal (flywheel end)	25/1
Replacing front crankshaft seal and pilot bearing race	26/1

Item**Intake and Exhaust Systems**

Removing and installing inlet bend and inlet manifold	27/1
Removing and installing exhaust manifold	28/1
Removing and installing turbocharger	29/1
Checking axial and radial play of turbine/rotor shaft	30/1

Cylinder Head

Removing and installing cylinder head	31/1
Removing and installing cylinder head, summary	32/1
Removing and installing valves	33/1
Removing and installing valve guides	34/1
Refacing valve seat	35/1
Replacing valve seat rings	36/1

Timing

Removing and installing timing case	37/1
Removing and installing camshaft	38/1
Replacing camshaft bearing	38/1
Checking valve timing	38/1

Crankshaft, Conrods, Pistons

Removing and installing crankshaft	39/1
Removing and installing pistons with connecting rods	40/1
Replacing piston rings	41/1
Detaching and attaching piston on connecting rod, checking connecting rod	42/1
Removing and installing cylinder liners	43/1
Measuring piston protrusion	44/1

Compressor

Removing and installing compressor	45/1
Disassembling and assembling compressor	46/1

Electrical Equipment, Monitoring Devices

Monitoring devices, instrument panel, tachometer	47/1
Removing and installing starter	48/1
Removing and installing alternator	49/1
Removing and installing preheater	50/1
Tension pulley for V-belt	51/1

General Instructions

Installation of flat gaskets	101
------------------------------	-----

Technical Data

Specifications	201
Testing and adjusting values	203
Tightening torque guide values	219
Running-in engine	222
Special tools	301

Item


Chapter / Page

Aftercooler	15/1
Air compressor	45/1, 46/1
Alternator	49/1
Big end bearings	39/1, 42/1
Bypass valve	16/1
Camshaft	38/1
Charge air cooler	15/1
Clutch shaft pilot bearing	22/1
Compression, checking	1/1
Compressor	45/1, 46/1
Crankcase vent	19/1
Crankshaft	39/1
Crankshaft seal (flywheel end)	25/1
Crankshaft seal (front)	26/1
Cylinder head	31/1, 32/1
Cylinder liners	43/1
Engine barring device	4/1, 44/1
Engine cross section	17, 18, 22
Engine longitudinal section	15, 16, 19, 21
Engine lubrication (layout)	23
Engine timing gear (layout)	26
Engine views	7 to 14
Exhaust manifold	28/1
Flame starting device	18, 8/1
Flywheel	23/1
Fuel injection lines	6/1
Fuel injectors	7/1
Fuel nozzles	7/1
Fuel pipes	6/1
Fuel pump	5/1
Fuel system (layout)	14
Fuel valves	7/1
Gaskets (installation instructions)	101
Governor (electronic)	10/1
Heat exchanger	13/1
Injection pump	5/1
Injectors	7/1
Intake manifold	27/1
Intercooler	15/1
Lubrication (layout)	23
Nozzles	7/1
Oil cooler	17/1
Oil dipstick	18/1
Oil drain	18/1
Oil filter	16/1
Oil pan	18/1
Oil pressure monitor	47/1
Oil pump	21/1
Oil separating valve (crankcase vent)	19/1
Oil spray jet	20/1
Overvoltage protection	49/1

Item


Chapter/Page

Preheater	50/1
Pilot bearing in flywheel	22/1
Piston pins	42/1
Piston rings	41/1
Piston protrusion	44/1
Pistons	40/1
Plenum tank	13/1
PTO for raw water pump	14/1
Raw water pump	14/1
Reconditioned engines (notes)	44/1
Regulator, alternator	49/1
Relief valve	21/1
Rocker arms	31/1
Running-in instructions (reconditioned engines)	224
Shutdown device	9/1
Small end bushes	39/1
Solenoid valve (flame starting device)	8/1
Special tools	301 to 309
Specification (engine)	201
Speed adjuster (electric)	11/1
Speed governor (electronic)	10/1
Starter	48/1
Starter gear ring	24/1
Start inhibit relay	49/1
Start of delivery	4/1
Surge tank	13/1
Tachometer	47/1
Tappet bores N I	39/3
Technical data	201
Temperature monitor	47/1
Tensioning pulley, Vee belt	51/1
Testing and adjusting values	204 to 218
Thermostat	13/1
Tightening torques	219 to 222
Tightening torques (table)	223
Timing case	37/1
Timing gear adjustment	39/2
Timing gear diagram	26
Tools	301 to 307
Turbocharger, checking axial/radial play	30/1
Turbocharger, removing and installing	29/1
Valve clearance	3/1
Valve guides	34/1
Valve retrusion	33/1
Valves	33/1
Valve seat insert	35/1, 36/1
Valve timing, checking	38/1
Vee belts	2/1
Water pump	12/1

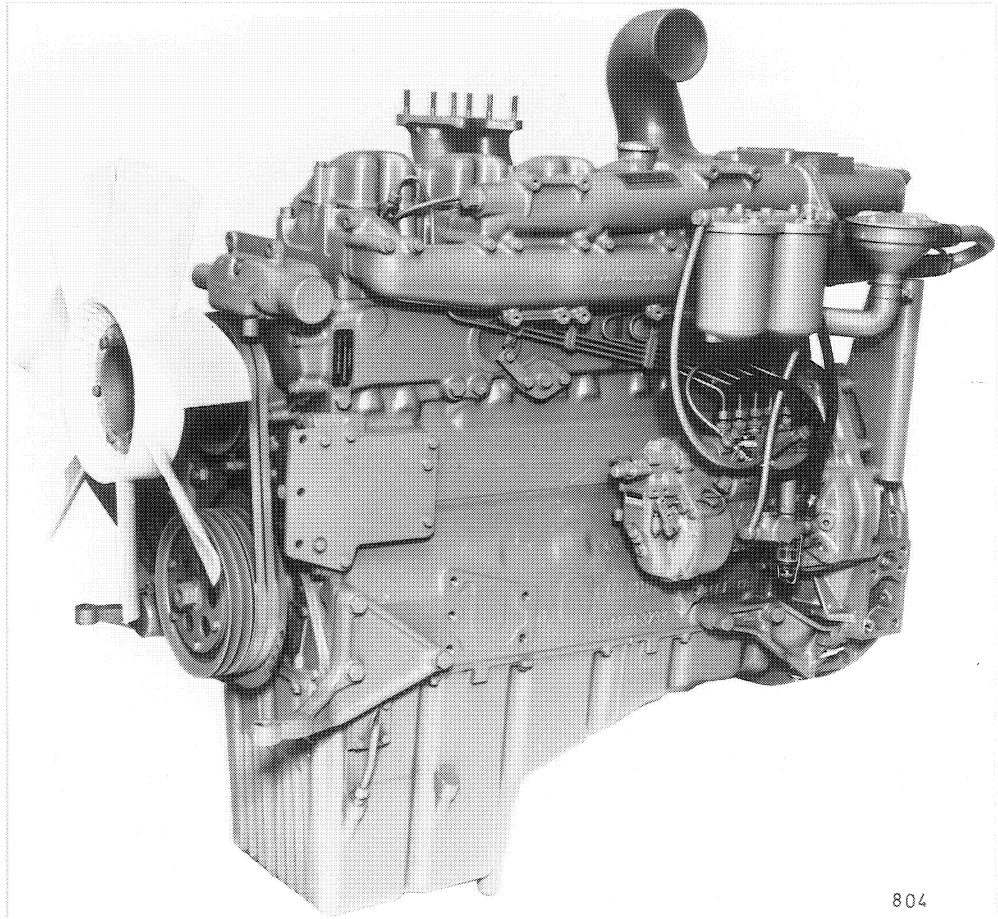

D 2565 ME

804

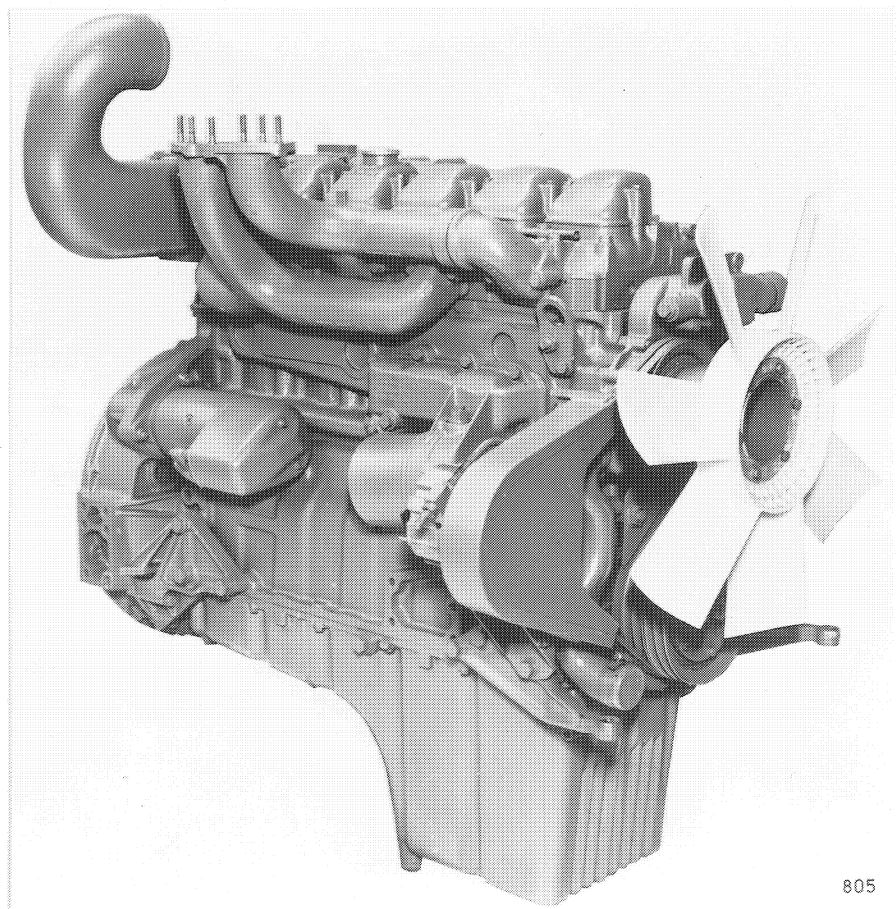

D 2565 ME

805

**Thank you very much
for your reading.**

**Please click here and go
back to the website.**

**Then, you can
download the complete
manual instantly.**

No waiting.