






 

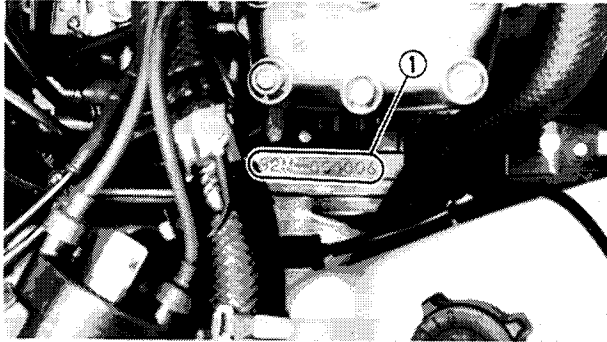
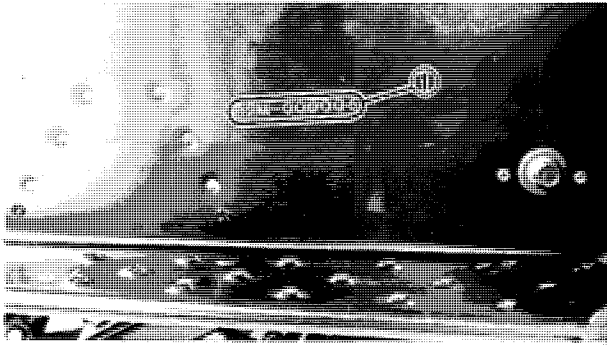


INDEX

GENERAL INFORMATION	 GEN INFO 1
PERIODIC INSPECTIONS AND ADJUSTMENTS	 INSP ADJ 2
ENGINE OVERHAUL	 ENG 3
COOLING SYSTEM	 COOL 4
CARBURETION	 CARB 5
POWER TRAIN	 POWR TR 6
CHASSIS	 CHAS 7
ELECTRICAL	 ELEC 8
APPENDICES	 APPX 9

CHAPTER 1. GENERAL INFORMATION

MACHINE IDENTIFICATION	1-1
FRAME SERIAL NUMBER	1-1
ENGINE SERIAL NUMBER	1-1
STORAGE	1-2
PRE-SEASON PREPARATION	1-2
IMPORTANT INFORMATION	1-3
NO FLAME SOURCES	1-3
WASHING AND CLEANING	1-3
RIGHT TOOLS	1-3
MAKING IT NEAT	1-3
TIGHTENING TORQUE	1-3
ALL REPLACEMENT PARTS	1-4
GASKETS, OIL SEALS, AND O-RINGS	1-4
LOCK WASHERS/PLATES AND COTTER PINS	1-4
BEARINGS AND OIL SEALS	1-4
CIRCLIPS	1-5
NOTES ON DISASSEMBLY AND ASSEMBLY	1-5
SPECIAL TOOLS	1-6
FOR TUNE UP	1-6
FOR ENGINE SERVICE	1-6
FOR POWER TRAIN SERVICE	1-7
FOR ELECTRICAL SERVICE	1-8



GENERAL INFORMATION

MACHINE IDENTIFICATION

FRAME SERIAL NUMBER

The frame serial number ① is located on the right-hand side of the frame (just below the front of the seat).

ENGINE SERIAL NUMBER

The engine serial number ① is located on the right-hand side of the crankcase.

NOTE:

The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.

Starting Serial Number
82M-000101

NOTE:

Designs and specifications are subject to change without notice.



**Thank you very much
for your reading.**

**Please click here and go
back to the website.**

**Then, you can
download the complete
manual instantly.**

No waiting.