

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

16. Use Tooling (A) and a suitable press in order to remove retaining ring (25) from barrel (22).

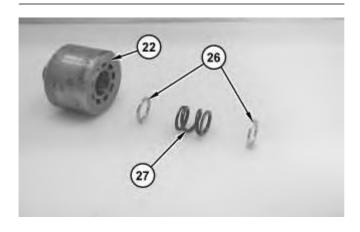


Illustration 13 g01345124

17. Remove washers (26) and spring (27) from barrel (22).



Illustration 14 g01345125

18. Remove piston (28) and the O-ring seal.

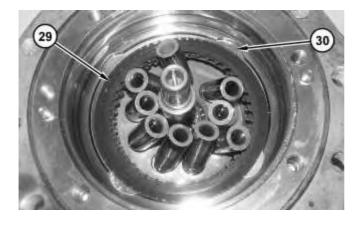


Illustration 15 g01345126

#### 19. Remove discs (29) and plates (30).

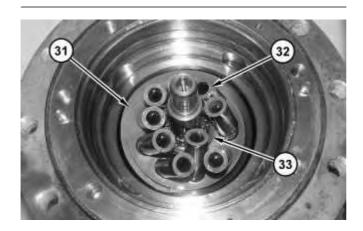


Illustration 16 g01345127

### 20. Remove retainer (31), bearing (33), and pistons (32).



Illustration 17 g01345129

#### 21. Remove swashplate (34).

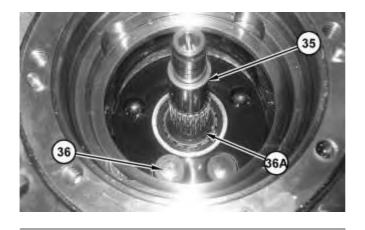


Illustration 18

g01374432

## **WARNING**

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

- 22. Remove pistons (36) and shaft (35).
- 23. Use a suitable press in order to remove bearing race (36A).

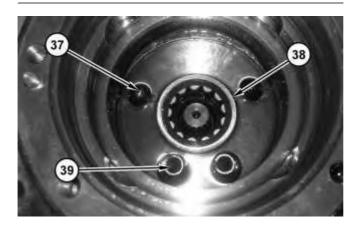


Illustration 19

g01345131

24. Remove balls (37), bearing (38), and springs (39).

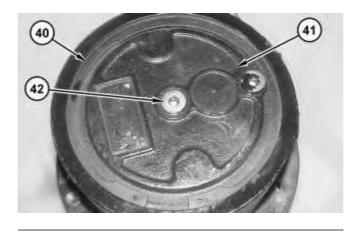


Illustration 20

g01345132

- 25. Use Tooling (B) in order to remove retaining ring (40).
- 26. Remove plugs (42) and the O-ring seals.
- 27. Use Tooling (C) in order to remove cover (41).

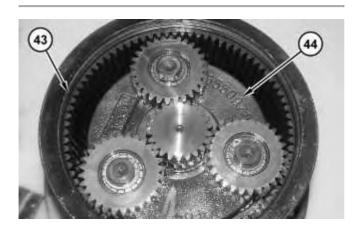


Illustration 21

g01345133

28. Remove O-ring seal (43) and carrier assembly (44).

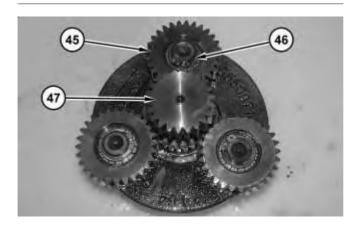


Illustration 22

g01345135

29. Use Tooling (D) in order to remove retaining rings (46).

30. Remove gears (45) and gear (47).



Illustration 23 g01345136

- 31. Use Tooling (E) in order to remove retaining ring (48).
- 32. Remove gear (49).

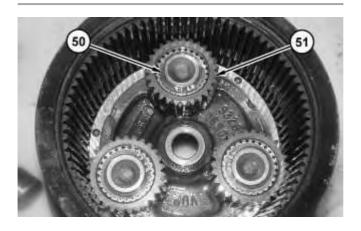


Illustration 24 g01345138

- 33. Use Tooling (D) in order to remove retaining rings (50).
- 34. Remove gears (51).



Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING



# **NOTE:**

If there is no response to click on the link above, please download the PDF document first and then click on it.