

# NEW HOLLAND

## Repair Manual - TM Series Tractors

---

### CONTENTS - VOLUME 1

<b>GENERAL</b>	<b>SECTION 00</b>
General Instructions and Health and Safety	Chapter 1

<b>ENGINE</b>	<b>SECTION 10</b>
Separating and Removing The Engine	Chapter 1

Section	Description	Page
	Torques .....	2
	Special Tools .....	3
10 100	Separating Front Axle and Front Support from Engine .....	4
	Separating Engine and Front Support from Transmission .....	14
10 100	Engine Removal .....	21

<b>7.5L CNH Engine</b>	<b>Chapter 2</b>
------------------------	------------------

Section	Description	Page
10 000	Specifications .....	2
	Greases and Sealants .....	8
	Tightening Torques .....	10
	Special Tools .....	12
	Fault Finding .....	13
	Description and Operation .....	17
10 001	Engine Overhaul-Introduction .....	24
	Injection Pump Timing Check .....	25
10 100	Engine Disassembly and Overhaul:-	
10 101	Cylinder Head, Valves and Related Parts .....	28
10 101	Hydraulic Tappets-Adjustment .....	38
10 106	Front Cover and Timing Gears .....	40
10 102	Oil Pan .....	44
10 103	Flywheel .....	45
10 102	Rear Cover Plate .....	46
10 102	Oil Pump .....	47

Contents Continued:

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 102	Oil Pressure Relief Valve .....	49
10 106	Camshaft, Tappets and Camshaft Bearings .....	50
10 105	Pistons and Cylinder Block .....	53
10 103	Crankshaft .....	62
10 003	Crankshaft Front Seal Installation .....	66
10 001	Engine compression test .....	67
10200	<b>Cooling System</b>	
	Description of Operation .....	68
	Troubleshooting .....	70
	Specifications .....	71
	Overhaul .....	72

**Fuel System**

**Chapter 3**

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 200	Specifications .....	2
	Torques .....	2
	Special Tools .....	3
	Description and Operation .....	4
	Bosch VE Type Mechanically Controlled Fuel Injection System - Removal .....	8
	Bosch VE Type Pump Timing and Installation .....	9
	Bosch VP Electronically Controlled Fuel Injection System - Removal .....	13
	Bosch VP Electronically Controlled Fuel Injection System - Timing Check .....	14
	Injection System Bleeding .....	17
	Injection System Testing and Overhaul .....	18
10 210	Electric Lift Pump - Removal .....	23
	Electric Lift Pump - Testing .....	23
10 250	Turbocharger - Removal .....	24
	Turbocharger - Dissassembly .....	25
	Turbocharger - Inspection - Reassembly- Installation .....	25
10 202	Air Cleaner - Removal - Overhaul .....	28
10 216	Main Fuel Tank - Removal and Installation .....	31
	Auxiliary Fuel Tank - Removal and Installation .....	32
	Crankcase Ventilation .....	32
10 220	Foot Throttle Cable - Replacement and Adjustment .....	33
	Hand Throttle Cable - Replacement and Adjustment .....	33

**CLUTCHES**

**SECTION 18**

**Clutches**

**Chapter 1**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>18 000</b>	Specifications .....	1
	Tightening Torques .....	2
	Sectional Views .....	3
	Special Tools .....	4
	Description and Operation .....	4
	Troubleshooting .....	4
	<b>18 110</b>	Clutch Removal-Installation .....
<b>18 104</b>	Hydraulic Control Assembly Removal-Installation .....	8
	Hydraulic Control Assembly Disassembly-Reassembly .....	10

**TRANSMISSION SYSTEM**

**SECTION 21**

**Semi-Powershift Transmission (Range Command)**

**Chapter 1**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>21 000</b>	Specifications .....	1
	Tightening Torques .....	3
	Special Tools .....	5
	Sectional Views .....	9
	Description and Operation .....	12
	Pressure Testing .....	20
	Calibration .....	24
	Fault Finding .....	see Section 55
<b>21 111</b>	Removal - Installation - Overhaul .....	27

**Power Command 30 and 40 kph Transmission, 120 - 155 Models  
(Full Powershift)**

**Chapter 2**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>21 000</b>	Specifications .....	2
	Tightening Torques .....	5
	Special Tools .....	10
	Transmission Cross Section .....	13
	Description and Operation and Power Flows .....	16
	Clutch Calibrations .....	34
	Pressure Testing .....	39
	Error Codes and Fault Finding .....	42
	Limp Home Tool .....	46
	<b>21 113</b>	Transmission Removal and Installation .....
<b>21 155</b>	Transmission Overhaul - Disassembly .....	53
<b>21 155</b>	Transmission Overhaul - Reassembly .....	78

Contents Continued:

### Power Command Transmission, 175 - 190 Models (Full Powershift)

### Chapter 3

Section	Description	Page
21 000	Specifications .....	2
	Tightening Torques .....	5
	Special Tools .....	7
	Description and Operation .....	10
	Power Flows .....	18
	Input Sensors and Output Devices .....	24
	Controls .....	27
	Clutch Calibration .....	40
	Pressure Testing .....	44
	Error Codes and Fault Finding .....	47
	Limp Home .....	51
21 113	Transmission Housing - Removal and Installation .....	52
21 155	Transmission Disassembly .....	59
21 155	Oil Manifold Bushes, Removal and Installation .....	72
21 155	Transmission Upper Speed Shaft End Float Adjustment .....	73
21 155	Clutch Overhaul .....	74
21 155	Transmission Rear Housing - Disassembly .....	86
21 155	Transmission Reassembly .....	88
21 155	Output Shaft End Float Adjustment .....	98
21 155	Medium Shaft End Float Adjustment .....	97

### Dual Command Transmission (HI-LO)

### Chapter 4

Section	Description	Page
21 000	Specifications .....	1
	Tightening Torques .....	4
	Special Tools .....	6
	Sectional Views .....	10
	Description and Operation .....	12
	Clutch and Synchroniser Calibration .....	16
	Pressure Testing .....	19
	Error Codes and fault Finding .....	22
	Limp Home .....	28
21 112	Transmission Removal and Installation .....	29
	Transmission Overhaul .....	32
	Shuttle Gear Bearing Adjustment .....	46
	Range Input and Output Shaft Bearing Adjustment .....	48
21 134	HI LO Transmission Valve - Overhaul .....	51
21 134	HI LO Transmission Control Assembly .....	54

**Shuttle Command (Mechanical Transmission)**

**Chapter 5**

<b>Section</b>	<b>Description</b>	<b>Page</b>
21 000	Specifications .....	2
	Tightening Torques .....	4
	Special Tools .....	6
	Sectional Views .....	10
	Description and Operation .....	14
	Troubleshooting .....	14
21 114	Mechanical Transmission Housing Removal - Installation .....	15
21 114	Mechanical Transmission Housing Removal - Overhaul .....	18
21 114	Mechanical Transmission Housing Adjustments .....	31
21 140	Mechanical Transmission Housing Removal - Installation 5th Speed Gear .....	35
21 130	Speed and Range Control Rail Assembly Removal - Installation .....	40
21 160	Creeper Gears Removal - Installation .....	42
21 160	Creeper Gears External Control Lever adjustment .....	43

**DRIVE LINES (FWD ELECTRO-HYDRAULIC CLUTCH)**

**SECTION 23**

**Drive Lines-Tractors with Dual Command and Shuttle Command Transmissions**

**Chapter 1**

<b>Section</b>	<b>Description</b>	<b>Page</b>
23 000	Specifications .....	1
	Tightening Torques .....	2
	Special Tools .....	2
	Sectional Views .....	4
	Description and Operation .....	5
	Troubleshooting .....	5
	Hydraulic Flow Diagrams .....	6
23 101	Removal-Installation-Overhaul .....	8

**Drive Lines-Tractors with Range Command and Power Command ( Full Powershift) Transmissions**

**Chapter 2**

<b>Section</b>	<b>Description</b>	<b>Page</b>
23 000	Specifications .....	2
	Tightening Torques .....	2
	Special Tools .....	2
	Sectional Views .....	3
	Troubleshooting .....	4
	Description and Operation .....	5
	Hydraulic Flow Diagrams .....	6
23 101	Drive shaft Removal-Installation .....	8
23 202	Electro Hydraulic Clutch Removal-Installation-Overhaul .....	9

**MECHANICAL FRONT AXLE**

**SECTION 25**

**Mechanical Front Axle**

**Chapter 1**

<b>Section</b>	<b>Description</b>	<b>Page</b>	
<b>25 000</b>	Specifications .....	1	
	Tightening Torques .....	2	
	Special Tools .....	4	
	Sectional Views .....	7	
	Description and Operation .....	8	
	Troubleshooting .....	11	
	<b>25 100</b>	Standard Axle - Removal/Installation .....	12
Suspended Axle - Removal/Installation .....		15	
Supersteer Axle - Removal/Installation .....		20	
Hub Cassette Seal Replacement .....		24	
Front Axle Overhaul - All Options .....		28	
Dog Clutch Differential Lock - Disassembly/Reassembly .....		34	
<b>25 102</b>	Multi Wet Plate Differential Lock - Disassembly/Reassembly .....	36	
	Crown Wheel/Differential - Disassembly/Reassembly - All Options .....	38	
	Pinion Shaft Removal - All Options .....	39	
	Pinion Shaft Adjustment/Installation - All Options .....	42	
	Crown Wheel Adjustments - All Options .....	60	
	Swivel Pin & Potentiometer - Disassembly/Reassembly .....	53	
	Axle Reassembly - All Options .....	57	
	Checking the Alignment of Steering and Drive Wheels .....	58	
	<b>Refer to Brake Section Of Repair Manual For Overhaul Of Front Axle Brakes Where Fitted</b> .....		

**Terraglide (Front Axle Suspension)**

**Chapter 2**

<b>Section</b>	<b>Description</b>	<b>Page</b>
<b>25 000</b>	Specifications .....	2
	Tightening Torques .....	2
	Description and Operation .....	3
	System Schematics .....	6
	Suspended Front Axle Calibration Procedure .....	18
	Error Code Listing .....	20
<b>25 100</b>	Suspended Front Axle Assembly-Removal and Installation .....	22
<b>25 100</b>	Suspension Cylinder Removal and Overhaul .....	30
	Suspension Control Valve Assembly-Removal .....	34
	Suspension Control Valve Assembly-Overhaul .....	35

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**