

SRI 30
Tier 3
Alpha Series Skid Steer Loader
PIN NEM464869 and above

SRI 60
Tier 4B (final)
Alpha Series Skid Steer Loader
PIN NDM477801 and above

SERVICE MANUAL

Part number 47711585

1st edition English

May 2014

Copyright © 2014 CNH Industrial America LLC. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

SR130 TIER 3 [NEM464869 -]
SR160 TIER 4 [NDM477801 -]

Link Product / Engine

Product	Market Product	Engine
SR130 TIER 3 [NEM464869 -]	Europe	N844L
SR160 TIER 4 [NDM477801 -]	Europe	N844LT-F-45SL

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.220] Throttle linkage.....	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.5
Front axle system	25
[25.450] Chain drive system.....	25.1
Rear axle system	27
[27.650] Chain drive system	27.1
Hydrostatic drive	29
[29.202] Hydrostatic transmission	29.1
[29.200] Mechanical control	29.2
[29.218] Pump and motor components.....	29.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.128] Auxiliary hydraulic function control	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
[35.350] Safety and main relief valves	35.5
[35.359] Main control valve	35.6
[35.701] Front loader arm hydraulic system	35.7

[35.723] Front loader bucket hydraulic system	35.8
[35.724] Front loader hydraulic system control	35.9
[35.734] Tool quick coupler hydraulic system	35.10
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.011] Fuel tank system	55.3
[55.012] Engine cooling system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.019] Hydrostatic drive control system	55.7
[55.031] Parking brake electrical system	55.8
[55.036] Hydraulic system control	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.100] Harnesses and connectors.....	55.11
[55.201] Engine starting system	55.12
[55.302] Battery.....	55.13
[55.404] External lighting	55.14
[55.408] Warning indicators, alarms, and instruments	55.15
[55.415] Loader arm and bucket control system	55.16

[55.512] Cab controls.....	55.17
[55.525] Cab engine controls.....	55.18
[55.640] Electronic modules.....	55.19
[55.DTC] FAULT CODES.....	55.20
Front loader and bucket.....	82
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
Platform, cab, bodywork, and decals.....	90
[90.154] Cab doors and hatches	90.1

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**