

**SR210 / SR240 / SV280**  
**Tier 4B (final)**

**Alpha Series Skid Steer Loader**

*SR210 PIN NDM478026 and above; SR240 PIN NFM400756 and above;  
SV280 PIN NFM400877 and above*

**TR270 / TR310**  
**Tier 4B (final)**

**Alpha Series Compact Track Loader**

*TR270 PIN NDM462224 and above; TR310 PIN NFM402749 and above*

**SERVICE MANUAL**

**Part number 47851948**

English

May 2015

Replaces part number 47712041

**CASE**  
CONSTRUCTION

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
[10.400] Engine cooling system .....	10.4
[10.414] Fan and drive .....	10.5
[10.304] Engine lubrication system.....	10.6
Power coupling.....	19
[19.121] Pump-drive assembly .....	19.1
Front axle system .....	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system.....	27.1
Hydrostatic drive .....	29
[29.200] Mechanical control .....	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission .....	29.3
[29.134] Two-speed assembly.....	29.4
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3

[35.359] Main control valve .....	35.4
[35.525] Auxiliary hydraulic valves and lines .....	35.5
[35.600] High flow hydraulics .....	35.6
[35.724] Front loader hydraulic system control .....	35.7
[35.701] Front loader arm hydraulic system .....	35.8
[35.734] Tool quick coupler hydraulic system .....	35.9
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels .....	44.1
[44.520] Rear wheels .....	44.2
<b>Tracks and track suspension .....</b>	<b>48</b>
[48.130] Track frame and driving wheels .....	48.1
[48.100] Tracks .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning .....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.019] Hydrostatic drive control system .....	55.5
[55.036] Hydraulic system control .....	55.6
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.7
[55.100] Harnesses and connectors .....	55.8

[55.202] Cold start aid .....	55.9
[55.302] Battery.....	55.10
[55.408] Warning indicators, alarms, and instruments .....	55.11
[55.512] Cab controls.....	55.12
[55.518] Wiper and washer system.....	55.13
[55.640] Electronic modules .....	55.14
[55.DTC] FAULT CODES.....	55.15
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.154] Cab doors and hatches .....	90.2

**Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING**



**NOTE:**

**If there is no response to click on the link above, please download the PDF document first and then click on it.**