

**Make sure to wear all necessary protective equipment.**

**Follow the recommended procedure and use all recommended tooling to release the spring force.**

---


---

### NOTICE

**Ensure that the valve spring is compressed squarely or damage to the valve stem may occur.**

---

---

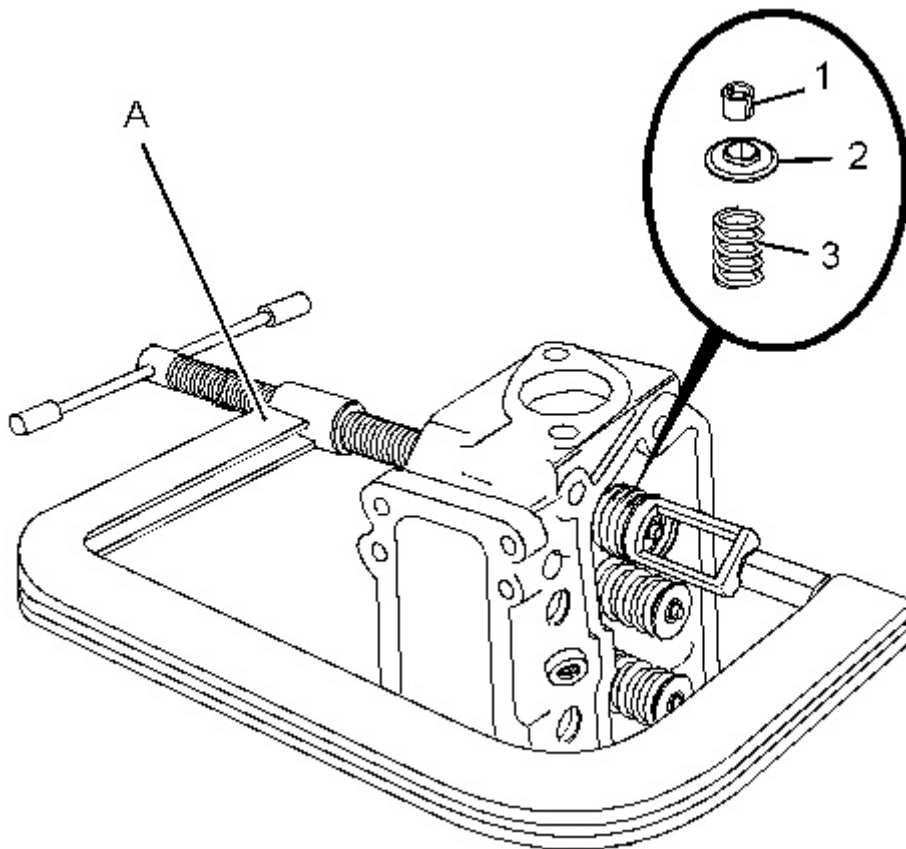

---

Illustration 1  
Typical example

g01333469

---

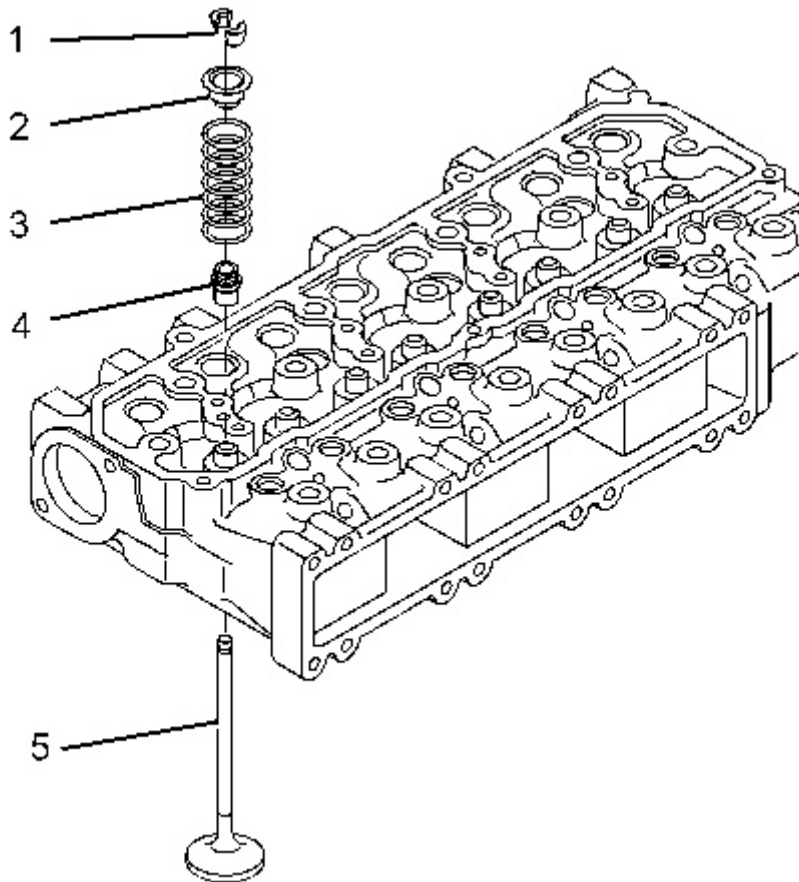


Illustration 2  
Typical example

g01333471

3. Use Tooling (A) to compress the appropriate valve spring (3). Remove valve keepers (1).

**Note:** Do not compress the valve spring so that valve spring retainer (2) touches valve stem seal (4).

4. Remove Tooling (A).

5. Remove valve spring retainer (2). Remove valve spring (3).

6. Remove valve (5).

7. Use Tooling (B) to remove valve stem seal (4).

8. Repeat Steps 3 through 7 to remove the remaining inlet and exhaust valves.

### Installation Procedure

Table 2

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-3527	Valve Spring Compressor	1

C	4C-6373	Seal Installer	1
	4C-6366	Valve Guide Driver	1

1. Clean all components of the cylinder head assembly. Ensure that all ports, all coolant passages, and all lubrication passages in the cylinder head are free from debris. Follow Steps 1.a through 1.e to inspect the components of the cylinder head assembly. Replace any components that are worn or damaged.
  - a. Inspect the cylinder head for wear and for damage. Refer to Systems Operation, Testing and Adjusting, "Cylinder Head Inspect".
  - b. Inspect the valve seats for wear and for damage. Refer to Specifications, "Cylinder Head Valves" for further information.
  - c. Inspect the valve guides for wear and for damage. Refer to Specifications, "Cylinder Head Valves" for further information.
  - d. Inspect the valves for wear and for damage. Refer to Specifications, "Cylinder Head Valves".
  - e. Inspect the valve springs for the correct length. Refer to Specifications, "Cylinder Head Valves".

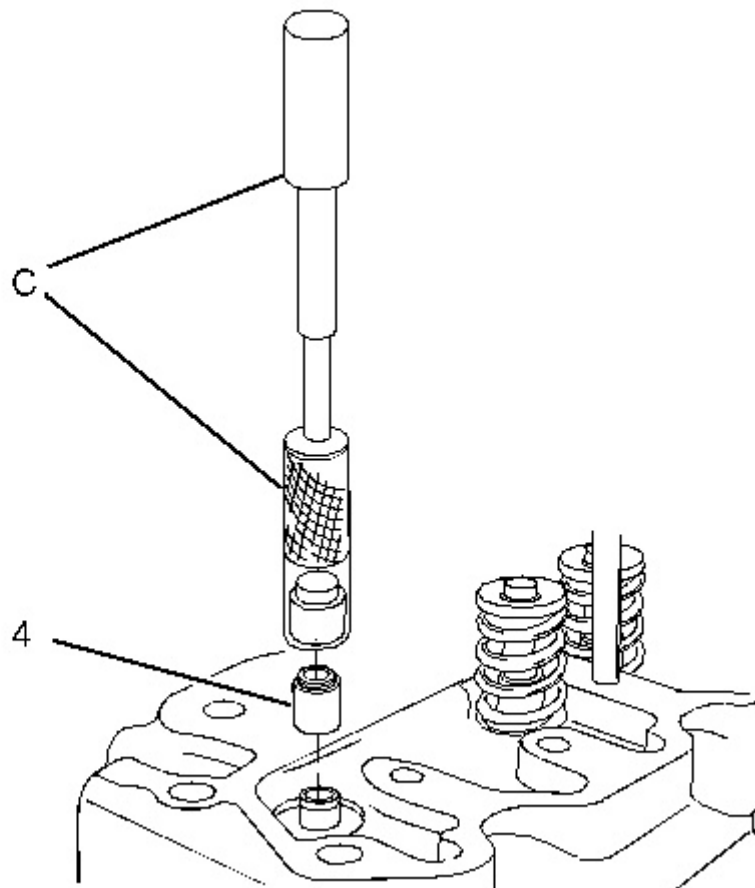


Illustration 3  
Typical example

g01333472

2. Use Tooling (C) to install new valve stem seals (4) onto each of the valve guides.

---

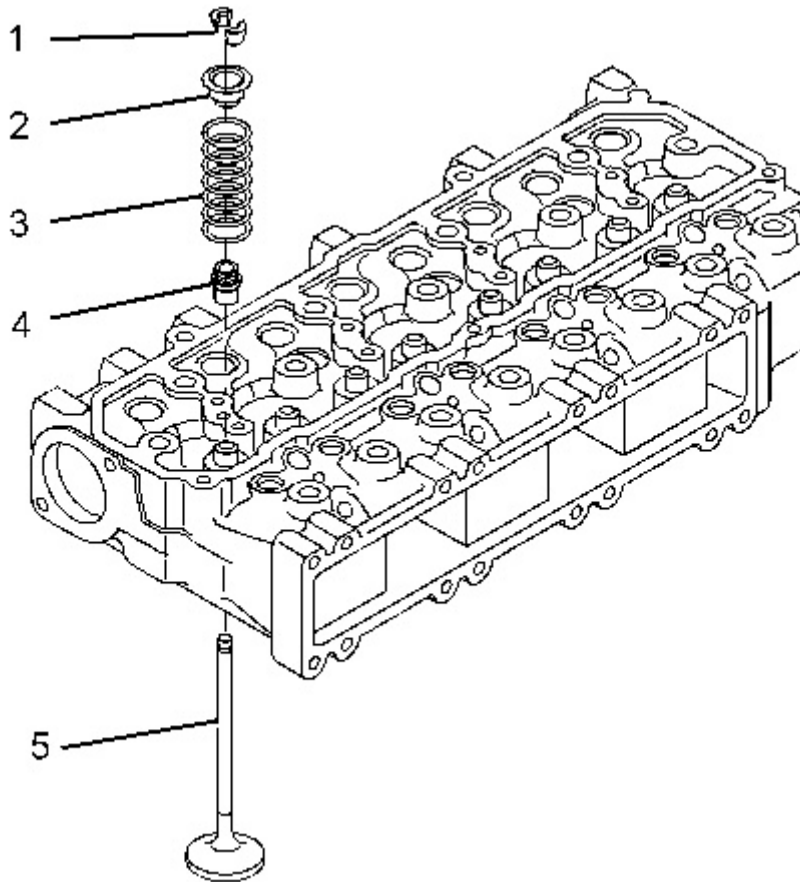


Illustration 4

g01333471

Typical example

---

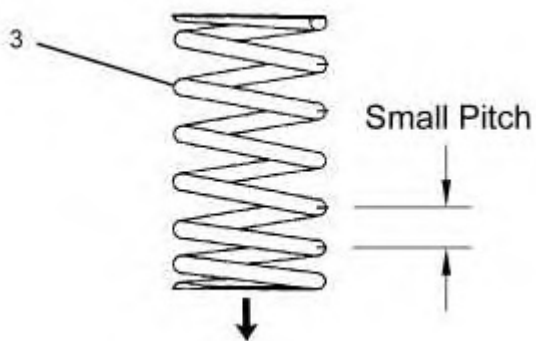


Illustration 5

g02891838

3. Lubricate the stem of valve (5) with clean engine oil. Install valve (5) in the appropriate position in the cylinder head. Check the depth of the valve below the face of the cylinder head. Refer to Systems Operation, Testing and Adjusting, "Valve Depth - Inspect" for more information.

4. Install valve spring (3) to the cylinder head. Orientate valve spring (3) with the small pitch downward, as indicated. Position valve spring retainer (2) onto valve spring (3).

**! WARNING**

**Personal injury can result from being struck by parts propelled by a released spring force.**

**Make sure to wear all necessary protective equipment.**

**Follow the recommended procedure and use all recommended tooling to release the spring force.**

---


---

**NOTICE**

**Ensure that the valve spring is compressed squarely or damage to the valve stem may occur.**

---

---

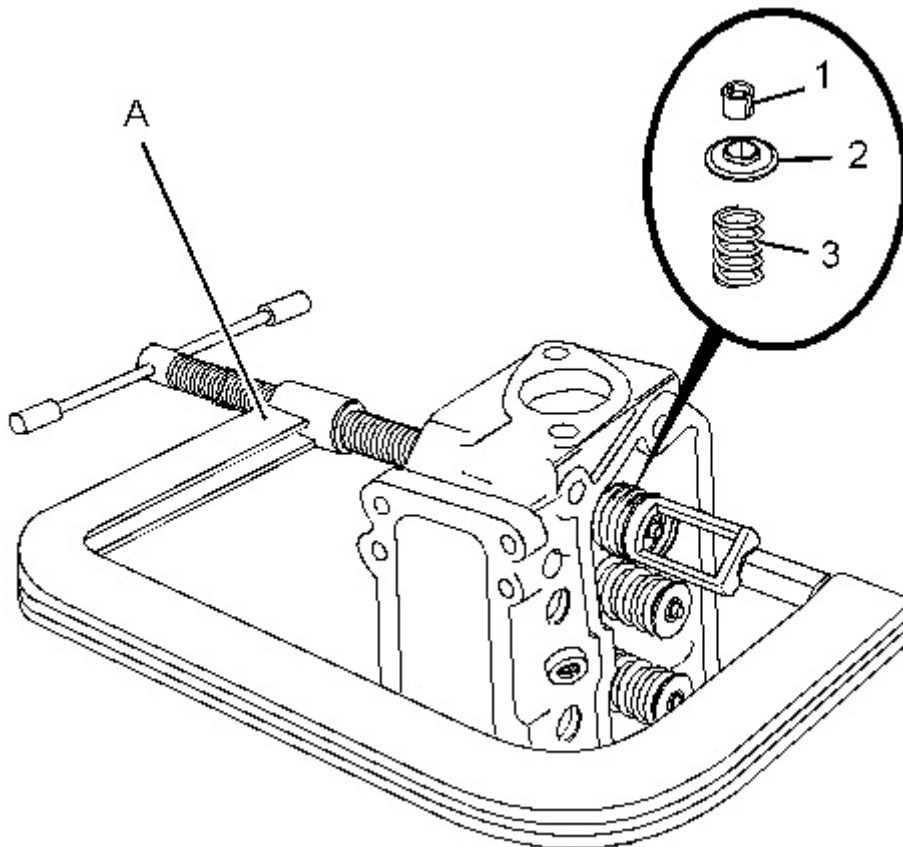

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**