



**NEW HOLLAND**



# **TRACTOR REPAIR MANUAL**

## **170–190–210–240 hp TRACTORS**

# CONTENTS

## SECTION 10 – ENGINES

### CHAPTER 1 – ENGINE AND LUBRICATION SYSTEM

SECTION	DESCRIPTION	PAGE
10 000	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	14
	DESCRIPTION OF OPERATION .....	15
	TROUBLESHOOTING .....	24
	OVERHAUL	
10 101	CYLINDER HEAD .....	29
10 106	ENGINE TIMING GEARS .....	41
10 102	OIL PAN .....	43
10 105	PISTONS AND CONNECTING RODS .....	44
10 001	CYLINDER BLOCK .....	48
10 103	CRANKSHAFT BEARINGS AND FLYWHEEL .....	54
10 102	LUBRICATION OIL PUMP .....	58
10 106	CAMSHAFT .....	65
10 106	ENGINE TIMING .....	67
10	COMPRESSION TESTING .....	68

### CHAPTER 2 – COOLING SYSTEM

SECTION	DESCRIPTION	PAGE
10 400	SPECIFICATIONS .....	2
	DESCRIPTION OF OPERATION .....	3
	TROUBLESHOOTING .....	5
	OVERHAUL	
10 406	RADIATOR .....	6
10 402	THERMOSTAT .....	8
10 414	SENDER .....	9
10 414	FAN BLADES .....	9
10 414	VISCOUS CLUTCH .....	10
10 414	BELT TENSIONER .....	10
10 414	IDLER PULLEY .....	11
10 402	WATER PUMP .....	13

### CHAPTER 3 – INDUCTION SYSTEM

SECTION	DESCRIPTION	PAGE
10 200	SPECIFICATIONS .....	2
	DESCRIPTION OF OPERATION	
	AIR CLEANER .....	3
	TURBO CHARGER .....	5
	INTERCOOLER .....	8
	TROUBLESHOOTING .....	9
	INTERCOOLER LEAK TEST .....	11
	OVERHAUL	
10 202	AIR CLEANER .....	12
10 250	TURBO CHARGER .....	14
10 250	INTERCOOLER .....	21

### CHAPTER 4 – FUEL SYSTEM

SECTION	DESCRIPTION	PAGE
10 000	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	3
	DESCRIPTION AND OPERATION .....	4
10 200	TESTING AND DIAGNOSIS	
	LOW PRESSURE SYSTEM .....	16
	HIGH PRESSURE FUEL SYSTEM .....	22
	INJECTION TIMING CHECK .....	22
	FUEL INJECTORS .....	25
	FUEL SHUT OFF .....	30
10 220	ADJUSTMENTS .....	32
	REMOVAL AND INSTALLATION	
10 210	FUEL LIFT PUMP .....	35
10 223	FUEL SHUT OFF SOLENOID .....	36
10 210	FUEL INJECTION PUMP .....	37
10 218	FUEL LINES .....	44
10 206	FUEL FILTER .....	48
10 218	FUEL INJECTION .....	50

## SECTION 21 – TRANSMISSION

### CHAPTER 1 – OPERATION AND OVERVIEW

SECTION	DESCRIPTION	PAGE
21 000	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	4
	TROUBLESHOOTING AND DIAGNOSIS .....	33

### CHAPTER 2 – SEPARATING THE TRANSMISSION FROM THE ENGINE AND FRONT AXLE

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	1
	SPECIAL TOOLS .....	1
	DISASSEMBLY .....	2

### CHAPTER 3 – SEPARATING THE TRANSMISSION FROM THE REAR AXLE

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS .....	1
	SPECIAL TOOLS .....	2
	DESCRIPTION OF OPERATION .....	2
	DISASSEMBLY .....	3

## CHAPTER 4 – MECHANICAL SYSTEM (16X9 AND 18X9 TRANSMISSION OVERHAUL)

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	4
	DESCRIPTION OF OPERATION .....	4
	TROUBLESHOOTING AND DIAGNOSIS .....	7
	OVERHAUL	
	DISASSEMBLY AND REPAIR .....	8
	REAR HOUSING AND DIRECTIONAL CLUTCH REMOVAL .....	9
	FRONT HOUSING AND SPEED CLUTCH REMOVAL .....	13
	SPEED CLUTCH DISASSEMBLY .....	17
	DIRECTIONAL CLUTCH DISASSEMBLY .....	24
	SPEED/DIRECTIONAL CLUTCH REASSEMBLY .....	27
	INPUT GEAR AND OIL SEAL REPLACEMENT .....	30
	CLUSTER GEARS REPAIR .....	31
	FRONT AND REAR HOUSING REPAIR .....	31
	TORQUE LIMITER REPAIR .....	33
	TRANSMISSION REASSEMBLY .....	34
	TRANSMISSION SHIMMING .....	37
	CREEPER GEAR .....	40
	TRANSMISSION INSTALLATION .....	44

## CHAPTER 5 – HYDRAULIC SYSTEM (18x9 TRANSMISSION)

SECTION	DESCRIPTION	PAGE
21 136	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	3
	DESCRIPTION OF OPERATION .....	4
	TROUBLESHOOTING AND DIAGNOSIS .....	10
	ADJUSTMENTS AND PRESSURE TESTING .....	11
	TRANSMISSION PROGRAMMING .....	17
	TRANSMISSION CALIBRATION .....	21
21 136	OVERHAUL .....	27
	REMOVAL .....	27
	DISASSEMBLY .....	29
	SPEED/DIRECTIONAL VALVES .....	30
	MODULATOR VALVE .....	31
	REGULATOR VALVE .....	33
	LUBRICATION RELIEF VALVE .....	35
	INSPECTION .....	36
	REASSEMBLY .....	36
	INSTALLATION .....	37

**CHAPTER 6 – ELECTRICAL SYSTEM**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
21 136	SPECIFICATIONS .....	2
	DESCRIPTION OF OPERATION .....	3
	TROUBLESHOOTING AND FAULT CODES .....	8
	FAULT CODES .....	9
	TRANSMISSION SOLENOID AND PRESSURE TESTING	10
21 136	DISASSEMBLY AND REPAIR	
	CONTROL VALVE SOLENOIDS .....	11
	SPEED SENSORS .....	12
	CHASSIS CONTROL MODULE (CCM) .....	13
	INCHING PEDAL SWITCHES .....	14
	TRANSMISSION SHIFT CONTROL .....	16
	LIMP HOME HARNESS AND PROCEDURE .....	24

**SECTION 23 – DRIVE LINES**

**CHAPTER 1 – FRONT WHEEL DRIVE MECHANICAL CONTROL  
(FOUR WHEEL DRIVE CLUTCH)**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
23 202	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	2
	TROUBLESHOOTING .....	6
	OVERHAUL .....	7
	PRESSURE TESTING .....	22

## SECTION 25 – MECHANICAL DRIVE

### CHAPTER 1 – LIVE FRONT AXLE (FOUR WHEEL DRIVE AXLE)

SECTION	DESCRIPTION	PAGE
25 000	SPECIFICATIONS .....	2
25 000	SPECIAL TOOLS .....	7
25 000	DESCRIPTION OF OPERATION .....	9
25 000	TROUBLESHOOTING .....	18
25 000	LUBRICATION AND MAINTENANCE .....	19
41 106	STEERING ADJUSTMENTS .....	23
25 100	OVERHAUL .....	25
25 100	FRONT AXLE REMOVAL .....	26
41 216	STEERING CYLINDERS .....	29
25 108	PLANETARY REDUCTION .....	32
25 106	HUB .....	38
25 108	SWIVEL HOUSING AND SWIVEL BEARING .....	41
25 108	DRIVE SHAFT .....	45
25 102	DIFFERENTIAL .....	50

### CHAPTER 2 – SUPERSTEER™ LINKAGE

SECTION	DESCRIPTION	PAGE
25 100	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	2
	ADJUSTMENT .....	5
	OVERHAUL .....	6

## SECTION 27 – REAR MECHANICAL DRIVE

### CHAPTER 1 – REAR AXLE ASSEMBLY

SECTION	DESCRIPTION	PAGE
27 000	SPECIFICATIONS .....	2
27 000	SPECIAL TOOLS .....	4
27 000	AXLE ADJUSTMENT SUMMARY .....	10
27 000	DESCRIPTION OF OPERATION .....	12
27 000	TROUBLE SHOOTING .....	21
	OVERHAUL	
27 100	AXLE ASSEMBLY . – REMOVE .....	29
	INSTALLATION .....	37
27 120	AXLE HOUSING – 170 HP MODEL .....	40
	DISASSEMBLY .....	41
	RE-ASSEMBLY .....	47
	AXLE SHAFT BEARING PRELOAD ... ..	50
27 120	AXLE HOUSING – 190 – 210 – 240 HP MODELS .....	55
	DISASSEMBLY .....	56
	RE-ASSEMBLY .....	62
	AXLE SHAFT BEARING PRELOAD ADJUSTMENT .....	65
27 120	PLANETARY REDUCTION GEAR .....	71
	— DISASSEMBLY .....	73
	RE-ASSEMBLY .....	75
	AXLE SHAFT SEAL REPLACEMENT .....	77
	TOP COVER REMOVAL AND INSTALLATION .....	79
27 106	DIFFERENTIAL ASSEMBLY .....	81
	DISASSEMBLY .....	82
	REASSEMBLY .....	91
	DIFFERENTIAL BEARING PRELOAD ADJUSTMENTS ...	97
	RING GEAR TO CHAIN WHEEL BACKLASH ADJUSTMENTS .....	102
27 106	PINION ASSEMBLY .....	107
	DISASSEMBLY .....	108
	REASSEMBLY .....	115
	PINION MESH AND PRELOAD ADJUSTMENTS .....	116
27 110	SOLENOID CHECKS .....	125
	PRESSURE TESTING .....	128



## SECTION 31 – POWER TAKE-OFF SYSTEM

### CHAPTER 1 – MECHANICAL SYSTEM

SECTION	DESCRIPTION	PAGE
31 100	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	3
	DESCRIPTION OF OPERATION .....	4
	TROUBLESHOOTING .....	9
	OVERHAUL .....	10
31 114	PTO REMOVAL AND INSTALLATION .....	10
	UPPER PTO INPUT SHAFT .....	16
	PTO OUTPUT SHAFT AND GEARS (170 HP) .....	20
	PTO OUTPUT SHAFT AND GEARS (190-240 HP) .....	31
	PTO CLUTCH PACK AND CONTROL VALVE .....	39

### CHAPTER 2 – ELECTRO-HYDRAULIC SYSTEM

SECTION	DESCRIPTION	PAGE
31 100	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	3
	DESCRIPTION OF OPERATION .....	4
	OIL FLOWS .....	11
	ELECTRICAL CIRCUIT .....	14
	TROUBLESHOOTING .....	22
	ADJUSTMENTS .....	33
31 114	OVERHAUL .....	34
	PTO SOLENOID .....	34
	PTO CONTROL VALVE .....	37
	PTO SYSTEM PRESSURE TESTING .....	43
	PILOT CIRCUIT .....	44
	CLUTCH APPLY CIRCUIT .....	45
	LUBRICATION CIRCUIT .....	46

## SECTION 33 – BRAKES

### CHAPTER 1 – POWER BRAKES

SECTION	DESCRIPTION	PAGE
33 202	SPECIFICATIONS .....	2
	DESCRIPTION OF OPERATION .....	3
	TROUBLESHOOTING .....	16
	ADJUSTMENTS .....	19
	POWER BRAKE VALVE – OVERHAUL .....	23
	REAR AXLE BRAKE OVERHAUL .....	36

### CHAPTER 2 – PARKING BRAKES

SECTION	DESCRIPTION	PAGE
33 110	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	2
	TROUBLESHOOTING .....	2
	ADJUSTMENTS .....	3
	OVERHAUL .....	4

## SECTION 35 – HYDRAULIC SYSTEM

### CHAPTER 1 – SYSTEM OVERVIEW

SECTION	DESCRIPTION	PAGE
35 000	DESCRIPTION OF OPERATION	
	INTRODUCTION .....	2
	HYDRAULIC PUMPS .....	17
	PRIORITY VALVE .....	35
	REMOTE CONTROL VALVES .....	39
	HYDRAULIC (EDC) LIFT SYSTEM .....	65
	TRAILER BRAKING SYSTEM .....	91
	TROUBLE SHOOTING	
	PRELIMINARY CHECKS .....	103
	TANDEM GEAR PUMP .....	104
	AXIAL PISTON PUMP .....	105
	PRIORITY VALVE .....	107
	REMOTE CONTROL VALVES .....	108
	HYDRAULIC (EDC) LIFT .....	111

## CHAPTER 2 – LOW-PRESSURE SYSTEM

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS .....	2
35 260	REMOVAL, DISASSEMBLY AND REASSEMBLY	
27 170	HYDRAULIC PUMP INLET SCREEN .....	3
27 170	CHARGE PRESSURE REGULATOR VALVE .....	3
21 102	FILTERS .....	5
21 102	FILTER HEAD .....	6
21 136	COOLER BYPASS VALVE .....	7
10 408	HYDRAULIC OIL COOLER .....	8
33 202	ACCUMULATOR .....	12
27 170	HYDRAULIC PUMP DRIVEN GEAR CASE .....	13

## CHAPTER 3 – TANDEM GEAR PUMP

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	2
35 105	OVERHAUL	
	REMOVAL .....	3
	DISASSEMBLY .....	4
	INSPECTION OF PARTS .....	9
	REASSEMBLY .....	12
	BENCH PERFORMANCE TESTING .....	19
	INSTALLATION .....	20
	PRESSURE AND FLOW TESTING – SEE CHAPTER 9	

## CHAPTER 4 – AXIAL PISTON PUMP

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	2
35 106	OVERHAUL .....	3
	REMOVAL .....	4
	HAND TOOLS REQUIRED .....	5
	DISASSEMBLY .....	5
	INPUT SHAFT SEAL REPLACEMENT .....	6
	SEAL INSTALLATION .....	7
	COMPENSATOR VALVE DISASSEMBLY .....	8
	MAIN PUMP DISASSEMBLY .....	2
	SWASH PLATE REMOVAL .....	17
	INPUT SHAFT .....	20
	REASSEMBLY .....	22
	ROTATING GROUP ASSEMBLY .....	26
	FLOW AND PRESSURE COMPENSATOR VALVES .....	30
	PUMP INSTALLATION .....	32
	PRESSURE AND FLOW TESTING – SEE CHAPTER 9	

## CHAPTER 5 – PRIORITY VALVE

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS .....	1
41 200	REMOVAL .....	2
	DISASSEMBLY .....	3
	REASSEMBLY .....	4

## CHAPTER 6 – REMOTE CONTROL VALVES

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS .....	2
	SPECIAL TOOLS .....	2
	REMOVAL AND INSTALLATION .....	3
35 204	SECTION OVERHAUL .....	14
35 204	POWER-BEYOND APPLICATION .....	25

## CHAPTER 7 – HYDRAULIC LIFT SYSTEM (ELECTRONIC DRAFT CONTROL)

SECTION	DESCRIPTION	PAGE
35 000	SPECIFICATIONS .....	2
	OVERHAUL	
35 120	3 POINT LINKAGE .....	3
35 134	CROSS SHAFT .....	5
35 116	LIFT CYLINDERS .....	9
35 204	HYDRAULIC VALVES .....	14
	ELECTRICAL AND ELECTRONIC SYSTEM .....	
55 440	FAULT CODES .....	23
	COMPONENT REPLACEMENT .....	24
	EDC CALIBRATION PROCEDURES .....	28

## CHAPTER 8 – TRAILER BRAKE VALVE

SECTION	DESCRIPTION	PAGE
35.000	SPECIFICATIONS AND SPECIAL TOOLS .....	1
33.220	TRAILER BRAKE VALVE OVERHAUL	
	BRAKE VALVE REMOVAL .....	2
	BRAKE VALVE DISASSEMBLY AND INSPECTION .....	3
	BRAKE VALVE REASSEMBLY .....	6
	BLEEDING THE BRAKING SYSTEM .....	7
	PRESSURE TESTING .....	8

## CHAPTER 9 – PRESSURE AND FLOW TESTING

SECTION	DESCRIPTION	PAGE
35 000	DESCRIPTION OF OPERATION .....	2
	SPECIFICATIONS .....	3
	SPECIAL TOOLS .....	5
35 105	LOW PRESSURE SYSTEM TESTING	
	CHARGE PRESSURE .....	6
	CONTROL PRESSURE .....	7
	TANDEM GEAR PUMP FLOW .....	7
35 106	HIGH PRESSURE TESTING	
	LOW PRESSURE STANDBY .....	9
	HIGH PRESSURE STANDBY .....	10
	LEAD SENSE PRESSURE .....	11
	CASE DRAIN .....	12
	CCLS PUMP FLOW .....	13
	MEGAPUMP FLOW .....	14
	STEERING PRIORITY VALVE .....	17
35 204	REMOTE VALVE .....	19
	DETENT RELEASE .....	20
35 120	HYDRAULIC LIFT (EDC) .....	21

## SECTION 41 – STEERING

### CHAPTER 1 – HYDROSTATIC STEERING

SECTION	DESCRIPTION	PAGE
41 204	SPECIFICATIONS .....	2
	DESCRIPTION OF OPERATION .....	5
	TROUBLESHOOTING .....	14
	STEERING MOTOR OVERHAUL	
	MOTOR REMOVAL .....	19
	DISASSEMBLY .....	20
	INSPECTION .....	25
	RE-ASSEMBLY .....	26
	MOTOR INSTALLATION .....	33

## SECTION 44 – TWO WHEEL DRIVE AXLE AND WHEELS

### CHAPTER 1 – TWO WHEEL DRIVE FRONT AXLE

SECTION	DESCRIPTION	PAGE
44 101	SPECIFICATIONS .....	2
44 101	SPECIAL TOOLS .....	2
44 101	DESCRIPTION AND OPERATION .....	3
44 101	TROUBLE SHOOTING .....	4
44 106	ADJUSTMENTS .....	8
44 101	DISASSEMBLY AND REPAIR .....	15

### CHAPTER 2 – REAR WHEEL REMOVAL/REPLACEMENT

SECTION	DESCRIPTION	PAGE
44 520	SPECIFICATIONS .....	1
	SPECIAL TOOLS .....	1
	DESCRIPTION OF OPERATION .....	2
	DISASSEMBLY .....	2
	INSTALLATION .....	5

## SECTION 50 – AIR CONDITIONING

### CHAPTER 1 – CONTROL SYSTEMS

SECTION	DESCRIPTION	PAGE
50 200	INTRODUCTION .....	2
	SPECIFICATIONS .....	3
	DESCRIPTION OF OPERATION .....	6
	TROUBLESHOOTING AND SERVICING .....	28
	COMPONENT REMOVAL AND INSTALLATION .....	58

**SECTION 55 – ELECTRICAL SYSTEM**

**CHAPTER 1 – ELECTRONIC INSTRUMENT CLUSTER (EIC)**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
55 418	DESCRIPTION OF OPERATION .....	2
	SERVICE DIAGNOSTIC MODES .....	30
	MODE 1, OPERATOR CALIBRATIONS .....	31
	MODE 2, VIEW STORED FAULT CODES .....	40
	MODE 3, ALL MODULE INPUT PARAMETERS .....	43
	MODE 4, EIC OUTPUT DIAGNOSTICS .....	46
	MODE 5, RHC OUTPUT DIAGNOSTICS .....	47
	MODE 6, EDC OUTPUT DIAGNOSTICS .....	48
.....	MODE 7, ETC OUTPUT DIAGNOSTICS .....	49
	MODE 8, EIC FULL DISPLAY TEST .....	50
	MODE 9, HARDWARE/SOFTWARE REVISION LEVEL ..	51
	MODE 10, TRANSMISSION CALIBRATION REVIEW AND PROGRAMING .....	53
	MODE 11, 3PT HITCH AND EDC CALIBRATION .....	56
	MODE 12, TRACTOR FEATURES CONFIGURATION ....	58

**CHAPTER 2 – FAULT CODES AND DIAGNOSTICS**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
55-000	BASIC TROUBLESHOOTING AND DIAGNOSTICS .....	1
	FAULT CODES F001 TO F099, HYDRAULIC LIFT/EDC ...	9
	FAULT CODES F100 TO F199, RIGHT HAND CONTROLS .....	81
	FAULT CODES F200 TO F299, EIC MODULE .....	103
	FAULT CODES F300 TO F399, ETC TRANSMISSION CONTROL .....	126
	FAULT CODES F400 TO F499, ENGINE CONTROL ....	275

**CHAPTER 3 – STARTING SYSTEMS**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
55 201	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	2
	TROUBLESHOOTING AND DIAGNOSTIC .....	8
	OVERHAUL .....	11



## CHAPTER 4 – CHARGING SYSTEMS

SECTION	DESCRIPTION	PAGE
55 301	SPECIFICATIONS .....	1
	DESCRIPTION OF OPERATION .....	2
	TROUBLESHOOTING AND DIAGNOSTIC .....	4
	OVERHAUL .....	11

## CHAPTER 5 – CONTROLS, COMPONENTS, AND HARNESSSES

SECTION	DESCRIPTION	PAGE
55 404	SPECIFICATIONS .....	2
	DESCRIPTION OF OPERATION .....	4
	FRONT CONSOLE CONTROLS .....	5
	ROOF CONSOLE CONTROLS .....	10
	RIGHT HAND CONSOLE .....	12
	ELECTRONIC MODULES .....	12
	AUXILIARY POWER .....	14
	STARTER .....	16
	BATTERY .....	16
	ALTERNATOR .....	16
	DAM CONNECTOR .....	17
	MAIN FUSES .....	17
	DISTRIBUTION PANEL .....	18
	HARNESSES .....	20
	TROUBLE SHOOTING .....	21
	DISASSEMBLY AND REPAIR .....	23

## CHAPTER 6 – CIRCUIT DIAGRAMS AND WIRING DIAGRAMS

SECTION	DESCRIPTION	PAGE
55 100	<b>DESCRIPTION OF OPERATION</b>	
	HARNESS IDENTIFICATION .....	2
	ELECTRICAL CABLES .....	3
	SYMBOLS .....	4
	FUSES .....	5
	CONNECTORS .....	7
	<b>CIRCUIT DIAGRAMS</b>	
	BASIC (PERMANENT) LIVE CIRCUITS .....	10
	ACCESSORY 'ON' .....	13
	ENGINE STARTING .....	16
	LIGHTING .....	18
	WORK LAMPS .....	22
	HAZARD WARNING LIGHTS .....	24
	PTO OPERATION .....	26
	BRAKE LIGHTS .....	38
	DIFF LOCK OPERATION .....	30
	FRONT WHEEL DRIVER OPERATION .....	32
	AUTO SHUT OFF/AUTO SHUTDOWN .....	34
	ELECTRONIC DRAFT CONTROL .....	36
	AIR CONDITIONING .....	38
	TRANSMISSION SYSTEM .....	40
	<b>WIRING DIAGRAMS</b> .....	45

## SECTION 90 – BODY AND OPERATOR COMPARTMENT

### CHAPTER 1 – CAB

SECTION	DESCRIPTION	PAGE
90 000	DESCRIPTION OF CAB .....	1
	<b>COMPONENT REMOVAL</b>	
90 160	HEADLINER .....	2
90 160	CAB TRIM .....	5
90 124	SEAT .....	7
90 154	DOORS .....	7
90 156	REAR WINDOW .....	8
90 110	INSTRUMENT CLUSTER .....	9
41 204	STEERING COLUMN .....	9
35 204	RIGHT HAND CONSOLE .....	12

**CHAPTER 2 – ENGINE HOOD REMOVAL**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
90 100	SPECIFICATIONS .....	1
	DESCRIPTION AND OPERATION .....	1
	DISASSEMBLY .....	2
	HOOD .....	2
	HOOD AND UPPER ENGINE FRAME .....	3

**CHAPTER 3 – CAB REMOVAL**

<b>SECTION</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
90 150	SPECIFICATIONS .....	1
	SPECIAL TOOLS .....	1
	DESCRIPTION OF OPERATION .....	1
	REMOVAL .....	2
	INSTALLATION .....	8

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**