

# SERVICE MANUAL

**L218 / L220**

**Tier 4B (final)**

**200 Series Skid Steer Loader**

*L218 PIN NDM449275 and above; L220 PIN NDM456673 and above*

**Part number 47851949**

English

May 2015

*Replaces part number 47712047*



## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
L218 TIER 4B Final [NDM449275 - ]	North America	N4LDI-TA-45SL
L220 TIER 4B Final [NDM456673 - ]	North America	N4LDI-TA-50SL

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.400] Engine cooling system .....	10.2
[10.414] Fan and drive .....	10.3
Power coupling.....	19
[19.121] Pump-drive assembly .....	19.1
Front axle system .....	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system.....	27.1
Hydrostatic drive.....	29
[29.202] Hydrostatic transmission .....	29.1
[29.134] Two-speed assembly.....	29.2
[29.200] Mechanical control .....	29.3
[29.218] Pump and motor components.....	29.4
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.359] Main control valve .....	35.4
[35.525] Auxiliary hydraulic valves and lines .....	35.5
[35.600] High flow hydraulics.....	35.6
[35.701] Front loader arm hydraulic system .....	35.7

[35.724] Front loader hydraulic system control .....	35.8
[35.734] Tool quick coupler hydraulic system .....	35.9
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.200] Air conditioning .....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.012] Engine cooling system .....	55.3
[55.014] Engine intake and exhaust system.....	55.4
[55.019] Hydrostatic drive control system .....	55.5
[55.031] Parking brake electrical system .....	55.6
[55.036] Hydraulic system control .....	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.8
[55.100] Harnesses and connectors.....	55.9
[55.302] Battery.....	55.10
[55.408] Warning indicators, alarms, and instruments .....	55.11
[55.512] Cab controls.....	55.12
[55.640] Electronic modules.....	55.13
[55.DTC] FAULT CODES.....	55.14
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2

Platform, cab, bodywork, and decals .....	90
[90.150] Cab.....	90.1
[90.154] Cab doors and hatches .....	90.2

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**