

# SERVICE MANUAL

T4.80V  
T4.90V  
T4.100V  
T4.110V  
T4.80N  
T4.90N  
T4.100N  
T4.110N  
Tractor

*PIN ZGLJ04271 and above*

Part number 51523366

English  
August 2018





## **SERVICE MANUAL**

**T4.100N With cab [ZHLJ01382 - ], T4.100N Without cab [ZHLJ01816 - ],  
T4.100V With cab [ZHLJ00619 - ], T4.100V Without cab, T4.110N With  
cab [ZHLJ01217 - ], T4.110N Without cab [ZHLJ02312 - ], T4.110V With  
cab [ZHLJ01709 - ], T4.110V Without cab [ZHLJ01680 - ], T4.80N With  
cab [ZHLJ02071 - ], T4.80N Without cab [ZHLJ01960 - ], T4.80V With cab  
[ZGLJ04271 - ], T4.80V Without cab [ZHLJ02720 - ], T4.90N With cab  
[ZHLJ01597 - ], T4.90N Without cab [ZHLJ01779 - ], T4.90V With cab  
[ZHLJ00171 - ], T4.90V Without cab [ZHLJ03996 - ]**

## Link Product / Engine

Product	Market Product	Engine
T4.100N With cab [ZHLJ01382 - ]	Australia New Zealand	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Europe	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Asia Pacific	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Middle East Africa	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 - ]	Latin America	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Asia Pacific	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Australia New Zealand	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Latin America	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Europe	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 - ]	Middle East Africa	F5DFL413K*C001
T4.110N With cab [ZHLJ01217 - ]	Australia New Zealand	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Europe	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Asia Pacific	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Middle East Africa	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 - ]	Latin America	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Middle East Africa	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Australia New Zealand	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Europe	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Asia Pacific	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 - ]	Latin America	F5DFL413J*C002
T4.80N With cab [ZHLJ02071 - ]	Latin America	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Australia New Zealand	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Middle East Africa	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Europe	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 - ]	Asia Pacific	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Australia New Zealand	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Europe	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Asia Pacific	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Latin America	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 - ]	Middle East Africa	F5DFL413B*H001
T4.90N With cab [ZHLJ01597 - ]	Australia New Zealand	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 - ]	Europe	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 - ]	Middle East Africa	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 - ]	Latin America	F5DFL413L*C001

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.90N With cab [ZHLJ01597 - ]	Asia Pacific	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Australia New Zealand	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Asia Pacific	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Europe	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Middle East Africa	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 - ]	Latin America	F5DFL413L*C001
T4.100V With cab [ZHLJ00619 - ]	Australia New Zealand	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Latin America	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Asia Pacific	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Middle East Africa	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 - ]	Europe	F5DFL413K*C001
T4.100V Without cab	Australia New Zealand	F5DFL413K*C001
T4.100V Without cab	Asia Pacific	F5DFL413K*C001
T4.100V Without cab	Europe	F5DFL413K*C001
T4.100V Without cab	Middle East Africa	F5DFL413K*C001
T4.100V Without cab	Latin America	F5DFL413K*C001
T4.110V With cab [ZHLJ01709 - ]	Latin America	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Asia Pacific	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Australia New Zealand	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Middle East Africa	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 - ]	Europe	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Australia New Zealand	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Asia Pacific	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Latin America	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Middle East Africa	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 - ]	Europe	F5DFL413J*C002
T4.80V With cab [ZGLJ04271 - ]	Australia New Zealand	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Middle East Africa	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Asia Pacific	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Latin America	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 - ]	Europe	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Europe	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Latin America	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Asia Pacific	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Australia New Zealand	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 - ]	Middle East Africa	F5DFL413B*H001
T4.90V With cab [ZHLJ00171 - ]	Middle East Africa	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Latin America	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Australia New Zealand	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Europe	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 - ]	Asia Pacific	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Europe	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Latin America	F5DFL413L*C001

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.90V Without cab [ZHLJ03996 - ]	Asia Pacific	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Middle East Africa	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 - ]	Australia New Zealand	F5DFL413L*C001

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.114] Pump drives .....	10.2
[10.216] Fuel tanks .....	10.3
[10.206] Fuel filters .....	10.4
[10.202] Air cleaners and lines .....	10.5
[10.254] Intake and exhaust manifolds and muffler .....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls .....	21.6
[21.104] Power shuttle transmission hydraulic components .....	21.7
[21.154] Power shuttle transmission internal components .....	21.8
[21.160] Creeper .....	21.9

[21.162] Reverser .....	21.10
[21.168] Hi-Lo unit .....	21.11
[21.109] Transmission cooler and lines.....	21.12
[21.118] Transmission/Rear drive .....	21.13
[21.182] Differential.....	21.14
<b>Four-Wheel Drive (4WD) system .....</b>	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
[23.314] Drive shaft.....	23.3
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
[25.400] Non-powered front axle .....	25.5
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives.....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.142] Front Power Take-Off (PTO) control .....	31.2
[31.146] Front Power Take-Off (PTO) .....	31.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2

[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves .....	35.3
[35.100] Main lift system.....	35.4
[35.114] Three-point hitch control valve .....	35.5
[35.124] Three-point hitch hydraulic adjustment .....	35.6
[35.160] Front hitch controls and lines .....	35.7
[35.162] Front hitch cylinders and lines .....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.166] Front hitch linkage.....	37.3
[37.110] Rear three-point hitch .....	37.4
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3



[50.300] Cab pressurizing system.....	50.4
<b>Electrical systems .....</b>	<b>55</b>
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.011] Fuel tank system .....	55.7
[55.010] Fuel injection system.....	55.8
[55.014] Engine intake and exhaust system.....	55.9
[55.989] Exhaust Gas Recirculation (EGR) electrical system .....	55.10
[55.640] Electronic modules.....	55.11
[55.513] Cab transmission controls.....	55.12
[55.024] Transmission control system.....	55.13
[55.021] Transmission pressure sensors and switches .....	55.14
[55.541] Cab Front-Wheel Drive (FWD) controls.....	55.15
[55.040] Four-Wheel Drive (4WD) control system.....	55.16
[55.542] Cab axle controls.....	55.17
[55.522] Cab Power Take-Off (PTO) controls .....	55.18
[55.048] Rear Power Take-Off (PTO) control system .....	55.19
[55.049] Front Power Take-Off (PTO) control system .....	55.20
[55.031] Parking brake electrical system .....	55.21
[55.032] Trailer brake electrical system .....	55.22
[55.512] Cab controls.....	55.23
[55.035] Remote control valve electric control .....	55.24
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.25
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.26

[55.523] Cab hitch controls .....	55.27
[55.130] Rear three-point hitch electronic control system .....	55.28
[55.518] Wiper and washer system.....	55.29
[55.404] External lighting .....	55.30
[55.405] External lighting switches and relays .....	55.31
[55.514] Cab lighting .....	55.32
[55.408] Warning indicators, alarms, and instruments .....	55.33
[55.DTC] FAULT CODES.....	55.34
<b>Accessories .....</b>	<b>88</b>
[88.100] Accessories .....	88.1
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches .....	90.4
[90.110] Operator platform less cab .....	90.5
[90.118] Protections and footboards.....	90.6
[90.114] Operator protections .....	90.7
[90.120] Mechanically-adjusted operator seat.....	90.8
[90.124] Pneumatically-adjusted operator seat.....	90.9
[90.100] Engine hood and panels .....	90.10

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**