

# SERVICE MANUAL

**T4.85 / T4.95 / T4.105**  
Tractor

Part number 47531609

English  
April 2013



## SERVICE MANUAL



**T4.105, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]  
 , T4.105, less cab, with mechanical or power shuttle transmission  
 [ZxJY5xxxx] , T4.105, with cab, with hi-lo transmission [ZxJY5xxxx] , T4.105,  
 with cab, with mechanical or power shuttle transmission [ZxJY5xxxx] ,  
 T4.105, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]  
 , T4.85, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]  
 , T4.85, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]**



**, T4.85, with cab, with hi-lo transmission [ZxJY5xxxx] , T4.85, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx] , T4.85, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx] , T4.95, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx] , T4.95, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx] , T4.95, with cab, with hi-lo transmission [ZxJY5xxxx] , T4.95, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx] , T4.95, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.105, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	North America	F5DFL413L*A001
T4.105, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	Europe	F5DFL413L*A001
T4.105, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	International Region	F5DFL413L*A001
T4.105, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	Europe	F5DFL413L*A001
T4.105, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	International Region	F5DFL413L*A001
T4.105, with cab, with hi-lo transmission [ZxJY5xxxx]	Europe	F5DFL413L*A001
T4.105, with cab, with hi-lo transmission [ZxJY5xxxx]	International Region	F5DFL413L*A001
T4.85, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	North America	F5DFL413J*A001
T4.85, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	North America	F5DFL413J*A001
T4.85, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	International Region	F5DFL413J*A001

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.85, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	Europe	F5DFL413J*A001
T4.85, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	Europe	F5DFL413J*A001
T4.85, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	International Region	F5DFL413J*A001
T4.85, with cab, with hi-lo transmission [ZxJY5xxxx]	Europe	F5DFL413J*A001
T4.85, with cab, with hi-lo transmission [ZxJY5xxxx]	International Region	F5DFL413J*A001
T4.95, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	North America	F5DFL413K*A001
T4.95, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	North America	F5DFL413K*A001
T4.95, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	International Region	F5DFL413K*A001
T4.95, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	Europe	F5DFL413K*A001
T4.95, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	International Region	F5DFL413K*A001

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.95, with cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	Europe	F5DFL413K*A001
T4.95, with cab, with hi-lo transmission [ZxJY5xxxx]	Europe	F5DFL413K*A001
T4.95, with cab, with hi-lo transmission [ZxJY5xxxx]	International Region	F5DFL413K*A001
T4.105, less cab, with mechanical or power shuttle transmission [ZxJY5xxxx]	North America	F5DFL413L*A001

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
Clutch .....	18
[18.100] Clutch mechanical release control .....	18.1
[18.110] Clutch and components .....	18.2
[18.112] Slip clutch or flywheel damper .....	18.3
Transmission.....	21
[21.AAA] Transmission generic sub-group .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.110] Master clutch housing .....	21.5
[21.134] Power shuttle transmission external controls .....	21.6
[21.154] Power shuttle transmission internal components .....	21.7
[21.160] Creeper .....	21.8
[21.162] Reverser .....	21.9
[21.168] Hi-Lo unit.....	21.10
[21.118] Transmission/Rear drive .....	21.11
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

<b>Rear axle system</b> .....	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.120] Planetary and final drives .....	27.2
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.4
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control .....	33.3
[33.204] Front axle brake .....	33.4
<b>Hydraulic systems</b> .....	<b>35</b>
[35.104] Fixed displacement pump .....	35.1
[35.322] Regulated/Low pressure system .....	35.2
[35.204] Remote control valves .....	35.3
[35.100] Main lift system .....	35.4
[35.114] Three-point hitch control valve .....	35.5
[35.116] Three-point hitch cylinder .....	35.6
[35.701] Front loader arm hydraulic system .....	35.7
[35.723] Front loader bucket hydraulic system .....	35.8
<b>Hitches, drawbars, and implement couplings</b> .....	<b>37</b>
[37.108] Rear three-point hitch external controls .....	37.1
[37.110] Rear three-point hitch .....	37.2
[37.120] Rear three-point hitch linkage .....	37.3
[37.162] Front hitch .....	37.4
<b>Steering</b> .....	<b>41</b>



[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems.....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.640] Electronic modules.....	55.6
[55.DTC] FAULT CODES.....	55.7
<b>Front loader and bucket.....</b>	<b>82</b>
[82.AAA] Front loader and bucket generic sub-group .....	82.1
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.154] Cab doors and hatches .....	90.2
[90.110] Operator platform less cab .....	90.3
[90.100] Engine hood and panels .....	90.4
[90.116] Fenders and guards.....	90.5

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**