

# SERVICE MANUAL


## T5.95 / T5.105 / T5.115 Electro Command Tractor

Part number 47538922  
English  
May 2013





## SERVICE MANUAL

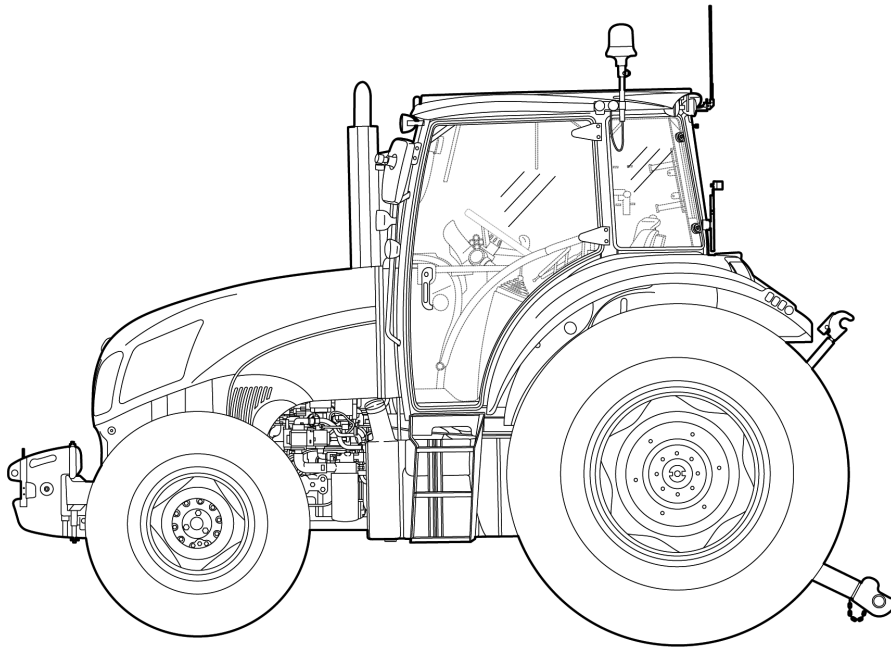

**T5.105 ElectroCommand**  
**T5.115 ElectroCommand**  
**T5.95 ElectroCommand**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T5.105 ElectroCommand	International Region	F5DFL413B*A006
T5.105 ElectroCommand	Europe	F5DFL413B*A006
T5.105 ElectroCommand	North America	F5DFL413B*A006
T5.115 ElectroCommand	Europe	F5DFL413A*A002
T5.115 ElectroCommand	International Region	F5DFL413A*A002
T5.115 ElectroCommand	North America	F5DFL413A*A002
T5.95 ElectroCommand	International Region	F5DFL413C*A003
T5.95 ElectroCommand	North America	F5DFL413C*A003
T5.95 ElectroCommand	Europe	F5DFL413C*A003

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
[10.414] Fan and drive .....	10.4
<b>Transmission</b> .....	<b>21</b>
[21.111] Semi-Powershift transmission .....	21.1
[21.133] Semi-Powershift transmission external controls .....	21.2
[21.152] Semi-Powershift transmission internal components .....	21.3
[21.118] Transmission/Rear drive .....	21.4
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives.....	27.4
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2

[31.116] Three-speed rear Power Take-Off (PTO) .....	31.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.322] Regulated/Low pressure system .....	35.3
[35.204] Remote control valves .....	35.4
[35.114] Three-point hitch control valve .....	35.5
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system .....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.640] Electronic modules .....	55.6
[55.408] Warning indicators, alarms, and instruments .....	55.7
[55.DTC] FAULT CODES.....	55.8
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>

[90.150] Cab.....	90.1
[90.100] Engine hood and panels .....	90.2

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**