

# SERVICE MANUAL

## **Boomer™ 3040 CVT / Boomer™ 3045 CVT / Boomer™ 3050 CVT Compact Tractor**

*PIN ZCMB11001 and above; PIN ZDMB11925 and above*

Part number 48017760

1<sup>st</sup> edition English

November 2016

*Replaces part number 47463786*





## **SERVICE MANUAL**

**Boomer™ 3040 CVT [ZCMB11001 - ], Boomer™ 3040 CVT [ZDMB11925 - ],  
Boomer™ 3045 CVT [ZCMB11001 - ], Boomer™ 3045 CVT [ZDMB11925 - ],  
Boomer™ 3050 CVT [ZCMB11001 - ], Boomer™ 3050 CVT [ZDMB11925 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Boomer™ 3040 CVT [ZCMB11001 - ]	Europe	N844
Boomer™ 3040 CVT [ZDMB11925 - ]	Europe	N844
Boomer™ 3045 CVT [ZCMB11001 - ]	Europe	N844L
Boomer™ 3045 CVT [ZDMB11925 - ]	Europe	N844L
Boomer™ 3050 CVT [ZCMB11001 - ]	Europe	N844L
Boomer™ 3050 CVT [ZDMB11925 - ]	Europe	N844L

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.102] Pan and covers .....	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears .....	10.6
[10.110] Balancer and damper .....	10.7
[10.114] Pump drives .....	10.8
[10.218] Fuel injection system.....	10.9
[10.254] Intake and exhaust manifolds and muffler .....	10.10
[10.304] Engine lubrication system.....	10.11
[10.400] Engine cooling system .....	10.12
[10.414] Fan and drive .....	10.13
<b>Transmission</b> .....	<b>21</b>
[21.504] Continuously Variable Transmission (CVT).....	21.1
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.101] Mechanical control .....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2

<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control .....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.120] Central Power Take-Off (PTO) .....	31.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.204] Remote control valves .....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump .....	41.2
[41.216] Cylinders .....	41.3
<b>Cab climate control</b> .....	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator .....	55.5
[55.302] Battery.....	55.6
[55.404] External lighting .....	55.7

[55.408] Warning indicators, alarms, and instruments .....	55.8
[55.518] Wiper and washer system.....	55.9
[55.640] Electronic modules .....	55.10
[55.DTC] FAULT CODES.....	55.11
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.116] Fenders and guards.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.154] Cab doors and hatches .....	90.6

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**