

# SERVICE MANUAL

## **Boomer™ 40 Cab / Boomer™ 50 Cab** **Compact Tractor**

*Boomer™ 40 - From PIN 0 to 2103012735; From PIN 2103012736 to 2106014859; PIN 2106014860 and above;  
Boomer™ 50 - From PIN 0 to 2105012137; From PIN 2105012138 to 2105013791; PIN 2105013792 and above*

Part number 48017703

1<sup>st</sup> edition English  
December 2016





## SERVICE MANUAL

**Boomer™ 40 4WD, Cab, Europe, Boomer™ 40 [0 - 2103012735] , Boomer™ 40 [2103012736 - 2106014859] , Boomer™ 40 [2106014860 - ] , Boomer™ 50 4WD, Cab, Europe, Boomer™ 50 [0 - 2105012137] , Boomer™ 50 [2105012138 - 2105013791], Boomer™ 50 [2105013792 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Boomer™ 40 4WD, Cab, Europe	Europe	S4Q2
Boomer™ 40 [0 - 2103012735]	Europe	S4Q2
Boomer™ 40 [2103012736 - 2106014859]	Europe	S4Q2
Boomer™ 40 [2106014860 - ]	Europe	S4Q2
Boomer™ 50 4WD, Cab, Europe	Europe	S4Q2
Boomer™ 50 [0 - 2105012137]	Europe	S4Q2
Boomer™ 50 [2105012138 - 2105013791]	Europe	S4Q2
Boomer™ 50 [2105013792 - ]	Europe	S4Q2

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.218] Fuel injection system.....	10.4
[10.304] Engine lubrication system.....	10.5
[10.400] Engine cooling system .....	10.6
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.110] Clutch and components .....	18.2
[18.112] Slip clutch or flywheel damper .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.140] Mechanical transmission internal components.....	21.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
<b>Rear axle system</b> .....	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.120] Planetary and final drives .....	27.2
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.202] Hydrostatic transmission .....	29.2

[29.218] Pump and motor components.....	29.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.120] Central Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.204] Remote control valves .....	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.350] Safety and main relief valves .....	35.7
[35.355] Hydraulic hand control .....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.108] Rear three-point hitch external controls.....	37.2
[37.110] Rear three-point hitch .....	37.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4

<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels .....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control</b> .....	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.013] Engine oil system .....	55.5
[55.031] Parking brake electrical system .....	55.6
[55.048] Rear Power Take-Off (PTO) control system .....	55.7
[55.100] Harnesses and connectors .....	55.8
[55.201] Engine starting system .....	55.9
[55.202] Cold start aid .....	55.10
[55.302] Battery .....	55.11
[55.404] External lighting .....	55.12
[55.405] External lighting switches and relays .....	55.13
[55.408] Warning indicators, alarms, and instruments .....	55.14
[55.525] Cab engine controls .....	55.15
[55.610] Ground speed control .....	55.16
[55.640] Electronic modules .....	55.17
<b>Platform, cab, bodywork, and decals</b> .....	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.110] Operator platform less cab .....	90.2

[90.116] Fenders and guards ..... 90.3

[90.120] Mechanically-adjusted operator seat..... 90.4

[90.150] Cab..... 90.5

[90.151] Cab interior..... 90.6

[90.154] Cab doors and hatches ..... 90.7

[90.156] Cab windshield and windows ..... 90.8

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**