

# SERVICE MANUAL


**T3010 / T3020 / T3030 T3040**  
Tractors

Print No. 84183229B





**NEW HOLLAND**

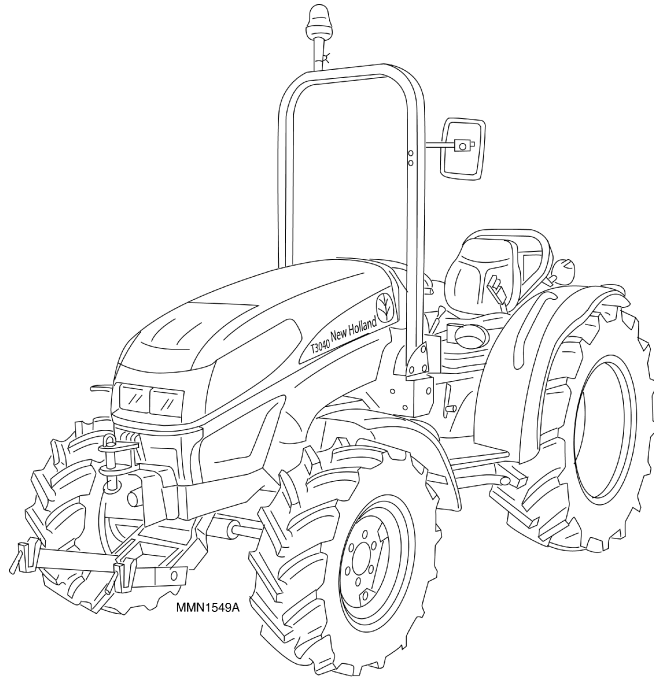

# **T3010 - T3020 - T3030 - T3040**

## **SERVICE MANUAL**

<b>SECTIONS</b>	
<b>SECTION GENERAL GUIDELINES</b> .....	<b>00</b>
<b>SECTION ENGINE</b> .....	<b>10</b>
<b>SECTION CLUTCH</b> .....	<b>18</b>
<b>SECTION TRANSMISSIONS</b> .....	<b>21</b>
<b>SECTION FRONT MECHANICAL TRANSMISSION</b> .....	<b>25</b>
<b>SECTION REAR MECHANICAL TRANSMISSION</b> .....	<b>27</b>
<b>SECTION POWER TAKE-OFF</b> .....	<b>31</b>
<b>SECTION BRAKES</b> .....	<b>33</b>
<b>SECTION HYDRAULIC SYSTEMS</b> .....	<b>35</b>
<b>SECTION STEERING</b> .....	<b>41</b>
<b>SECTION CAB AIR CONDITIONING SYSTEM</b> .....	<b>50</b>
<b>SECTION ELECTRICAL SYSTEM</b> .....	<b>55</b>
<b>SECTION CAB</b> .....	<b>90</b>

**T E C H N I C A L S U P P O R T**

CONTENTS

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>			T3040 Engine removal-in-		
General instructions . . . . .	1-2	01-09	stallation . . . . .	35-36-37- 38-39	01-09
Safety regulations . . . . .	3-4	01-09	EGR system . . . . .	40-41-42- 43-44	01-09
Safety regulations . . . . .	5	01-09	Inspecting and cleaning		
Tractor refuelling . . . . .	6	01-09	EGR system components .	44-45-46	01-09
			For Safe Installation . . . . .	46	01-09
<b>10 - ENGINE</b>			Compression test . . . . .	47-48-49	01-09
<b>CHAPTER 1 - Engine</b>			Engine disassembly-as-		
Index . . . . .	1-2	01-09	sembly . . . . .	50-51-52- 53-54-55- 56-57-58- 59-60-61- 62-63-64- 65-66-67	01-09
General specifications . . . . .	3-4-5-6-7- -8	01-09	Valve clearance adjustment	68-69-70	01-09
Engine lubrication circuit			Belt tension check . . . . .	71	01-09
data . . . . .	9	01-09	Injectors and injection jet		
Engine cooling circuit data	9	01-09	pressure check and reading	72-73-74- 75	01-09
Torque Values . . . . .	10	01-09	Injection timing adjustment		
Tools . . . . .	11	01-09	and check . . . . .	75-76-77	01-09
Cross-sectional views of			Idle speed regulation (mini-		
engine . . . . .	12-13	01-09	imum and maximum) . . . . .	77	01-09
Cross-sectional views of in-			Cooling and radiator system		
jection pump . . . . .	14-15	01-09	check . . . . .	77	01-09
Cross-sectional views of			Sensor check . . . . .	78	01-09
regulator . . . . .	16	01-09	Checks, measurements		
Cross-sectional views of			and repairs - cylinder head	79-80-81- 82-83-84- 85	01-09
fuel pump . . . . .	17	01-09	Checks, measurements		
Cross-sectional views of			and repairs - cylinder block		
cold starting aid . . . . .	18	01-09	and liners . . . . .	86-87-88	01-09
Cross-sectional views of			Checks, measurements		
turbocharger . . . . .	19	01-09	and repairs - rocker arm .	89-90	01-09
Engine lubrication circuit			Checks, measurements		
diagram . . . . .	20	01-09	and repairs - pistons and		
Engine cooling circuit dia-			piston rings . . . . .	91-92-93- 94-95	01-09
gram . . . . .	21	01-09	Checks, measurements		
Engine fuel circuit diagram	22	01-09	and repairs - connecting rod	95-96-97- 98	01-09
Troubleshooting . . . . .	23-24-25- 26-27-28- 29-30	01-09			
Engine removal-installation	31-32-33- 34	01-09			

	Page	Date		Page	Date
Checks, measurements and repairs – camshaft . . .	99-100	01-09	Sections . . . . .	4-5	01-09
Checks, measurements and repairs – crankshaft . .	101-102-103	01-09	Description and operation .	6	01-09
Checks, measurements and repairs – gears . . . . .	104-105	01-09	Troubleshooting . . . . .	6-7-8	01-09
Checks, measurements and repairs – oil pump . . . .	106-107	01-09	Removal-Installation – rear transmission – gearbox casing . . . . .	9-10	01-09
<b>Injection Pump</b>			Disassembly-Assembly – transmission-gearbox casing . . . . .	11-12-13-14-15-16-17-18-19	01-09
Removal-Installation – injection pump . . . . .	108-109	01-09	Transmission-gearbox casing adjustment . . . . .	20-21	01-09
Disassembly-Assembly – injection pump . . . . .	110-111-112-113-114-115-116-117-118-119-120-121-122-123-124-125-126-127-128-129-130	01-09	Disassembly-Assembly – clutch casing . . . . .	22-23-24-25-26-27	01-09
Plunger . . . . .			<b>25 - FRONT AXLE MECHANICAL TRANSMISSION</b>		
adjustment . . . . .	131-132	01-09	<b>CHAPTER 1 - Front axle mechanical transmission</b>		
<b>Turbocharger</b>			Specifications . . . . .	2	01-09
Disassembly- Assembly . .	133-134-135-136-137	01-09	Tools . . . . .	2	01-09
<b>18 - CLUTCH</b>			Torque settings . . . . .	3	01-09
General specifications . . . .	1	01-09	Sections . . . . .	4-5-6	01-09
Torque settings . . . . .	1	01-09	Description and Operation	7	01-09
Tools . . . . .	2	01-09	Troubleshooting . . . . .	8	01-09
Sections . . . . .	3	01-09	Removal-Installation – front axle . . . . .	9-10	01-09
Troubleshooting . . . . .	4-5	01-09	Removal-Installation – front axle differential and bevel drive support . . . . .	11-12	01-09
Removal-Installation – clutch . . . . .	6-7-8-9-10-11-12-13-14-15-16-17-18	01-09	Overhaul – front axle bevel drive . . . . .	13-14	01-09
Clutch adjustments . . . . .	19	01-09	Adjustments – bevel drive . . . . .	14-15-16-17-18	01-09
PTO clutch lever adjustment	20	01-09	Disassembly-Assembly – front differential lock device	19-20	01-09
<b>21 - TRANSMISSIONS</b>			Disassembly-Assembly – wheel hub . . . . .	21-22	01-09
<b>CHAPTER 1 - Mechanical transmission (12 + 12) and (16 + 16)</b>			Removal-Installation – front reduction unit . . . . .	23-24	01-09
Specifications . . . . .	1-2	01-09	Disassembly-Assembly – front reduction unit . . . . .	25-26-27-28-29	01-09
Torque settings . . . . .	2-3	01-09	Removal-Installation – axle steering cylinder . . . . .	30-31-32	01-09

	Page	Date
<b>27 - REAR MECHANICAL TRANSMISSION</b>		
Specifications .....	1	01-09
Torque settings .....	2-3	01-09
Tools .....	4	01-09
Sections .....	5-6	01-09
Description and Operation	7	01-09
Troubleshooting .....	7-8	01-09
Disassembly-Assembly - transmission-gearbox casing .....	9-10	01-09
Removal-Installation - right or left-hand final drive casing assembly .....	11-12-13-14-15-16	01-09
Disassembly-Assembly - drive wheel shaft. ....	17-18-19	01-09
Bevel drive adjustments ..	20-21-22-23-24	01-09

**31 - MECHANICAL POWER TAKE-OFF**

**CHAPTER 1 - Mechanical power take-off**

Specifications .....	1	01-09
Torque settings .....	2	01-09
Sections .....	3	01-09
Description and Operation	4-5-6	01-09
Troubleshooting .....	6-7	01-09
Disassembly-Assembly - mechanical power take-off	8-9-10	01-09

**33 - BRAKES**

Specifications .....	1	01-09
Torque settings .....	2	01-09
Sections .....	3	01-09
Description and Operation	4	01-09
Troubleshooting .....	5-6	01-09
Removal-Installation - right or left-hand brake .....	7-8	01-09
Adjustments .....	9-10-11	01-09

**35 - HYDRAULIC SYSTEMS**

**CHAPTER 1 - Rear mechanical hydraulic lift**

Tools .....	1	01-09
Specifications and data ...	2	01-09

	Page	Date
Hydraulic circuit diagram .	3	01-09
Using the control levers ..	4	01-09
Description and Operation	5-6-7-8-9-10-11-12	01-09
Check internal cap measurement .....	13	01-09
Check assembly of reaction springs .....	14	01-09
Removal-Installation of the hydraulic lift control valve .	15	01-09
Removal-Installation of the hydraulic lift .....	16	01-09
Hydraulic lift working pressure check .....	17	01-09

**CHAPTER 2 - Open centre system auxiliary control valves**

Specifications .....	1	01-09
Tools .....	1	01-09
Sections .....	2	01-09
Description and Operation	3-4-5-6	01-09

**41 - STEERING**

**CHAPTER 1 - Mechanical power take-off**

Specifications .....	2	01-09
Tools .....	2	01-09
Cross-sectional and exploded views .....	3-4	01-09
Description and Operation	5-6-7-8-9-10	01-09
Working pressure check ..	11	01-09

**50 - CAB AIR-CONDITIONING SYSTEM**

**CHAPTER 1 - Cab air-conditioning system**

Safety regulations .....	2	01-09
Operating instructions ....	3	01-09
Tools .....	4	01-09
General specifications ....	4	01-09
Operating principles .....	5	01-09
Conditioning system components .....	6-7-8-9-10	01-09
Cab controls .....	11-12-13-14-15	01-09
Testing operation and cooling .....	16-17	01-09

	Page	Date		Page	Date
Air conditioning system maintenance .....	18-19	01-09	Senders, Sensors and Switches .....	5-6-7-8-9-10-11	01-09
Troubleshooting .....	20-21-22-23	01-09	Instrument error indicator diagnostics table .....	12-13-14-15	01-09
Refrigerant recovery - recycling and evacuation - charging stations .....	24	01-09	Service .....	16	01-09
Checking for and eliminating any gas leaks .....	25-26	01-09	<b>CHAPTER 2 - Components</b>		
Compressor drive belt tension adjustment .....	27	01-09	Description of components	1-2-3	01-09
Cab heating/air-conditioning system. Removal - Installation .....	28-29-30-31-32-33	01-09	Service .....	4-5-6	01-09
<b>50 - CAB AIR-CONDITIONING SYSTEM</b>			<b>CHAPTER 3 - Starting System</b>		
<b>CHAPTER 2 - Cab air-conditioning system (valid from chassis no. HSSN19539)</b>			Technical data .....	1	01-09
Safety regulations .....	2	09-11	Description and Operation	2	01-09
Operating instructions ....	3	09-11	Troubleshooting .....	3-4	01-09
Tools .....	4	09-11	System testing .....	5-6	01-09
General specifications ....	4	09-11	Removal-Installation - starter motor .....	7	01-09
Operating principles ....	5	09-11	<b>CHAPTER 4 - Charging system</b>		
Conditioning system components .....	6-7-8-9-10	09-11	Technical data .....	1	01-09
Cab controls .....	11-12-13-14-15	09-11	Description and Operation	2-3	01-09
Testing operation and cooling .....	16-17	09-11	System testing and troubleshooting .....	4-5-6-7	01-09
Air conditioning system maintenance .....	18-19	09-11	Removal-Installation - alternator .....	8	01-09
Troubleshooting .....	20-21-22-23	09-11	<b>CHAPTER 5 - Battery</b>		
Refrigerant recovery-recycling and evacuation-charging stations .....	24	09-11	Technical data .....	1	01-09
Checking for and eliminating any gas leaks .....	25-26	09-11	Description and Operation	1	01-09
Compressor drive belt tension adjustment .....	27	09-11	Removal-Installation - battery .....	2	01-09
Cab heating/air-conditioning system. Removal - Installation .....	28-29-30-31-32-33-34	09-11	Battery checking and maintenance .....	3	01-09
<b>55 - ELECTRICAL SYSTEM</b>			Battery charging .....	4-5-6	01-09
<b>CHAPTER 1 - Instruments</b>			Battery troubleshooting ...	6	01-09
Analogue instrumentation .	1-2-3-4	01-09	<b>CHAPTER 6 - Electrical circuits (models T3010-T3020-T3030)</b>		
			Index .....	1	01-09
			Electrical circuits components .....	2-3-4	01-09
			Location of main connections and fuse box. ....	5	01-09
			Location of fuses and relays	6-7-8-9-10	01-09
			Symbols and colour codes	9-10	01-09

	Page	Date		Page	Date
Main wiring and electrical circuits .....	13-14-15- 16-17-18- 19-20-21- 22-23-24- 25-26-27- 28	01-09 01-09 01-09 01-09 01-09 09-11	Location of components ..	13-14	01-09
			Symbols and codes .....	15-16	01-09
			Air-conditioner - radio - window-washer circuit ...	18-19-20- 21-22-23- 24-25	01-09
			Work lights - rotating bea- con - internal lighting - rear window wiper circuit .....	26-27-28- 29-30-31- 32	01-09
<b>CHAPTER 7 - Electrical circuits (model T3040)</b>			<b>CHAPTER 9 - Wiring Harnesses and Connectors</b>		
Index .....	1	01-09	Index .....	1	01-09
Electrical circuit compo- nents .....	2-3-4	01-09	Electrical circuit compo- nents .....	2-3-4-5	01-09
Location of main connec- tions and fuse box .....	5-	01-09	Harnesses .....	6-7-8-9	01-09
Location of fuses and relays	6-7-8	01-09	List of connectors .....	10-11-12- 13-14-15- 16-17-18- 19-20-21- 22-23-24- 25-26-27- 28-29-30- 31-32-33- 34-35-36- 37-38-39- 40-41-42	01-09
Symbols and colour codes	9-10	01-09			
Main wiring and electrical circuits .....	11-12-13- 14-15-16- 17-18-19- 20-21-22- 23-24-25- 26-27-28- 29- 30	01-09 01-09 01-09 01-09 01-09 01-09 01-09 09-11			
<b>CHAPTER 8 - Cab electrical components</b>					
Index .....	1	01-09			
Cab controls .....	2-3-4	01-09			
Fuses and relays .....	5-6	01-09			
Air-conditioner controls ..	7	01-09			
Components outside the cab .....	8-9-10	01-09			
Electrical circuits compo- nents .....	11	01-09			

	Page	Date		Page	Date
<b>CHAPTER 10 - Cab electrical components (from chassis no. HSSN19539)</b>			<b>90 - PLATFORM, CAB, BODYWORK</b>		
Contents .....	1	09-11	Hood. Removal - Installation .....	2	01-09
Cab controls .....	2-3-4	09-11	Right/left-hand side panels. Removal - Installation ....	3	01-09
Fuses and relays .....	4-5	09-11	Instrument panel lower guard. Removal - Installation .....	4-5	01-09
Air-conditioner controls ..	6	09-11	Cab assembly with platform. Removal - Installation ....	6-7-8-9- 10-11-12- 13-14	01-09
Components outside the cab .....	7-8-9	09-11	Replacing windows (up to and excluding chassis no. HSSN19539) .....	15-16-17- 18-19-20	01-09
Electrical circuits compo- nents .....	10	09-11	Replacing windows (from chassis HSSN19539 on- wards) .....	21-22-23- 24-25-26	09-11
Location of components ..	11-12	09-11			
Symbols and codes .....	13-14-15	09-11			
Work lights circuit - internal lighting - windshield wa- shers (Diagram A) .....	16-17	09-11			
Air-conditioner - radio - windshield wiper circuit ...	18-19	09-11			
Connectors .....	21-22-23- 24-25-26- 27-28-29- 30	09-11			



**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**