

SERVICE MANUAL

**T8.275 / T8.300 / T8.330 /
T8.360 / T8.390**

Tractor

PIN ZBRC07000 and after


Part number 47386189

English

October 2012



SERVICE MANUAL

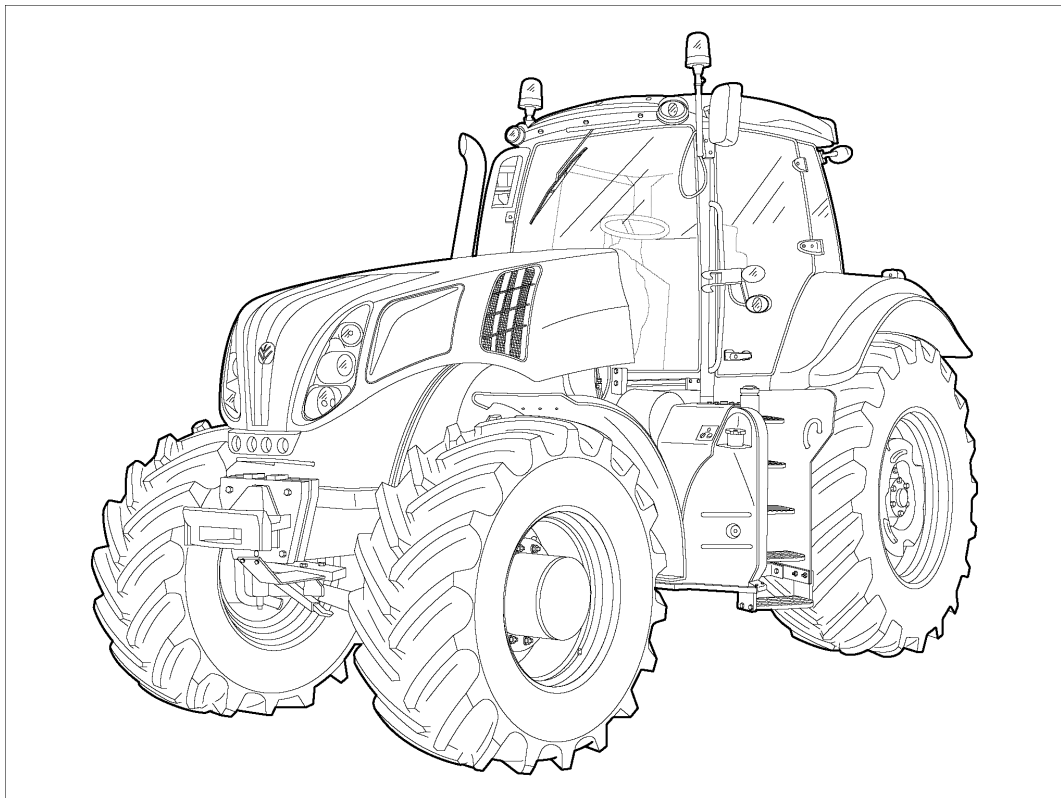

**T8.275 [ZBRC07000 -] , T8.300 [ZBRC07000 -] , T8.330 [ZBRC07000 -] ,
T8.360 [ZBRC07000 -] , T8.390 [ZBRC07000 -]**

Contents

INTRODUCTION

Engine.....	10
Engine and crankcase.....	10.001
Cylinder heads	10.101
Pump drives	10.114
Air cleaners and lines.....	10.202
Fuel tanks	10.216
Aftercooler.....	10.310
Engine cooling system	10.400
Fan and drive.....	10.414
Selective Catalytic Reduction (SCR) exhaust treatment	10.500
Transmission.....	21
Powershift transmission lubrication system	21.105
Powershift transmission	21.113
Powershift transmission external controls	21.135
Gearbox internal components	21.145
Powershift transmission internal components.....	21.155
Drop box.....	21.200
Four-Wheel Drive (4WD) system	23
Electrohydraulic control.....	23.202
Drive shaft	23.314
Front axle system	25
Powered front axle	25.100
Front bevel gear set and differential	25.102
Final drive hub, steering knuckles, and shafts	25.108
Axle suspension control	25.122
Rear axle system.....	27

Powered rear axle	27.100
Rear bevel gear set and differential	27.106
Planetary and final drives.....	27.120
Power Take-Off (PTO)	31
Rear electrohydraulic control	31.104
One-speed rear Power Take-Off (PTO)	31.110
Two-speed rear Power Take-Off (PTO)	31.114
Front Power Take-Off (PTO).....	31.146
Brakes and controls	33
Parking brake / Parking lock.....	33.110
Hydraulic service brakes	33.202
Trailer brake hydraulic control	33.220
Trailer brake pneumatic control.....	33.224
Hydraulic systems.....	35
Hydraulic systems	35.000
Pump control valves	35.102
Variable displacement pump	35.106
Three-point hitch control valve	35.114
Remote control valves.....	35.204
Reservoir, cooler, and filters	35.300
Combination pump units.....	35.304
Pneumatic system	36
Pneumatic system.....	36.100
Hitches, drawbars, and implement couplings.....	37
Rear three-point hitch	37.110
Front hitch	37.162
Steering.....	41
Steering control.....	41.101

Hydraulic control components	41.200
Pump	41.206
Cab climate control	50
Heating	50.100
Air conditioning	50.200
Cab pressurizing system	50.300
Electrical systems	55
Engine cooling system	55.012
Front axle control system.....	55.045
Rear axle control system	55.046
Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.050
Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.051
Harnesses and connectors	55.100
Three-point rear hitch electronic control system	55.130
Engine starting system	55.201
Alternator	55.301
Battery	55.302
External lighting	55.404
External lighting switches and relays.....	55.405
Warning indicators, alarms, and instruments.....	55.408
Cab controls	55.512
Cab lighting	55.514
Wiper/Washer system	55.518
Electronic modules	55.640
Selective Catalytic Reduction (SCR) electrical system.....	55.988
FAULT CODES	55.DTC
Platform, cab, bodywork, and decals	90
Engine hood and panels.....	90.100
Protections and footboards.....	90.118

Pneumatically-adjusted operator seat	90.124
Cab	90.150
Cab interior	90.151

Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING



NOTE:

If there is no response to click on the link above, please download the PDF document first and then click on it.