




**NEW HOLLAND**

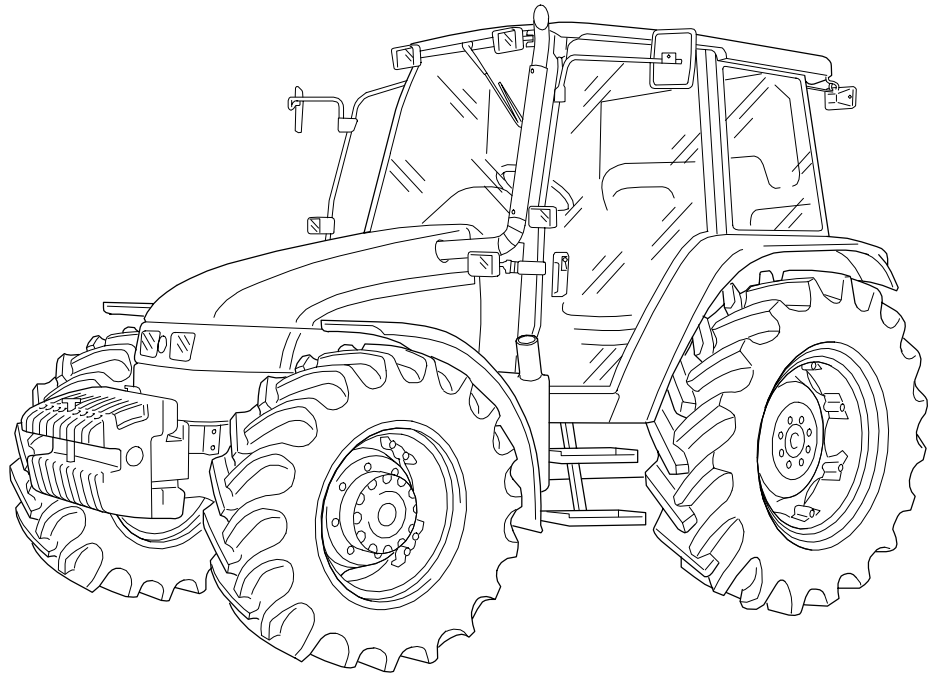

## **TRACTORS**

# **TL70A - TL80A - TL90A - TL100A SERVICE MANUAL**

### **SECTIONS**

<b>GENERAL GUIDELINES</b> .....	<b>00</b>
<b>ENGINE</b> .....	<b>10</b>
<b>CLUTCH</b> .....	<b>18</b>
<b>TRANSMISSION</b> .....	<b>21</b>
<b>DRIVE LINES</b> .....	<b>23</b>
<b>FRONT MECHANICAL TRANSMISSION</b> .....	<b>25</b>
<b>REAR MECHANICAL TRANSMISSION</b> .....	<b>27</b>
<b>POWER TAKE-OFF</b> .....	<b>31</b>
<b>BRAKES</b> .....	<b>33</b>
<b>HYDRAULIC SYSTEMS</b> .....	<b>35</b>
<b>STEERING</b> .....	<b>41</b>
<b>AXLE AND WHEELS</b> .....	<b>44</b>
<b>CAB AIR CONDITIONING SYSTEM</b> .....	<b>50</b>
<b>ELECTRICAL SYSTEM</b> .....	<b>55</b>
<b>PLATFORM, CAB, BODYWORK</b> .....	<b>90</b>

**S E R V I C E**

**CONTENT VOLUME 1**

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>					
General instructions . . . . .	1-2	03-06	Checks and measurements - pistons . . . . .	86 to 89	03-06
Safety regulations . . . . .	3-4-5	03-06	Checks and measurements - camshaft, tappets and valves . . . . .	90 to 93	03-06
Consumables . . . . .	6	03-06	Checks and measurements - cylinder head . . . . .	94	03-06
<b>10 - ENGINE</b>					
Summary . . . . .	1	03-06	Functional testing on low engine oil pressure indicator . . . . .	95	03-06
General specifications . . . . .	2 to 4	03-06	Checks and measurements - cooling system . . . . .	96	03-06
Fuel system data . . . . .	5	03-06	Replacing crankshaft front seal . . . . .	97 to 99	03-06
Crankshaft and engine block data . . . . .	6	03-06	Replacing crankshaft rear seal . . . . .	100 to 102	03-06
Connecting rod data . . . . .	7	03-06	Adjusting tappet, valve and rocker arm clearance . . . . .	103 to 105	03-06
Piston data . . . . .	7-8	03-06	Removal-Installation - injectors . . . . .	106 to 108	03-06
Timing gear data . . . . .	8-9	03-06	Removal - Installation - Bosch injection pump . . . . .	109 to 113	03-06
Cylinder head data . . . . .	9-10	03-06	Bosch injection pump - timing . . . . .	114 to 118	03-06
Tightening Torques . . . . .	11-12	03-06	Bosch injection pump - air bleeding . . . . .	118	03-06
Tools . . . . .	13	03-06	Removal-Installation - coolant pump . . . . .	119-120	03-06
View of 4-cylinder engine mod. TL70A and TL80A . . . . .	14	03-06	Removal-Installation - thermostat valve . . . . .	121-122	03-06
View of 4-cylinder engine mod. TL90A and TL100A . . . . .	15	03-06	Removal-Installation - radiator . . . . .	123 to 128	03-06
Engine cooling and lubrication diagrams . . . . .	16-17	03-06	Coolant pump drive belt adjustment . . . . .	129 to 130	03-06
Component parts of cylinder head mod. TL70A and TL80A . . . . .	18	03-06	<b>18 - CLUTCH</b>		
Component parts of cylinder head mod. TL90A and TL100A . . . . .	19	03-06	Summary . . . . .	1	03-06
Component parts of additional counterweights . . . . .	20	03-06	Data . . . . .	2	03-06
Troubleshooting . . . . .	21 to 24	03-06	Tightening Torques . . . . .	3	03-06
Engine removal-installation . . . . .	25 to 44	03-06	Tools . . . . .	3	03-06
Engine disassembly-assembly . . . . .	45 to 78	03-06	Cross-sectional views . . . . .	4	03-06
Checks and measurements - cylinder block and liners . . . . .	79 to 81	03-06	Troubleshooting . . . . .	5	03-06
Checks and measurements - crankshaft, bearings and flywheel . . . . .	82 to 83	03-06	Checks and measurements - clutch . . . . .	6-7	03-06
Checks and measurements - connecting rods . . . . .	84 to 85	03-06	Adjustments - clutch pedal . . . . .	8	03-06
			Removal-Installation - clutch . . . . .	9 to 11	03-06
			Clutch Overhaul . . . . .	12 to 15	03-06

	Page	Date		Page	Date
Adjustments – clutch disengagement levers . . . . .	16	03-06	Control rod adjustments . .	36	03-06
<b>21 - TRANSMISSIONS</b>			Removal-Installation – Dual Command (2 Speed Power Shift) solenoid valve	37 to 40	03-06
<b>CHAPTER 1 - Transmission and range gear (12x4)</b>			Working pressure test . . . .	40	03-06
Summary . . . . .	1	03-06	Removal-Installation – Dual Command (2 Speed Power Shift) control valve	41 to 44	03-06
Data . . . . .	2	03-06	Disassembly-Assembly – Dual Command (2 Speed Power Shift) control valve .	45-46	03-06
Tightening Torques . . . . .	3	03-06	Transmission longitudinal cutaway section view . . . .	47	03-06
Tools . . . . .	4-5	03-06	<b>CHAPTER 4 - Reverser and creeper unit</b>		
Cross-sectional views . . .	6-7	03-06	Summary . . . . .	1	03-06
Description & Operation . .	8	03-06	Data . . . . .	2	03-06
Troubleshooting . . . . .	8	03-06	Tightening torque . . . . .	3	03-06
Transmission longitudinal cutaway section view . . . .	9	03-06	Tools . . . . .	4 to 5	03-06
<b>CHAPTER 2 - Reverser</b>			Cross-sectional views . . .	6 to 7	03-06
Summary . . . . .	1	03-06	Description & Operation . .	8	03-06
Data . . . . .	2	03-06	Troubleshooting . . . . .	8	03-06
Tightening Torques . . . . .	3	03-06	Replacing clutch casing- reverser and creeper unit .	9 to 13	03-06
Tools . . . . .	4	03-06	End float adjustment be- tween shaft and support . .	14 to 15	03-06
Cross-sectional views . . .	4-5	03-06	Transmission longitudinal cutaway section view . . . .	16	03-06
Description & Operation . .	6	03-06	<b>CHAPTER 5 - Power Shuttle tran- smission with Dual Command (2 Speed Power Shift) function</b>		
Troubleshooting . . . . .	6	03-06	Summary . . . . .	1	03-06
Disassembly-Assembly – clutch casing-reverser . . .	7 to 10	03-06	Data . . . . .	2-3	03-06
Transmission longitudinal cutaway section view . . . .	11-12	03-06	Tightening torque . . . . .	4-5	03-06
<b>CHAPTER 3 - Dual Command (2 Speed Power Shift)</b>			Tools . . . . .	6-7	03-06
Summary . . . . .	1	03-06	Cross-sectional views . . .	8 to 10	03-06
Data . . . . .	2-3	03-06	Description & Operation . .	11 to 17	03-06
Tightening Torques . . . . .	4	03-06	Range and gear lever posi- tion sensor adjustment	18-19	03-06
Tools . . . . .	5	03-06	Disassembly-Assembly – clutch casing with power shuttle and Dual Command (2 Speed Power Shift) . . . .	20 to 26	03-06
Cross-sectional views . . .	6 to 8	03-06	Disassembly-Assembly – clutch (A) and (B) . . . . .	27-32	03-06
Description & Operation . .	10 to 15	03-06			
Troubleshooting . . . . .	16-17	03-06			
Removal-Installation – clutch casing with Dual Command (2 Speed Power Shift) . . . . .	18 to 26	03-06			
Disassembly-Assembly – clutch casing with Dual Command (2 Speed Power Shift) . . . . .	27 to 35	03-06			

	Page	Date		Page	Date
Calibrations .....	33	03-06	Disassembly-Assembly - front epicyclic final drive with brake .....	40-41	03-06
HH MENU access .....	33-34	03-06	Replacing wheel hub seal with brake. ....	42	03-06
Clutch calibration H1 menu transmission .....	35 to 37	03-06	Replacing steering knuckle pins and bearings .....	43	03-06
Transmission fault codes .	38 to 40	03-06	Stub axle adjustments ....	44-45	03-06
<b>23 - DRIVE LINES</b>			Adjustments - bevel drive	46 to 52	03-06
Summary .....	1	03-06	<b>27 - REAR MECHANICAL TRANSMISSION</b>		
Data .....	2	03-06	Summary .....	1	03-06
Tightening Torques .....	3	03-06	Data .....	2-3	03-06
Tools .....	3	03-06	Tightening Torques .....	3-4	03-06
Cross-sectional views ...	4	03-06	Tools .....	5 to 9	03-06
Description & Operation ..	5	03-06	Cross-sectional views ...	10 to 14	03-06
Troubleshooting .....	6	03-06	Description & Operation ..	15	03-06
Removal-Installation - services control valve .....	7 to 9	03-06	Troubleshooting .....	16-17	03-06
Disassembly-Assembly - services control valve ....	10 to 11	03-06	Removal-Installation - transmission-gearbox casing .....	18 to 31	03-06
Removal-Installation - drive gear casing .....	12 to 16	03-06	Disassembly-Assembly - transmission-gearbox casing .....	32 to 39	03-06
Disassembly-Assembly - drive gear casing .....	17 to 20	03-06	Gearbox driving shaft end float adjustment .....	40	03-06
<b>25 - FRONT MECHANICAL TRANSMISSION</b>			Adjustments - differential lock engagement sleeve position .....	41	03-06
Summary .....	1	03-06	Determining the bevel pinion positioning adjustment ring .....	42 to 43	03-06
Data .....	2 to 4	03-06	Tapered roller bearings adjustment for pinion shaft	44	03-06
Tightening Torques .....	4-5	03-06	Adjusting the bevel crown wheel bearings and checking the clearance between the sides of the bevel drive teeth .....	45 to 48	03-06
Tools .....	6 to 8	03-06	Differential pinion and side gear backlash adjustment .	49-50	03-06
Cross-sectional views ...	9 to 13	03-06	Differential lock pedal travel adjustment .....	51	03-06
Description & Operation ..	14-15	03-06	Removal-Installation - final drive .....	52 to 55	03-06
Rules for correctly fitting the axle support to the engine	16	03-06	Disassembly-Assembly - epicyclic final drive .....	55	03-06
Troubleshooting .....	17	03-06	Disassembly-Assembly - drive wheel shaft .....	56-57	03-06
Removal-Installation - front axle .....	18 to 21	03-06			
Disassembly-Assembly - front axle .....	22 to 30	03-06			
Overhaul - front differential	31	03-06			
Overhaul - front axle differential with LIM-SLIP .....	32-33	03-06			
Overhaul - differential lock unit .....	34-35	03-06			
Disassembly-Assembly - front epicyclic final drive without brake .....	36 to 38	03-06			
Replacing wheel hub seal without brake. ....	39	03-06			

	Page	Date		Page	Date
<b>31 - POWER TAKE-OFF</b>			Hydraulic diagram - brakes . . . . .	5	03-06
<b>CHAPTER 1 - Mechanical power take-off</b>			Pilot valve operation . . . . .	6	03-06
Summary . . . . .	1	03-06	Troubleshooting . . . . .	7	03-06
Data . . . . .	2 to 4	03-06	Adjustments - parking handbrake travel . . . . .	8	03-06
Tools . . . . .	5	03-06	Removal-Installation/Dis- assembly-Assembly park- ing brake casing . . . . .	9 to 11	03-06
Tightening Torques . . . . .	5-6	03-06	Service brake circuit air bleeding . . . . .	12	03-06
Cross-sectional views . . . . .	7 to 9	03-06	Removal-Installation - service brake pump . . . . .	13-14	03-06
Description & Operation . . . . .	10-11	03-06	Adjusting the height of the service brake pedals . . . . .	14	03-06
Troubleshooting . . . . .	11	03-06	Removal-Installation - service brake . . . . .	15 to 19	03-06
Removal-Installation - power take-off . . . . .	12 to 14	03-06	<b>CHAPTER 2 - Trailer Air Brakes</b>		
Disassembly-Assembly - power take-off . . . . .	15 to 17	03-06	Summary . . . . .	1	03-06
<b>CHAPTER 2 - Electro-hydraulic power take-off</b>			Data . . . . .	1	03-06
Summary . . . . .	1	03-06	Tightening Torques . . . . .	2	03-06
Data . . . . .	2 to 5	03-06	Tools . . . . .	2	03-06
Tools . . . . .	5	03-06	Cross-sectional views . . . . .	3 to 6	03-06
Tightening Torques . . . . .	6	03-06	Description & Operation . . . . .	6-7	03-06
Cross-sectional views . . . . .	7 to 12	03-06	Operation of single trailer brake circuit components . . . . .	8 to 13	03-06
Description & Operation . . . . .	13 to 22	03-06	Troubleshooting . . . . .	14	03-06
Additional PTO controls for cab-version tractors with Power Shuttle trans- missions . . . . .	23-24	03-06	Pressure tests . . . . .	15 to 19	03-06
Troubleshooting . . . . .	25	03-06	<b>35 - HYDRAULIC SYSTEMS</b>		
Replacing the power take- off brake . . . . .	26-27	03-06	<b>CHAPTER 1 - Rear mechanical hydraulic lift</b>		
Removal-Installation - power take-off . . . . .	28 to 31	03-06	Summary . . . . .	1	03-06
Disassembly-Assembly - power take-off . . . . .	32 to 38	03-06	Data . . . . .	2 to 6	03-06
<b>33 - BRAKES</b>			Tightening Torques . . . . .	7-8	03-06
<b>CHAPTER 1 - Brakes</b>			Tools . . . . .	9	03-06
Summary . . . . .	1	03-06	Cross-sectional views . . . . .	10-11	03-06
Data . . . . .	1	03-06	Description & Operation . . . . .	12 to 15	03-06
Tightening Torques . . . . .	2	03-06	Troubleshooting . . . . .	16-17	03-06
Cross-sectional views . . . . .	3-4	03-06	Hydraulic lift pump compo- nents . . . . .	18-19	03-06
Tools . . . . .	4-5	03-06	Pump seal kit replacement	19	03-06
Description & Operation . . . . .	4	03-06	Disassembly-Assembly - LIFT-O-MATIC control . . . . .	20	03-06
			Adjustments - lift rod mechanism . . . . .	21-22	03-06

	Page	Date		Page	Date
LIFT-O-MATIC device up-ward travel adjustment . . .	23	03-06	Removal-Installation - BOSCH auxiliary control valves . . . . .	19 to 21	03-06
Disassembly-Assembly - external lift controls . . . . .	24	03-06	Disassembly-Assembly - BOSCH auxiliary control valves . . . . .	22 to 26	03-06
Removal-Installation - lift .	25 to 31	03-06			
Disassembly-Assembly - lift . . . . .	32 to 36	03-06	<b>CHAPTER 4 - Trailer brake auxiliary control valve</b>		
Adjusting the lift . . . . .	37 to 42	03-06	Summary . . . . .	1	03-06
Removal-Installation - lift control valve . . . . .	43-44	03-06	Cross-sectional views . . .	1	03-06
Disassembly-Assembly - lift control valve . . . . .	45 to 49	03-06	Description & Operation . .	1-9	03-06
Lift pressure relief valve - removal/installation and setting . . . . .	50	03-06	Troubleshooting . . . . .	10 to 12	03-06
			<b>CHAPTER 5 - Supplementary Cylinder</b>		
<b>CHAPTER 2 - Open centre system auxiliary control valves</b>			Summary . . . . .	1	03-06
Summary . . . . .	1	03-06	Data . . . . .	1	03-06
Data . . . . .	1	03-06	Cross-sectional views . . .	1	03-06
Tools . . . . .	1	03-06	Description & Operation . .	1	03-06
Tightening Torques . . . . .	2	03-06	Removal-Installation/Dis-assembly-Assembly - supplementary cylinder . . .	2	03-06
Cross-sectional views . . .	3 to 5	03-06			
Description & Operation . .	6 to 9	03-06	<b>CHAPTER 6 - Electronic Lift</b>		
Disassembly-Assembly - auxiliary control valves . . .	10-11	03-06	Summary . . . . .	1	03-06
Rod hardening test . . . . .	11	03-06	Precautions . . . . .	1	03-06
Blow-by test . . . . .	12	03-06	Data . . . . .	2-3	03-06
Adjustment of the auto-matic detent release pres-sure . . . . .	12	03-06	Tightening Torques . . . . .	4	03-06
Removal-Installation - flow control valve . . . . .	13	03-06	Tools . . . . .	4	03-06
Adjustments - flow control valve . . . . .	14-15	03-06	View of electronic lift com-ponents . . . . .	5	03-06
			Electronic lift control layout	6-7	03-06
<b>CHAPTER 3 - Auxiliary control valves (BOSCH)</b>			Description & Operation . .	8 to 11	03-06
Summary . . . . .	1	03-06	Anti-damping device for implements carried on the lift . . . . .	12 to 13	03-06
Data . . . . .	2	03-06	Fault code decoding . . . . .	13 to 14	03-06
Tools . . . . .	2	03-06	Diagnostics . . . . .	14 to 54	03-06
Tightening Torques . . . . .	3	03-06	Lift electronic control unit .	55	03-06
View of BOSCH auxiliary control valve components .	4	03-06	Removal-Installation - electronic lift control panel	56	03-06
Description & Operation . .	4-5	03-06	Lift arm potentiometer re-placement . . . . .	57	03-06
Control valve components	6 to 9	03-06	Removal -Installation - draft sensor . . . . .	58-59	03-06
Description & Operation . .	10 to 18	03-06	Calibration of the elec-tronic lift arms potentio-meter . . . . .	60-61	03-06

	Page	Date
Removal-Installation - electronic lift . . . . .	62 to 67	03-06
Removal-Installation - hy- draulic control valve . . . . .	68-69	03-06
<b>CHAPTER 7 - Ventral control valves for Walvoil-type open centre system</b>		
Summary . . . . .	1	03-06
Ventral control valve spec- ifications . . . . .	1	03-06
Tightening Torques . . . . .	2	03-06
Ventral control valve . . . . .	3-4	03-06
Ventral control valve joy- stick . . . . .	5 to 7	03-06
Control valve circuit . . . . .	8	03-06
Hydraulic diagram . . . . .	9	03-06
Description and operation of ventral control valve . . .	10 to 18	03-06

**CONTENTS VOLUME 2**

	Page	Date		Page	Date
<b>35 – HYDRAULIC SYSTEMS(*)</b>			<b>41 – STEERING</b>		
<b>CHAPTER 8 – Front Loader</b>			Summary .....	1	03-06
Summary .....	1	03-06	Data .....	2 to 4	03-06
Specifications .....	2-3	03-06	Tightening Torques .....	5	03-06
Maximum permissible front axle weights .....	3	03-06	View of hydraulic pump components .....	5	03-06
Tightening Torques .....	4	03-06	View of hydrostatic steering control valve components .....	6	03-06
Diagrams .....	5 to 7	03-06	Description & Operation ..	7 to 10	03-06
Ventral control valve specifications .....	8-9	03-06	Fault diagnosis .....	11-12	03-06
Ventral control valve joystick .....	10 to 12	03-06	Tools .....	12	03-06
System switching full and dipped beam headlights on lights fitted on handrails ..	13 to 16	03-06	Removal-Installation – hydrostatic steering control valve .....	13 to 17	03-06
Ballasting the tractor for front loader operation ....	17	03-06	Disassembly-Assembly – hydrostatic control valve ..	18 to 31	03-06
Loader general description	18 to 27	03-06	Hydrostatic steering control valve bench testing ...	32-33	03-06
Loader installation – removal .....	28 to 32	03-06	Pressure relief valve testing .....	33	03-06
Implement installation – removal .....	33 to 36	03-06	Power steering pump components .....	34-35	03-06
Lift arm types and functions	37 to 45	03-06	Disassembly – Assembly of hydraulic pump to replace seal kit .....	35	03-06
Smooth ride control .....	46 to 48	03-06	Removal-Installation – steering cylinder .....	36-37	03-06
Multi Quick coupler connection – disconnection ..	49 to 60	03-06	<b>44 – AXLES AND WHEELS</b>		
Hydraulic functions and flow diagram of loaders ..	61 to 71	03-06	Summary .....	1	03-06
Hydraulic Flow Diagrams ..	72 to 88	03-06	Data .....	1	03-06
Repair instructions .....	89 to 94	03-06	Front wheel track diagram	2	03-06
Hydraulic components ...	95 to 99	03-06	Cross-sectional views ...	3	03-06
Troubleshooting .....	100 to 105	03-06	Tightening Torques .....	4-5	03-06
			Tools .....	5	03-06
			Fault diagnosis .....	5	03-06
			Disassembly-Assembly – wheel axle hub .....	6 to 8	03-06
			Removal-Installation – front axle .....	9 to 11	03-06
			Stub axle hub overhaul ...	12 to 14	03-06
			Checking leading wheel alignment .....	15-16	03-06

(\*) Chapters prior to section 35 are in volume 1.



	Page	Date		Page	Date
<b>50 – SUBSIDIARY PARTS</b>					
Summary .....	1	03-06	Control panel .....	2-3	03-06
Safety regulations .....	2	03-06	Analog/digital instruments	4	03-06
Data .....	3-4	03-06	Liquid crystal display .....	5 to 7	03-06
Tools .....	4	03-06	Access to the setup menu via keypad .....	8-13	03-06
Operating principles .....	5-6	03-06	Calling up functions from keypad .....	13 to 16	03-06
Conditioning system com- ponents .....	7 to 11	03-06	Access to the setup menu with the CAL button .....	17-18	03-06
Warnings for air condition- ing system repair oper- ations .....	11	03-06	Calling up functions with the CAL button .....	18	03-06
Cab controls .....	12 to 14	03-06	Transmitters, sensors and switches .....	19-26	03-06
Instructions for use – air conditioning system .....	15	03-06	Maintenance .....	26	03-06
Air-conditioning system charging and evacuation recovery/recycling station	15	03-06	<b>CHAPTER 2 – Components</b>		
Leak detector .....	16	03-06	Summary .....	1	03-06
Air conditioning system maintenance .....	17	03-06	Introduction .....	1	03-06
Troubleshooting .....	18	03-06	Dashboard controls .....	2 to 8	03-06
Fault diagnosis .....	19 to 22	03-06	Right mudguard controls .	9 to 11	03-06
System functional testing .	23	03-06	In-Cab Controls .....	12 to 14	03-06
Checking for and eliminat- ing gas leaks .....	24	03-06	Controls on right-hand cab upright .....	15-16	03-06
Compressor drive belt ten- sion adjustment .....	25-26	03-06	External controls .....	17	03-06
Removal-Installation – compressor .....	27 to 29	03-06	Maintenance .....	18-19	03-06
Heating and air condition- ing systems piping re- placement .....	30-31	03-06	<b>CHAPTER 3 – Components</b>		
Air conditioning piping re- placement .....	32 to 37	03-06	Summary .....	1	03-06
Condenser replacement	38	03-06	Technical data .....	1	03-06
Dryer filter replacement ..	39-40	03-06	Tightening Torques .....	1	03-06
Removal-Installation – heater unit .....	41 to 43	03-06	Description and Operation	2	03-06
Replacing the air-condi- tioner evaporator .....	44 to 46	03-06	Fault diagnosis .....	3	03-06
Removal-Installation – electric fan .....	47-48	03-06	Starting and recharging cir- cuit (pre-modification) ...	4-5	03-06
<b>55 – ELECTRICAL SYSTEM</b>			Starting and recharging cir- cuit (post-modification) ..	6-7	03-06
<b>CHAPTER 1 – Instruments</b>			System testing .....	8 to 10	03-06
Summary .....	1	03-06	Starter motor removal, in- stallation and overhaul ...	10 to 13	03-06
			Bench testing .....	13-14	03-06
			<b>CHAPTER 4 – Charging system</b>		
			Summary .....	1	03-06
			Technical data .....	1	03-06
			Tightening Torques .....	1	03-06
			Description and Operation	2-3	03-06
			System testing and troubleshooting .....	4 to 9	03-06

	Page	Date		Page	Date
Removal, Installation and Overhaul .....	10	03-06	Power Shuttle ISO deck version .....	107 to 130	03-06
Alternator components ...	11	03-06	Power Shuttle NASO deck version .....	131 to 154	03-06
Tests .....	12 to 14	03-06	Dual Command (2 Speed Power Shift) ISO deck version .....	155 to 178	03-06
Disassembly .....	15	03-06	Dual Command (2 Speed Power Shift) NASO deck version .....	179 to 202	03-06
Electronic voltage regulator	15 to 16	03-06	Control unit input – output diagrams .....	203 to 208	03-06
Inductor winding insulation test .....	16-17	03-06			
Overhaul, installation ....	17-18	03-06			
<b>CHAPTER 5 – Battery</b>			<b>CHAPTER 7 – Electrical circuits (post-modification)</b>		
Summary .....	1	03-06	Summary .....	1	03-06
Technical data .....	1	03-06	Maxi power fuses box ....	02 to 04	03-06
Description & Operation ..	1	03-06	Fuse and relay box .....	04 to 22	03-06
Removal-Installation – battery .....	2-3	03-06	Power sockets .....	23	03-06
Battery maintenance .....	4 to 5	03-06	Grid Heater .....	24	03-06
Battery Charging .....	5-6	03-06	Electronic flasher .....	24	03-06
Battery testing .....	6 to 8	03-06	How to use the linear wiring diagrams .....	25 to 27	03-06
Battery problems – frequent causes .....	8	03-06	Ground location points ...	28-29	03-06
			Electric wire colour code .	30	03-06
<b>CHAPTER 6 – Electrical circuits (pre-modification)</b>			Symbols used in electrical circuits .....	31-32	03-06
Summary .....	1	03-06	Wiring diagram components .....	33 to 40	03-06
Maxi power fuses box ....	2 to 4	03-06	Power Shuttle cab version	41 to 76	03-06
Fuse and relay box .....	4 to 16	03-06	Dual Command (2 Speed Power Shift) cab version .	77 to 112	03-06
Power sockets .....	17	03-06	Power Shuttle ISO deck version .....	113 to 136	03-06
Operator safety circuit ...	18	03-06	Power Shuttle NASO deck version .....	137 to 160	03-06
Grid Heater .....	18-19	03-06	Dual Command (2 Speed Power Shift) ISO deck version .....	161 to 184	03-06
Electronic flasher .....	19	03-06	Dual Command (2 Speed Power Shift) NASO deck version .....	185 to 207	03-06
Ground location points ...	20-21	03-06	Control unit input – output diagrams .....	208 to 214	03-06
How to use the linear wiring diagrams .....	22 to 24	03-06			
Symbols used in electrical circuits .....	25-26	03-06			
Electric wire colour code .	26	03-06			
Wiring diagram components .....	27 to 34	03-06			
Power Shuttle cab version	35 to 70	03-06			
Dual Command (2 Speed Power Shift) cab version .	71 to 106	03-06			

**CONTENTS VOLUME 3**

	Page	Date		Page	Date
<b>55 - ELECTRICAL SYSTEM (*)</b>			14001-15000 (Analog-digital control panel) . . . . .	336 to 404	03-06
<b>CHAPTER 8 - Connectors</b>			Electronically controlled hydraulic lift (EDC) . . . . .	405 to 482	03-06
Summary . . . . .	1	03-06	<b>CHAPTER 11 - HH menu and calibrations</b>		
Electrical circuits components . . . . .	2 to 6	03-06	Summary . . . . .	1	03-06
Wirings (pre-modification) . . . . .	7 to 26	03-06	Calibrations . . . . .	2	03-06
Wirings (post-modification) . . . . .	27 to 46	03-06	HH MENU access . . . . .	3-4	03-06
List of connectors . . . . .	47 to 94	03-06	HH MENU of the control panel . . . . .	5 to 11	03-06
<b>CHAPTER 9 - Components Testing</b>			HH MENU of the transmission . . . . .	12 to 25	03-06
Summary . . . . .	1	03-06	HH MENU of the advanced keypad . . . . .	25-26	03-06
Tests on switches, sensors and pressure switches . . . . .	02 to 18	03-06	<b>90 - BODYWORK AND DRIVING POSITION</b>		
Removal-Installation wind-screen wiper motor . . . . .	19	03-06	Summary . . . . .	1	03-06
<b>CHAPTER 10 - Error codes</b>			Removal-Installation - bonnet . . . . .	2-3	03-06
Summary . . . . .	1	03-06	Removal-Installation - platform . . . . .	4 to 11	03-06
Introduction . . . . .	2	03-06	Removal-Installation - driver's seat . . . . .	12	03-06
Special Attachments . . . . .	3	03-06	Cab Removal-Installation . . . . .	13 to 25	03-06
Repairing the wiring . . . . .	3	03-06	Removal-Installation - door . . . . .	26	03-06
Digital multimeter . . . . .	6 to 8	03-06	Replacement of glued cab windows . . . . .	27-28	03-06
Electrical test procedures . . . . .	9-11	03-06	Replacement of cab rear window . . . . .	29 to 31	03-06
Circuit components . . . . .	11 to 20	03-06	Replacement of seal on left-hand upright . . . . .	32	03-06
CAN system . . . . .	21	03-06	Replacement of seal on right-hand upright . . . . .	33-34	03-06
Control unit location . . . . .	21	03-06	Replacement of fixed padding on right-hand wall . . . . .	35 to 37	03-06
Error code display . . . . .	22 to 24	03-06	Replacement of fixed padding on left-hand wall . . . . .	38-39	03-06
"H" menu diagnostic mode . . . . .	24	03-06	Replacing hydraulic control lever guard . . . . .	40-41	03-06
Error codes lists . . . . .	25 to 30	03-06	Replacing cab ceiling fittings . . . . .	42-43	03-06
<b>Error codes charts</b>					
Calibration U-Codes . . . . .	31 to 34	03-06			
2001-3000 (Transmission) . . . . .	35 to 280	03-06			
5001-6000 (Rear PTO) . . . . .	281 to 308	03-06			
6001-7000 (4WD) . . . . .	309 to 319	03-06			
7001-8000 (Differential lock) . . . . .	320 to 335	03-06			

(\*) Chapters prior to section **55** are in **volume 2**.

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**