

TVT 135, TVT 145, TVT 155, TVT 170, TVT 190, TVT 195 Tractors

Service - Manual Sva 6035448106

Table of Contents Volume 1 - 3

	Section	Pub. No.
TABLE OF CONTENTS - VOLUME 1		
2 ENGINE		
Workshop Manual.....	2002	6-51250
Workshop Manual (TVT 195)	2002A	6-93080
3 FUEL SYSTEM		
Functional description Injection System	3001	6-51300
Functional description Injection System - Common Rail System (TVT 195)	3001A	6-93150
4 ELECTRICAL		
Functional description CAN Bus (Basics).....	4002	6-51350
Functional description and Troubleshooting – ADIC	4003	6-91700
Function diagrams - Electrics	4008	6-92771
Function diagrams - Electrics (TVT 195)	4008A	6-93221
Connectors, Wiring Harnesses, Electrical and Electronic Components	4009	6-92970
Connectors, Wiring Harnesses, Electrical and Electronic Components (TVT 195) ..	4009A	6-93290
Circuit diagram	4010	6-51402
Circuit diagram (TVT 195)	4010A	6-93360
TABLE OF CONTENTS - VOLUME 2		
4 ELECTRICAL		
Fault codes	4011	6-52632
TABLE OF CONTENTS - VOLUME 3		
5 STEERING SYSTEM		
Functional description, Troubleshooting and Settings		
Front Axle with Independent Suspension 20.25S.....	5001	6-51450
Functional description, Troubleshooting and Settings		
Front Axle with Independent Suspension 20.29S.....	5002	6-51500
Workshop Manual - Front Axle - Carraro 20.25, 20.25 FR.....	5005	6-51550
Workshop Manual - Independently Suspended Front Axle 20.25S and 20.25SI FR.....	5006	6-51600
Workshop Manual - Independently Suspended Front Axle 20.29SI / FR	5007	6-51651
6 TRANSMISSION		
Functional description Transmission	6001	6-51700
Troubleshooting - System hydraulics	6002	6-51750
Cartridge - Removing and Fitting.....	6005	6-51800
Cartridge - Disassembling and Assembling.....	6006	6-51850
Rear Axle - Removing and Fitting.....	6007	6-51900
Rear Axle - Disassembling and Assembling.....	6008	6-51950
Parking Interlock, 4-wheel Drive Clutch and Bevel Pinion (Rear Module).....	6009	6-52000

8 HYDRAULIC SYSTEM

Functional description CC-LS Hydraulic System (Closed Center-Load Sensing)....	8001	6-52051
Functional description and troubleshooting		
High Pressure Hydraulic Circuit.....	8002	6-92610
Functional description and troubleshooting		
(Electronic 3-point hitch control system EDC)	8005	6-52100
Fault codes and fault description, EHS Auxiliary Control Units	8006	6-52150

9 CABIN

Functional description and troubleshooting Air Conditioning.....	9002	6-92840
--	------	---------

TABLE OF CONTENTS

SPECIAL TOOLS	5
FOR THE USER	7
Engine code and serial number	7
SAFETY REGULATIONS	8
ENGINE DATA	9
Lifting the engine	9
TECHNICAL DATA	10
Conformance with exhaust standards	10
Cylinder block	10
Cylinder liners	10
Cylinder head	10
Valves, rocker arms and push rods	11
Camshaft	12
Crankshaft	12
Flywheel	13
Gear drive, camshaft and injection pump	13
Con-rods	13
Pistons, piston rings and piston pins	14
Lubrication system	14
Lubrication oil pump	15
Thermostat	15
Coolant temperature indication and monitoring (signal from sensor B22)	15
Coolant pump	15
Schwitzer turbocharger S200	15
Tightening torques	16
CONSTRUCTION	17
General	17
Cylinder block	17
Flywheel casing	17
Cylinder head	18
Valve mechanism	18
Crankshaft drive	20
Timing gears	21
Lubrication system	22
Cooling system	23
Fan	24
Intake/exhaust system	25

ELECTRONIC ENGINE CONTROL SYSTEM – EEM2	26
Layout	27
Signals	28
Function	28
JOB INSTRUCTIONS	29
1. Cylinder block	29
A. Measuring the cylinder liner wear	29
B. Removing the cylinder liner	29
C. Checking the cylinder block	29
D. Replacing the camshaft bearing bush	29
E. Oversize bearing bushes for the camshaft	30
F. Fitting the plug at the rear camshaft end	31
G. Fitting the plug at the rear camshaft end after inserting an oversize bearing bush ..	31
H. Installing the oil dipstick tube	31
I. Fitting the cylinder liner	31
2. Flywheel casing	33
A. Fitting the flywheel casing	33
B. Replacing the rear crankshaft sealing ring	33
3. Cylinder head	34
A. Removing the cylinder head	34
B. Removing the valves	34
C. Checking the cylinder head	34
D. Replacing the valve guides	35
E. Machining the valve seat	36
F. Replacing the valve seat rings	36
G. Grinding the valves	36
H. Fitting the valves	37
I. Fitting the cylinder head	37
4. Valve mechanism	38
A. Maintenance of the rocker arm system	38
B. Replacing the camshaft/camshaft gear wheel	38
C. Checking and adjusting the valve clearance	39
5. Crankshaft	40
A. Removing the crankshaft	40
B. Checking the crankshaft	40
C. Replacing the crankshaft gear wheels	40
D. Fitting the crankshaft	41
E. Crankshaft hub	41
F. Replacing the crankshaft belt pulley and the vibration damper	42
G. Checking the rubber element in the vibration damper	42
6. Pistons and con-rods	43
A. Removing the pistons together with the con-rods	43
B. Checking and replacing the con-rod bearings	43
C. Checking the con-rod	43
D. Checking and replacing the piston rings	44
E. Checking the pistons	45
F. Fitting the piston pin	45
G. Fitting the pistons and con-rods	45

7. Flywheel	46
A. Replacing the starter ring gear on the flywheel	46
B. Fitting the flywheel	46
8. Timing mechanism	47
A. Removing the timing gear case	47
B. Replacing the intermediate gear wheel bearing bush	47
C. Fitting the timing gear case	48
9. Lubrication system	50
A. Checking the oil pressure valve	50
B. Removing and checking the oil pump	50
C. Assembling and fitting the oil pump	50
D. Fitting the sump	51
E. Oil cooler	51
F. Piston cooling nozzles	52
G. Recommended lubrication oils	52
10. Cooling system	53
A. Thermostat	53
B. Repairing the coolant pump	53
C. Coolant quality requirements	54
11. Intake/exhaust system	55
A. Checking the air filter	55
B. Checking the intake/exhaust system	55
C. Checking the boost pressure	55
D. Checking the turbocharger	56
E. Fitting the turbocharger	57

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**