

SERVICE MANUAL

T4.55 / T4.65 / T4.75

PowerStar - Tractor

PIN ZDAH00008 and above

Part number 47772169

English

September 2014





SERVICE MANUAL

T4.55 Powerstar™ without cab, Tier 4B (Final) [ZxAHxxxxx], T4.55 Powerstar™ with cab, Tier 4B (Final) [ZxAHxxxxx], T4.65 Powerstar™ without cab, Tier 4B (Final) [ZxAHxxxxx], T4.65 Powerstar™ with cab, Tier 4B (Final) [ZxAHxxxxx], T4.75 Powerstar™ without cab, Tier 4B (Final) [ZxAHxxxxx], T4.75 Powerstar™ with cab, Tier 4B (Final) [ZxAHxxxxx]

Link Product / Engine

| Product | Market Product | Engine |
|---|-----------------------|----------------|
| T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Europe | F5DFL463C*F004 |
| T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Australia New Zealand | F5DFL463C*F004 |
| T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Asia Pacific | F5DFL463C*F004 |
| T4.55 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Middle East Africa | F5DFL463C*F004 |
| T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Europe | F5DFL463C*F004 |
| T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Australia New Zealand | F5DFL463C*F004 |
| T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Asia Pacific | F5DFL463C*F004 |
| T4.55 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Middle East Africa | F5DFL463C*F004 |
| T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Asia Pacific | F5DFL463B*F006 |
| T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Middle East Africa | F5DFL463B*F006 |
| T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Australia New Zealand | F5DFL463B*F006 |
| T4.65 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Europe | F5DFL463B*F006 |
| T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Middle East Africa | F5DFL463B*F006 |
| T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Australia New Zealand | F5DFL463B*F006 |
| T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Europe | F5DFL463B*F006 |
| T4.65 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Asia Pacific | F5DFL463B*F006 |
| T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Asia Pacific | F5DFL463A*F017 |
| T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Europe | F5DFL463A*F017 |
| T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Australia New Zealand | F5DFL463A*F017 |
| T4.75 Powerstar™ senza cabina, Tier 4B (Finale) [ZxAHxxxxx] | Middle East Africa | F5DFL463A*F017 |
| T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Europe | F5DFL463A*F017 |
| T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Australia New Zealand | F5DFL463A*F017 |
| T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Asia Pacific | F5DFL463A*F017 |
| T4.75 Powerstar™ con cabina, Tier 4B (Finale) [ZxAHxxxxx] | Middle East Africa | F5DFL463A*F017 |

Contents

INTRODUCTION

| | |
|--|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment | 10.3 |
| [10.414] Fan and drive | 10.4 |
| Clutch | 18 |
| [18.100] Clutch mechanical release control | 18.1 |
| [18.104] Clutch hydraulic release control..... | 18.2 |
| [18.110] Clutch and components | 18.3 |
| Transmission | 21 |
| [21.114] Mechanical transmission | 21.1 |
| [21.140] Mechanical transmission internal components..... | 21.2 |
| [21.112] Power shuttle transmission..... | 21.3 |
| [21.134] Power shuttle transmission external controls | 21.4 |
| [21.104] Power shuttle transmission lubrication system..... | 21.5 |
| [21.154] Power shuttle transmission internal components | 21.6 |
| [21.160] Creeper | 21.7 |
| [21.162] Reverser | 21.8 |
| [21.109] Transmission cooler and lines..... | 21.9 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |

| | |
|--|-----------|
| [25.400] Non-powered front axle | 25.4 |
| Rear axle system..... | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Power Take-Off (PTO)..... | 31 |
| [31.101] Rear mechanical control | 31.1 |
| [31.104] Rear electro-hydraulic control..... | 31.2 |
| [31.110] One-speed rear Power Take-Off (PTO) | 31.3 |
| [31.114] Two-speed rear Power Take-Off (PTO) | 31.4 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| [33.110] Parking brake or parking lock | 33.2 |
| [33.220] Trailer brake hydraulic control..... | 33.3 |
| Hydraulic systems..... | 35 |
| [35.104] Fixed displacement pump..... | 35.1 |
| [35.204] Remote control valves | 35.2 |
| [35.114] Three-point hitch control valve | 35.3 |
| [35.116] Three-point hitch cylinder | 35.4 |
| [35.701] Front loader arm hydraulic system | 35.5 |
| [35.723] Front loader bucket hydraulic system | 35.6 |
| Hitches, drawbars, and implement couplings..... | 37 |
| [37.100] Drawbars and towing hitches | 37.1 |
| [37.110] Rear three-point hitch | 37.2 |
| Steering..... | 41 |
| [41.106] Tie rods..... | 41.1 |
| [41.206] Pump | 41.2 |

| | |
|--|-----------|
| [41.101] Steering control | 41.3 |
| [41.200] Hydraulic control components..... | 41.4 |
| [41.216] Cylinders | 41.5 |
| Wheels | 44 |
| [44.511] Front wheels..... | 44.1 |
| [44.520] Rear wheels | 44.2 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.104] Ventilation | 50.2 |
| [50.200] Air conditioning..... | 50.3 |
| Electrical systems | 55 |
| [55.100] Harnesses and connectors..... | 55.1 |
| [55.201] Engine starting system | 55.2 |
| [55.301] Alternator..... | 55.3 |
| [55.302] Battery..... | 55.4 |
| [55.640] Electronic modules | 55.5 |
| [55.048] Rear Power Take-Off (PTO) control system | 55.6 |
| [55.408] Warning indicators, alarms, and instruments | 55.7 |
| [55.DTC] FAULT CODES..... | 55.8 |
| Front loader and bucket..... | 82 |
| [82.100] Arm..... | 82.1 |
| [82.300] Bucket..... | 82.2 |
| [82.AAA] Front loader and bucket generic sub-group..... | 82.3 |
| Platform, cab, bodywork, and decals | 90 |
| [90.150] Cab..... | 90.1 |
| [90.151] Cab interior..... | 90.2 |
| [90.160] Cab interior trim and panels..... | 90.3 |
| [90.154] Cab doors and hatches | 90.4 |

[90.110] Operator platform less cab 90.5

[90.100] Engine hood and panels 90.6

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**