

SERVICE MANUAL

T4.75F / T4.85F / T4.95F / T4.105F
T4.75LP / T4.85LP / T4.95LP / T4.105LP
Tractor

Part number 47888360
English
July 2016





SERVICE MANUAL

**T4.105F With cab [ZDJD11527 -], T4.105F Without cab [ZDJD11911 -],
T4.105LP With cab [ZFJD00717 -], T4.105LP Without cab [ZEJD00007 -
], T4.75F With cab [ZDJD10166 -], T4.75F Without cab [ZDJD10836 -],
T4.75LP With cab [ZFJD01559 -], T4.75LP Without cab [ZFJD01319 -],
T4.85F With cab [ZDJD11099 -], T4.85F Without cab [ZDJD11022 -], T4.85LP
With cab [ZFJD01714 -], T4.85LP Without cab [ZFJD00163 -], T4.95F With
cab [ZDJD10640 -], T4.95F Without cab [ZDJD10215 -], T4.95LP With cab
[ZFJD01191 -], T4.95LP Without cab [ZFJD00162 -]**

Link Product / Engine

Product	Market Product	Engine
T4.105F With cab [ZDJD11527 -]	Middle East Africa	F4CE9484
T4.105F With cab [ZDJD11527 -]	Europe	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Middle East Africa	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Europe	F4CE9484
T4.75F With cab [ZDJD10166 -]	Europe	F5AE9484B
T4.75F With cab [ZDJD10166 -]	Middle East Africa	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Europe	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Middle East Africa	F5AE9484B
T4.85F With cab [ZDJD11099 -]	Middle East Africa	F5AE9484G
T4.85F With cab [ZDJD11099 -]	Europe	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Europe	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Middle East Africa	F5AE9484G
T4.95F With cab [ZDJD10640 -]	Middle East Africa	F4CE9484
T4.95F With cab [ZDJD10640 -]	Europe	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Europe	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Middle East Africa	F4CE9484
T4.105LP With cab [ZFJD00717 -]	Middle East Africa	F4CE9484
T4.105LP With cab [ZFJD00717 -]	Europe	F4CE9484
T4.105LP Without cab [ZEJD00007 -]	Middle East Africa	F4CE9484
T4.105LP Without cab [ZEJD00007 -]	Europe	F4CE9484
T4.75LP With cab [ZFJD01559 -]	Europe	F5AE9484B
T4.75LP With cab [ZFJD01559 -]	Middle East Africa	F5AE9484B
T4.75LP Without cab [ZFJD01319 -]	Europe	F5AE9484B
T4.75LP Without cab [ZFJD01319 -]	Middle East Africa	F5AE9484B
T4.85LP With cab [ZFJD01714 -]	Europe	F5AE9484G
T4.85LP With cab [ZFJD01714 -]	Middle East Africa	F5AE9484G
T4.85LP Without cab [ZFJD00163 -]	Europe	F5AE9484G
T4.85LP Without cab [ZFJD00163 -]	Middle East Africa	F5AE9484G
T4.95LP With cab [ZFJD01191 -]	Europe	F4CE9484
T4.95LP With cab [ZFJD01191 -]	Middle East Africa	F4CE9484
T4.95LP Without cab [ZFJD00162 -]	Middle East Africa	F4CE9484
T4.95LP Without cab [ZFJD00162 -]	Europe	F4CE9484

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
[18.100] Clutch mechanical release control	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.118] Transmission/Rear drive	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.160] Creeper	21.7
[21.162] Reverser	21.8
[21.168] Hi-Lo unit.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO)	31
[31.101] Rear mechanical control.....	31.1
[31.146] Front Power Take-Off (PTO).....	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes.....	33.1
[33.110] Parking brake or parking lock.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves.....	35.4
[35.600] High flow hydraulics.....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve.....	35.7
[35.116] Three-point hitch cylinder.....	35.8
[35.160] Front hitch controls and lines.....	35.9
[35.410] Header or attachment height system.....	35.10
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch.....	37.1
[37.162] Front hitch.....	37.2
Steering	41
[41.101] Steering control.....	41.1

[41.200] Hydraulic control components.....	41.2
Wheels.....	44
[44.511] Front wheels.....	44.1
Cab climate control.....	50
[50.100] Heating.....	50.1
[50.104] Ventilation.....	50.2
[50.200] Air conditioning.....	50.3
Electrical systems.....	55
[55.000] Electrical system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.202] Cold start aid.....	55.6
[55.640] Electronic modules.....	55.7
[55.048] Rear Power Take-Off (PTO) control system.....	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.523] Cab hitch controls.....	55.11
[55.130] Rear three-point hitch electronic control system.....	55.12
[55.518] Wiper and washer system.....	55.13
[55.404] External lighting.....	55.14
[55.514] Cab lighting.....	55.15
[55.511] Light harnesses.....	55.16
[55.408] Warning indicators, alarms, and instruments.....	55.17
[55.DTC] FAULT CODES.....	55.18
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1

[90.151] Cab interior..... 90.2

[90.154] Cab doors and hatches 90.3

[90.160] Cab interior trim and panels..... 90.4

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**