

# SERVICE MANUAL

**T7.220 / T7.235 / T7.250 / T7.260 / T7.270 Auto Command**  
**T7.220 / T7.235 / T7.250 / T7.260 Power Command**  
Tractor

Part number 47524331

English  
May 2013





## SERVICE MANUAL



**T7.220 AutoCommand , T7.220 Power Command , T7.235 AutoCommand ,  
T7.235 Power Command , T7.250 AutoCommand , T7.250 Power Command ,  
T7.260 AutoCommand , T7.260 Power Command , T7.270 AutoCommand**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T7.220 Power Command	Europe	F4DFE613L*A
T7.220 Power Command	North America	F4DFE613L*A
T7.220 Power Command	International Region	F4DFE613L*A
T7.235 Power Command	Europe	F4DFE613K*A
T7.235 Power Command	International Region	F4DFE613K*A
T7.235 Power Command	North America	F4DFE613K*A
T7.250 Power Command	North America	F4DFE613J*A
T7.250 Power Command	International Region	F4DFE613J*A
T7.250 Power Command	Europe	F4DFE613J*A
T7.260 Power Command	North America	F4DFE613H*A
T7.260 Power Command	Europe	F4DFE613H*A
T7.260 Power Command	International Region	F4DFE613H*A
T7.220 AutoCommand	Europe	F4DFE613L*A
T7.220 AutoCommand	International Region	F4DFE613L*A
T7.235 AutoCommand	International Region	F4DFE613K*A
T7.235 AutoCommand	Europe	F4DFE613K*A
T7.235 AutoCommand	North America	F4DFE613K*A
T7.250 AutoCommand	North America	F4DFE613J*A
T7.250 AutoCommand	Europe	F4DFE613J*A
T7.250 AutoCommand	International Region	F4DFE613J*A
T7.260 AutoCommand	Europe	F4DFE613H*A
T7.260 AutoCommand	North America	F4DFE613H*A
T7.260 AutoCommand	International Region	F4DFE613H*A
T7.270 AutoCommand	North America	F4DFE613G*A
T7.270 AutoCommand	International Region	F4DFE613G*A
T7.270 AutoCommand	Europe	F4DFE613G*A

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.102] Pan and covers .....	10.2
[10.216] Fuel tanks .....	10.3
[10.210] Lift pump and lines .....	10.4
[10.218] Fuel injection system.....	10.5
[10.250] Turbocharger and lines.....	10.6
[10.254] Intake and exhaust manifolds and muffler .....	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
[10.400] Engine cooling system .....	10.9
[10.414] Fan and drive .....	10.10
[10.408] Oil cooler and lines.....	10.11
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.155] Powershift transmission internal components.....	21.2
[21.160] Creeper .....	21.3
[21.166] Overdrive.....	21.4
[21.504] Continuously Variable Transmission (CVT) .....	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.7
[21.507] Continuously Variable Transmission (CVT) internal components .....	21.8
[21.109] Transmission cooler and lines.....	21.9
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
<b>Front axle system</b> .....	<b>25</b>

[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control .....	25.4
<b>Rear axle system .....</b>	<b>27</b>
[27.100] Powered rear axle .....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.4
[31.119] Four-speed rear Power Take-Off (PTO) .....	31.5
[31.146] Front Power Take-Off (PTO) .....	31.6
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control .....	33.3
[33.224] Trailer brake pneumatic control .....	33.4
[33.350] Anti-lock Brake System (ABS) .....	33.5
<b>Hydraulic systems .....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.300] Reservoir, cooler, and filters .....	35.2
[35.106] Variable displacement pump .....	35.3
[35.102] Pump control valves .....	35.4
[35.105] Charge pump .....	35.5
[35.322] Regulated/Low pressure system .....	35.6

[35.204] Remote control valves .....	35.7
[35.220] Auxiliary hydraulic pump and lines .....	35.8
[35.114] Three-point hitch control valve .....	35.9
[35.160] Front hitch controls and lines .....	35.10
[35.162] Front hitch cylinders and lines .....	35.11
<b>Pneumatic system .....</b>	<b>36</b>
[36.100] Pneumatic system.....	36.1
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.110] Rear three-point hitch .....	37.3
[37.106] Automatic pickup hitch .....	37.4
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4
[41.432] Autoguidance steering .....	41.5
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>

- [55.610] Ground speed control ..... 55.1
- [55.000] Electrical system ..... 55.2
- [55.100] Harnesses and connectors..... 55.3
- [55.015] Engine control system..... 55.4
- [55.301] Alternator..... 55.5
- [55.302] Battery..... 55.6
- [55.988] Selective Catalytic Reduction (SCR) electrical system ..... 55.7
- [55.640] Electronic modules..... 55.8
- [55.513] Cab transmission controls..... 55.9
- [55.024] Transmission control system..... 55.10
- [55.020] Transmission speed sensors..... 55.11
- [55.021] Transmission pressure sensors ..... 55.12
- [55.022] Transmission temperature sensors ..... 55.13
- [55.045] Front axle control system ..... 55.14
- [55.048] Rear Power Take-Off (PTO) control system ..... 55.15
- [55.049] Front Power Take-Off (PTO) control system ..... 55.16
- [55.031] Parking brake electrical system ..... 55.17
- [55.035] Remote control valve electric control ..... 55.18
- [55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls..... 55.19
- [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... 55.20
- [55.047] Steering control system ..... 55.21
- [55.523] Cab hitch controls ..... 55.22
- [55.130] Rear three-point hitch electronic control system ..... 55.23
- [55.911] Global Positioning System (GPS) ..... 55.24
- [55.680] Autopilot/Autoguidance ..... 55.25
- [55.408] Warning indicators, alarms, and instruments ..... 55.26
- [55.350] Anti-lock Brake System (ABS) electrical system..... 55.27
- [55.032] Trailer brake electrical system ..... 55.28
- [55.030] Service brake electrical system ..... 55.29

[55.DTC] FAULT CODES.....	55.30
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.150] Cab.....	90.2



**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**