

# SERVICE MANUAL

**T8.275 / T8.300 / T8.330 /  
T8.360 / T8.390 / T8.420  
(CVT)  
Tractor**


*PIN ZCRC02586 and above*

Part number 47533595

English  
May 2013



## SERVICE MANUAL

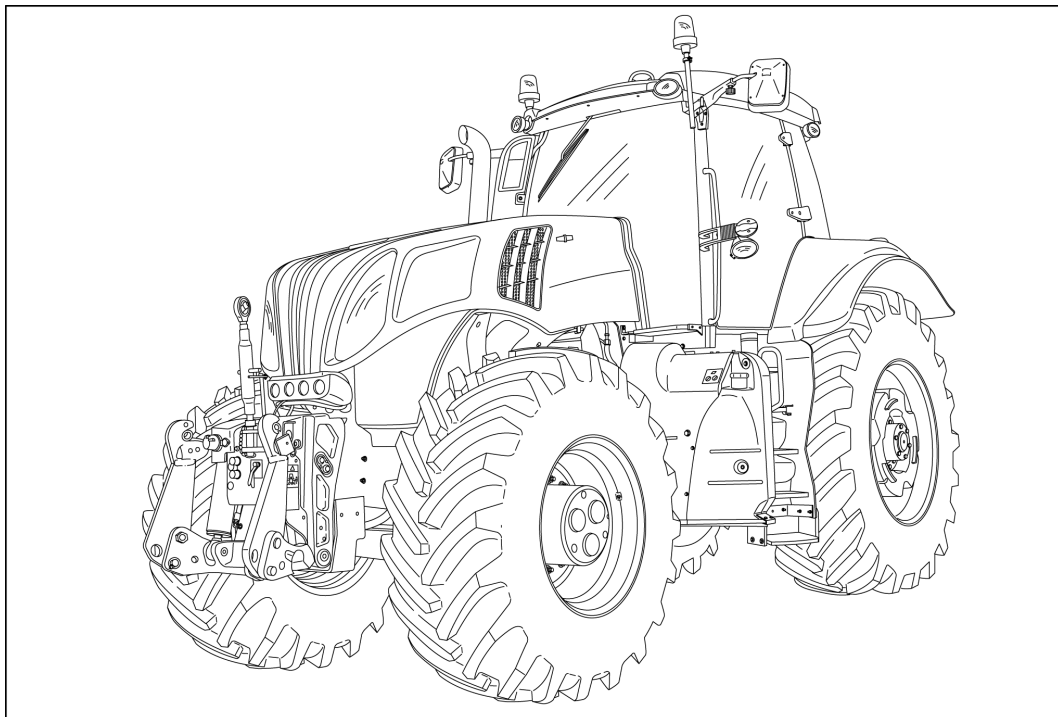

**T8.275 [ZCRC02586 - ] , T8.300 [ZCRC02586 - ] , T8.330 [ZCRC02586 - ] ,  
T8.360 [ZCRC02586 - ] , T8.390 [ZCRC02586 - ] , T8.420 [ZCRC02586 - ]**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.114] Pump drives .....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.216] Fuel tanks .....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment .....	10.9
Power coupling.....	19
[19.100] Drive shaft.....	19.1
Transmission.....	21
[21.504] Continuously Variable Transmission (CVT) .....	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.3
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO).....	31.2
[31.114] Two-speed rear Power Take-Off (PTO).....	31.3
[31.146] Front Power Take-Off (PTO).....	31.4
<b>Brakes and controls.....</b>	<b>33</b>
[33.110] Parking brake or parking lock.....	33.1
[33.202] Hydraulic service brakes.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control.....	33.4
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump.....	35.3
[35.114] Three-point hitch control valve.....	35.4
[35.124] Three-point hitch hydraulic adjustment.....	35.5
[35.204] Remote control valves.....	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units.....	35.8
<b>Pneumatic system.....</b>	<b>36</b>
[36.100] Pneumatic system.....	36.1
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch.....	37.1
[37.162] Front hitch.....	37.2
<b>Steering.....</b>	<b>41</b>

[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.200] Air conditioning .....	50.2
[50.300] Cab pressurizing system.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.012] Engine cooling system .....	55.1
[55.015] Engine control system.....	55.2
[55.024] Transmission control system.....	55.3
[55.045] Front axle control system .....	55.4
[55.046] Rear axle control system.....	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.7
[55.100] Harnesses and connectors.....	55.8
[55.130] Rear three-point hitch electronic control system .....	55.9
[55.201] Engine starting system .....	55.10
[55.301] Alternator.....	55.11
[55.302] Battery.....	55.12
[55.404] External lighting .....	55.13
[55.405] External lighting switches and relays .....	55.14
[55.408] Warning indicators, alarms, and instruments .....	55.15
[55.512] Cab controls.....	55.16
[55.514] Cab lighting .....	55.17
[55.518] Wiper and washer system.....	55.18
[55.640] Electronic modules.....	55.19
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.20
[55.DTC] FAULT CODES.....	55.21

Platform, cab, bodywork, and decals .....	90
[90.100] Engine hood and panels .....	90.1
[90.102] Engine shields, hood latches, and trims .....	90.2
[90.118] Protections and footboards.....	90.3
[90.124] Pneumatically-adjusted operator seat.....	90.4
[90.150] Cab.....	90.5
[90.151] Cab interior.....	90.6
[90.160] Cab interior trim and panels.....	90.7

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**