


SERVICE MANUAL

TD5.65 / TD5.75 / TD5.85
TD5.95 / TD5.105 / TD5.115
Tractor

Part number 47445474

English
August 2013



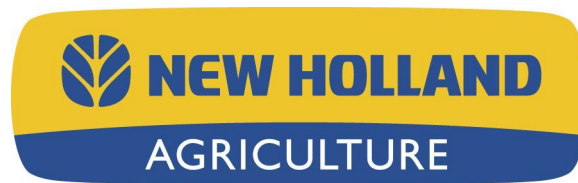

SERVICE MANUAL

TD5.105 , TD5.115 , TD5.65 , TD5.75 , TD5.85 , TD5.95

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.103] Crankshaft and flywheel.....	10.3
[10.218] Fuel injection system.....	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.120] Gearbox	21.4
[21.154] Power shuttle transmission internal components	21.5
[21.160] Creeper	21.6
[21.162] Reverser	21.7
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.124] Final drive hub, steering knuckles, and shafts.....	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control.....	31.1
Brakes and controls.....	33
[33.AAA] Brakes and controls generic sub-group.....	33.1
[33.202] Hydraulic service brakes.....	33.2
[33.110] Parking brake or parking lock.....	33.3
[33.220] Trailer brake hydraulic control.....	33.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.350] Safety and main relief valves.....	35.2
[35.525] Auxiliary hydraulic valves and lines.....	35.3
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders.....	41.3
Wheels.....	44
[44.511] Front wheels.....	44.1
Cab climate control.....	50
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
Electrical systems.....	55
[55.000] Electrical system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4

[55.302] Battery.....	55.5
[55.512] Cab controls.....	55.6
[55.518] Wiper and washer system.....	55.7
[55.408] Warning indicators, alarms, and instruments	55.8
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.154] Cab doors and hatches	90.3
[90.105] Machine shields and guards	90.4

Thank you very much for your reading. Please Click Here. Then Get COMPLETE MANUAL. NO WAITING



NOTE:

If there is no response to click on the link above, please download the PDF document first and then click on it.