


# SERVICE MANUAL

**TD5.85 / TD5.95 / TD5.105 / TD5.115**  
Tractor

Part number 48013235  
English  
May 2016

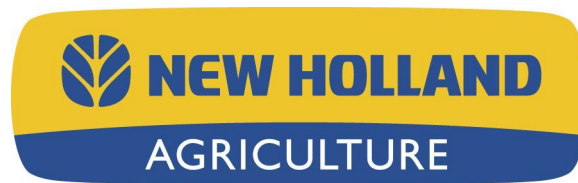



## **SERVICE MANUAL**

**TD5.105**

**TD5.115**

**TD5.85**

**TD5.95**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.1
Clutch .....	18
[18.110] Clutch and components .....	18.1
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.154] Power shuttle transmission internal components .....	21.4
[21.120] Gearbox .....	21.5
[21.160] Creeper .....	21.6
[21.162] Reverser .....	21.7
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.400] Non-powered front axle .....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.124] Final drive hub, steering knuckles, and shafts .....	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control .....	31.1

<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.220] Trailer brake hydraulic control .....	33.2
[33.224] Trailer brake pneumatic control .....	33.3
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.525] Auxiliary hydraulic valves and lines .....	35.3
[35.100] Main lift system.....	35.4
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump .....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control</b> .....	<b>50</b>
[50.200] Air conditioning.....	50.1
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls.....	55.3
[55.015] Engine control system.....	55.4
[55.201] Engine starting system .....	55.5
[55.301] Alternator.....	55.6
[55.302] Battery.....	55.7
[55.202] Cold start aid .....	55.8
[55.011] Fuel tank system .....	55.9
[55.010] Fuel injection system.....	55.10

[55.014] Engine intake and exhaust system.....	55.11
[55.013] Engine oil system .....	55.12
[55.640] Electronic modules .....	55.13
[55.024] Transmission control system .....	55.14
[55.048] Rear Power Take-Off (PTO) control system .....	55.15
[55.049] Front Power Take-Off (PTO) control system .....	55.16
[55.512] Cab controls.....	55.17
[55.130] Rear three-point hitch electronic control system .....	55.18
[55.408] Warning indicators, alarms, and instruments .....	55.19
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**