



NEW HOLLAND



TD5010 - TD5020 - TD5030 - TD5040 - TD5050 MODEL TRACTORS SERVICE MANUAL

SECTIONS	
GENERAL	00
ENGINE	10
CLUTCH	18
GEARBOX	21
TRANSMISSION OF MOTION	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
AUXILIARY EQUIPMENT	50
ELECTRICAL SYSTEM	55
CAB	90

S E R V I C E

NEW HOLLAND

Repair Manual - TD Series Tractors

CONTENTS

GENERAL

SECTION 00

General Instructions and Health and Safety

Chapter 1

Section	Description	Page
00 000	General instructions	1
	Notes for spare parts	2
	Notes for equipment	2
	Safety rules	3
	Consumables	6

ENGINE

SECTION 10

Engine System (F5C)

Chapter 1

Section	Description	Page
	Tools	2
	Engine Troubleshooting	3
10 001 10	Engine R.I.	7

Engine System (NEF)

Chapter 1

Section	Description	Page
	General specifications	2
	Data	5
	Tightening torques	11
	Tools	2
	Engine views	14
	Lubrication diagram	15
	Cooling system diagram	16
	Fault diagnosis	3
10 001 10	Engine R.I.	7
10 001 53	Engine D.A. Checks, measurements and repairs	37
10 102 70	Crankshaft front seal - Replacement	89
10 102 74	Crankshaft rear seal - Replacement	92
10 106 12	Valve tappet and rocker arm clearance - Adjustment	95
10 218 30	Engine injector R.I.	98
10 246 14	Bosch injection pump R.I. Timing. Air bleed	100

10 402 10	Coolant pump R.I.	108
10 402 30	Thermostat valve R.I.	110
10 406 10	Radiator R.I.	112
10 414 10	Coolant pump and generator drive belts. Tension adjustment	116

CLUTCH

SECTION 18

Clutches

Chapter 1

Section	Description	Page
18 000	General specifications	1
	Tightening torques	4
	Tools	5
	Cross-sectional views	6
	Clutch Troubleshooting	8
18 110 10	Removal - Installation	9
	Overhaul	18
	Minimum permissible dimensions after refacing	22
	Adjustments	23
18 100 40	Adjustment of the main and PTO clutch control linkage	25

GEARBOX

SECTION 21

Mechanical Transmission (12x4)

Chapter 1

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3&5
	Description and operation	8
	Fault diagnosis	8
21 110	Removal - Refitting	see sect 27

Reverser (12x12)

Chapter 2

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3
	Description and operation	5
	Fault diagnosis	5
21 110	Removal-Refitting	6

Reverser and Creeper (20x12)

Chapter 3

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	4
	Description and operation	6

21 110	Fault diagnosis	6
	Removal-Refitting	7

DRIVE LINES

SECTION 23

Drive Lines

Chapter 1

Section	Description	Page
23 000	Main specification	1
	Torque settings and Tools	2
	Cross-Sectional views	3
23 101 26	Transmission shafts and guard (Disassembly - Assembly)	4
23 101 40	Drive gear housing (Removal - Installation)	5
23 101 42	Drive gear housing removed (Disassembly - Assembly)	7

FRONT AXLE MECHANICAL TRANSMISSION

SECTION 25

Front Axle Mechanical Transmission

Chapter 1

Section	Description	Page
25 000	Main data	1
	Tightening torques	4
	Tools	6
	Cross-sectional views	7
	Description and operation	9
25 100 30	Complete front axle. Removal - Installation	10
25 100 38	Front axle. Removal - Installation	14
25 108 46-47	Steering knuckle bearing pins. Replacement	24
	Stub axle adjustment	25
	Wheel hub bearing adjustment	27
	Bevel drive adjustment	29
25 102 24	Front axle differential. Overhaul	36
25 100 27	Front axle differential with LIM-SLIP. Overhaul	37
	Front axle differential with NO SPIN. Overhaul	39
44 511 80	Leading drive wheels toe-in check	42

REAR AXLE AND TRANSMISSION

SECTION 27

Rear Axle And Transmission

Chapter 1

Section	Description	Page
27 000	Main data	1
	Tightening torques	4
	Special tools	6
	Cross-sectional views	8
	Description and operation and troubleshooting	10
21.118.10 - 12	Transmission-gearbox casing Removal-Installation	11
21.118.85	Transmission-gearbox casing Disassembly-Overhaul	35

Gearbox driven shaft end float adjustment	43
Differential lock engagement sleeve adjustment	44
Determining the bevel pinion positioning adjustment ring	45
Adjusting the taper roller bearings for the bevel pinion shaft	47
Adjusting the bearings and checking the backlash	48
Differential pinion and side gear backlash adjustment	52

POWER TAKE-OFF

SECTION 31

Mechanical Power Take - Off

Chapter 1

Section	Description	Page
31 000	Main specification	1
	Tools	3
	Torque settings	4
	Sectional drawings	5
	Description and operation	10
	Troubleshooting	12
	Removal - Refitting	13
31 101	Bench overhaul	16

BRAKING SYSTEM

SECTION 33

Braking System

Chapter 1

Section	Description	Page
33 000	Main data	1
	Tightening torques	2
	Cross-sectional views	2
	Description & Operation	9
	Tools - Troubleshooting	10
33.206	Front brake assembly mod. TD60D and TD70D removal and refitting - overhauling on the bench	11
33.202.60	Service brake removal and refitting	14
33.202.50	Removal-Refitting of front brake pumps	19
33.202.40	Bleeding air from the front braking system	23
33.120.08	Adjusting service brake pedals travel	24
33.110.08	Parking brake travel adjustment	24

HYDRAULIC SYSTEM

SECTION 35

Rear Mechanical Hydraulic Lift

Chapter 1

Section	Description	Page
35 000	Main specification	1
	Tightening torques	4
	Tools	7
	Cross-sectional views	8

	Description & Operation	10
	Hydraulic circuit	10
	Description and operation of lift phases	11
	Fault diagnosis	14
35 110.30	Hydraulic lift - disassembly reassembly	16
35.110.40-42-46	Hydraulic lift - bench overhaul	22
	Adjusting the lift	27
35.110.08	Linkage adjustment	33
35.110.30	Pressure relief valve - disassembly reassembly	35
35.110.32	Pressure relief valve - setting	35
35.110.14	Lift control valve - disassembly assembly and overhaul on bench	37
35.0101.10	Lift pump	42

Open Centre System Auxiliary Control Valves

Chapter 2

Section	Description	Page
35 000	Main data - Tools	1
	Auxiliary control valves - sectional views	2
	Description and operation	4
	Fault diagnosis	see chapter 1
35 204 46	Auxiliary control valves - Assembly-Disassembly	8
	Spool binding test	16
	Spool leakage test	17
	Adjustment of the automatic detent release pressure	18

Trailer Brake Auxiliary Control Valve

Chapter 3

Section	Description	Page
35 000	Section views	1
	Description and operation	1
	Hydraulic diagram	2
	Description and operation of valve phases	3
	Trailer brake auxiliary control valve linkage adjustment	6

STEERING

SECTION 41

Steering

Chapter 1

Section	Description	Page
41 000	Principal data	1
	Tightening torques	4
	Section views	4
	Hydraulic diagram	6
	Operation	8
	Fault diagnosis	9
	Tools	7
41 204 30	Hydrostatic steering control valve - Removal-Installation	11
41 204 34	Hydrostatic steering control valve - Disassembly-Assembly	14
41 204 38	Hydrostatic steering control valve - Bench testing	28
	Hydrostatic steering oil pump - Disassembly-Assembly	30
41 216 20	Steering cylinder (two-wheel drive axle) - Removal-Refitting	32
	Steering cylinder (four wheel drive axle) - Removal-Refitting	33

FRONT AXLE AND WHEELS

SECTION 44

Front Axle And Wheels

Chapter 1

Section	Description	Page
44 000	Principal data	1
	Sectional views	3
	Torque settings	4
	Equipment - Fault diagnosis	5
44 101 30	Removal-Refitting-Overhaul	6
44 101 22	Wheel hub disassembly-assembly	9
44 101 46	Stub axle overhaul	16
44 101 80	Checking wheel alignment	20

AUXILIARY UNITS

SECTION 50

Auxiliary Units

Chapter 1

Section	Description	Page
50 000	Safety instructions	2
	General characteristics	3
	Equipment	4
	Operating principles	5
	Fault diagnosis	7
	Cab controls	11
	Use	14
	Main components of the cab air conditioning system	15
	Refrigerant recovery-recycling and evacuation-charging stations	20
50 200 04	Drying recharging and checking cooling	22
50 200 03	Functional testing of air conditioning system	27
	Summary of the cab air-conditioning system charging operations	28
	Checking for refrigerant leaks using an electronic leak detector	30
	Summary of fault diagnosis and maintenance	31
	Air conditioning and heating pipes - Replacement	33
50 200 04-74	Receiver-drier - Replacement	36
50 200 04-72	Condenser - Replacement	38
50 200 04-26	Compressor - Removal-Refitting	39
50 200 10	Compressor drive belt tension adjustment	41

ELECTRICAL SYSTEM

SECTION 55

Instruments

Chapter 1

Section	Description	Page
55 418	Analogue instruments and introduction	1
	Transmitter and switches	4

Components

Chapter 2

Section	Description	Page
55 500	Introduction	1
	Component description	1

Starting System

Chapter 3

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	Starting circuit	3
	System tests	5
55 201	Removal and re-installation of starter motor	8
	Servicing	9
	Bench tests	10

Charging System

Chapter 4

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	System testing and trouble-shooting	4
55 301	Removal, re-installation and servicing	10

Battery

Chapter 5

Section	Description	Page
55 000	Technical information	1
	Description and operation	1
55.301.040	Removal and re-installation	2
	Battery checking and maintenance	3
	Charging the battery	4
	Battery problems - Frequent causes	7

Electrical Circuits

Chapter 6

Section	Description	Page
----------------	--------------------------	-------------

Section	Description	Page
55 100	Contents	1
	Fuses (all versions)	2
	Symbols used in electrical circuits	4
	Electrical wire colour coding	5
	Ground locations	5
	Electrical diagrams	
	- General diagrams (W/Cab)	9

- General diagrams (W/Out Cab) 15
- Analogue instrument circuit and connector overview 19
- Start-up circuit and connector overview 21
- Direction indicator & hazard warning light circuit and connector overview 25
- Windscreen and rear window wiper/washer circuit and connector overview ... 31
- Brake light circuit and connector overview 35
- Heating and air-conditioning system circuit and connector overview 41
- Work lamp (without cab circuit and connector overview) 45
- Work lamp (without cab circuit and connector overview) 49
- Side lights,main and dipped headlights, parking light circuit and connector
overview 53

BODYWORK AND DRIVER POSITION

SECTION 90

Bodywork And Driver Position

Chapter 1

Section	Description	Page
90 000	Disassembly-Assembly	1

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**