

SR270 / SV300
Tier 4B (final)

Alpha Series Skid Steer Loader

SR270 PIN NFM481941 and above; SV300 PIN NFM470295 and above

TR340 / TV380
Tier 4B (final)

Alpha Series Compact Track Loader

TR340 PIN NFM482972 and above; TV380 PIN NFM483044 and above

SERVICE MANUAL

Part number 47685161

1st edition English

June 2015



Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.206] Fuel filters | 10.3 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.4 |
| [10.400] Engine cooling system | 10.5 |
| [10.414] Fan and drive | 10.6 |
| [10.304] Engine lubrication system..... | 10.7 |
| Power coupling | 19 |
| [19.121] Pump-drive assembly | 19.1 |
| Front axle system | 25 |
| [25.450] Chain drive system..... | 25.1 |
| Rear axle system | 27 |
| [27.650] Chain drive system..... | 27.1 |
| Hydrostatic drive | 29 |
| [29.200] Mechanical control | 29.1 |
| [29.218] Pump and motor components..... | 29.2 |
| [29.202] Hydrostatic transmission | 29.3 |
| [29.134] Two-speed assembly..... | 29.4 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| Hydraulic systems | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.104] Fixed displacement pump..... | 35.3 |

| | |
|--|-----------|
| [35.359] Main control valve | 35.4 |
| [35.525] Auxiliary hydraulic valves and lines | 35.5 |
| [35.600] High flow hydraulics | 35.6 |
| [35.724] Front loader hydraulic system control | 35.7 |
| [35.701] Front loader arm hydraulic system | 35.8 |
| [35.734] Tool quick coupler hydraulic system | 35.9 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Wheels | 44 |
| [44.511] Front wheels | 44.1 |
| [44.520] Rear wheels | 44.2 |
| Tracks and track suspension | 48 |
| [48.130] Track frame and driving wheels | 48.1 |
| [48.100] Tracks | 48.2 |
| [48.134] Track tension units | 48.3 |
| [48.138] Track rollers | 48.4 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.200] Air conditioning | 50.2 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.100] Harnesses and connectors | 55.2 |
| [55.201] Engine starting system | 55.3 |
| [55.302] Battery | 55.4 |
| [55.011] Fuel tank system | 55.5 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.6 |
| [55.012] Engine cooling system | 55.7 |
| [55.640] Electronic modules | 55.8 |

| | |
|--|-----------|
| [55.019] Hydrostatic drive control system | 55.9 |
| [55.512] Cab controls..... | 55.10 |
| [55.036] Hydraulic system control | 55.11 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.12 |
| [55.518] Wiper and washer system..... | 55.13 |
| [55.408] Warning indicators, alarms, and instruments | 55.14 |
| [55.DTC] FAULT CODES..... | 55.15 |
| Front loader and bucket..... | 82 |
| [82.100] Arm..... | 82.1 |
| [82.300] Bucket..... | 82.2 |
| Platform, cab, bodywork, and decals..... | 90 |
| [90.150] Cab..... | 90.1 |
| [90.154] Cab doors and hatches | 90.2 |

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**