

SERVICE MANUAL

Boomer™ 54D CVT Tier 4B (final) Compact Tractor

Part number 48017704

1st edition English
October 2016





SERVICE MANUAL

**Boomer™ 54D CVT TIER 4B (FINAL), Cab
Boomer™ 54D CVT TIER 4B (FINAL), ROPS**

Link Product / Engine

Product	Market Product	Engine
Boomer™ 54D CVT TIER 4B (FINAL), Cab	Europe	R 753 IE4
Boomer™ 54D CVT TIER 4B (FINAL), ROPS	Europe	R 753 IE4

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.102] Pan and covers	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.202] Air cleaners and lines	10.9
[10.206] Fuel filters	10.10
[10.218] Fuel injection system.....	10.11
[10.250] Turbocharger and lines.....	10.12
[10.304] Engine lubrication system.....	10.13
[10.400] Engine cooling system	10.14
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.15
Transmission	21
[21.504] Continuously Variable Transmission (CVT)	21.1
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO).....	31.2
[31.120] Central Power Take-Off (PTO).....	31.3
Brakes and controls.....	33
[33.110] Parking brake or parking lock.....	33.1
[33.120] Mechanical service brakes.....	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves.....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders.....	41.3
Cab climate control.....	50
[50.100] Heating.....	50.1
[50.104] Ventilation.....	50.2
[50.200] Air conditioning.....	50.3
Electrical systems.....	55
[55.000] Electrical system.....	55.1
[55.010] Fuel injection system.....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.024] Transmission control system.....	55.4
[55.100] Harnesses and connectors.....	55.5

[55.201] Engine starting system	55.6
[55.202] Cold start aid	55.7
[55.301] Alternator	55.8
[55.302] Battery	55.9
[55.404] External lighting	55.10
[55.408] Warning indicators, alarms, and instruments	55.11
[55.518] Wiper and washer system.....	55.12
[55.640] Electronic modules	55.13
[55.989] Exhaust Gas Recirculation (EGR) electrical system	55.14
[55.DTC] FAULT CODES	55.15
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.116] Fenders and guards	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab	90.4
[90.151] Cab interior	90.5
[90.154] Cab doors and hatches	90.6

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**