



MDF0730A

T4020 Deluxe – T4020 Supersteer – T4030 Deluxe – T4030 Supersteer – T4040 Deluxe – T4040 Supersteer – T4050 Deluxe – T4050 Supersteer TRACTORS SERVICE MANUAL

SECTIONS

GENERAL GUIDELINES	00
ENGINE	10
CLUTCH	18
TRANSMISSIONS	21
DRIVE LINES	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
CAB AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
PLATFORM, CAB, BODYWORK	90

T E C H N I C A L S U P P O R T

CONTENT

	Page	Date		Page	Date
00 – GENERAL GUIDELINES			Engine disassembly– assembly	33–34–35– 36–37–38– 39–40–41– 42–43–44– 45–46–47– 48–49–50– 51–52–53– 54–55–56– 57–58–59– 60–61–62– 63–64–65– 66	11–07
General instructions	1–2	11–07			
Safety regulations	3–4–5	11–07			
Tractor refuelling	6	11–07			
10 – ENGINE					
CHAPTER 1 – Engine T4040 and T4050 models					
Summary	1	11–07	Checks and measurements – cylinder block and liners	67–68–69	11–07
General specifications	2–3–4	11–07	Checks and measurements – crankshaft, bearings and flywheel	70–71	11–07
Fuel system data	4	11–07	Checks and measurements – connecting rods	72–73	11–07
Engine block data	5	11–07	Checks and measurements – pistons	74–75–76– 77	11–07
Crankshaft data	5	11–07	Checks and measurements – camshaft, tappets and valves	78–79–80– 81	11–07
Connecting rod data	6	11–07	Checks and measurements – cylinder head	82	11–07
Piston data	6–7	11–07	Checks and measurements – lubrication system	83	11–07
Timing gear data	7	11–07	Checks and measurements – cooling system	84	11–07
Cylinder head data	8–9	11–07	Removal–Installation – crankshaft front seal	85–86	11–07
Tightening torques	10–11	11–07	Replacing crankshaft rear seal	87–88–89	11–07
Tools	12	11–07	Valve clearance adjustment	90–91	11–07
Engine diagrams	13	11–07	Removal–Installation – in- jectors	92–93–94	11–07
Lubrication diagrams	14	11–07	Removal – Installation – Bosch injection pump	95–96–97	11–07
Cooling diagram	15	11–07	Bosch injection pump – tim- ing	98–99–100	11–07
Additional counterweight diagrams	16	11–07	Bosch injection pump – air bleeding	100	11–07
Exhaust gas recirculation system (EGR)	17	11–07			
Fault finding	18–19–20– 21	11–07			
Engine removal–installa- tion	22–23–24– 25–26–27– 28–29–30– 31–32	11–07			

	Page	Date		Page	Date
Removal-Installation – coolant pump	101-102	11-07	21 – TRANSMISSIONS		
Removal-Installation – thermostat valve	103-104	11-07	CHAPTER 1 – Transmission and range gear (16x16)		
Removal-Installation – radiator	105-106- 107-108	11-07	Data	1-2	11-07
Coolant pump and gener- ator drive belt	109-110	11-07	Tightening torques	2-3	11-07
CHAPTER 2 – Engine T4020 and T4030 models			Tools	4-5-6-7	11-07
Summary	1	03-08	Sections	8-9-10-11	11-07
General specifications	2-3	03-08	Description and operation	12	11-07
Engine removal-installation	4-5-6-7-8 -9-10-11- 12-13-14- 15-16-17	03-08	Fault finding	12-13	11-07
18 – CLUTCH			Removal-Installation – rear transmission – gear- box casing	14-15-16- 17-18-19- 20	11-07
Data	1-2	11-07	Disassembly-Assembly – transmission-gearbox cas- ing	21-22-23- 24-25-26- 27-28	11-07
Tightening torques	2	11-07	Gearbox driving and driven shafts end float adjustment	29	11-07
Tools	2-3	11-07	Sealing compound applica- tion diagram	30	11-07
Sections	3-4	11-07	Gearbox control lever. Re- moval – Installation	31	11-07
Fault finding	5	11-07	Range gear control lever. Removal – Installation	32	11-07
Removal-Installation – clutch	6-7-8-9- 10-11-12- 13-14-15	11-07	Shuttle control lever. Re- moval – Installation	33	11-07
Clutch Overhaul	16-17-18- 19-20	11-07	Fuel tank. Removal – In- stallation	34-35	11-07
Checks and measurements – clutch	21-22	11-07	CHAPTER 2 – Mechanical transmission and splitter		
Adjustments – clutch disen- gagement levers	22-23	11-07	Data	1-2	11-07
Adjustments – clutch pedal	24	11-07	Tightening torques	2	11-07
PTO control adjustment ..	25	11-07	Tools	2	11-07
Sectional view of PTO clutch servo control	26	11-07	Sections	3-4-5	11-07
Description and operation of PTO servo control	27-28	11-07	Description and operation .	6	11-07
PTO servo control adjust- ment	29	11-07	Fault finding	7	11-07
PTO engaged switch ad- justment	30	11-07	Splitter device and creeper unit casing, shafts and bearings disassembly	8-9-10	11-07

	Page	Date
CHAPTER 3 – Power Shuttle transmission with dual command (2 Speed Power Shift) function		
Data	1-2	11-07
Tightening torques	3	11-07
Tools	4-5-6	11-07
Sections	7-8-9-10-11	11-07
Clutch control pressure test	10	11-07
Description and operation .	12	11-07
Fault finding	12	11-07
Disassembly-Assembly – transmission-gearbox casing	13-14	11-07
Disassembly-Reassembly – Power Shuttle control valve	15-16-17	11-07
Disassembly-Assembly – accumulator	18	11-07
Gearbox control valve solenoid valve. Removal – Installation	19-20	11-07
Disassembly-Assembly – clutch casing	21-22-23-24	11-07

CHAPTER 4 – Power Shuttle transmission (16 + 16 and 8 + 8 versions)

Data	1	11-07
Tightening torques	2	11-07
Sections	3-4-5-6	11-07
Clutch control pressure test	6	11-07

23 – DRIVE LINES

Data	1	11-07
Tightening torques	2	11-07
Tools	3-4	11-07
Sections	5-6-7	11-07
Description and operation .	8-9	11-07
Fault finding	9	11-07
Drive shafts and guard. Disassembly- Assembly ..	10-11-12	11-07
Removal-Installation – drive gear casing	13-14	11-07

Disassembly-Assembly – drive gear casing	15-16-17-18	11-07
--	-------------	-------

25 – FRONT AXLE MECHANICAL TRANSMISSION

CHAPTER 1 – Front mechanical transmission (mod. T4040 Supersteer and T4050 Supersteer)

Data	1-2-3	11-07
Tightening torques	4-5-6	11-07
Tools	7-8-9	11-07
Sections	10-11-12-13	11-07
Description and operation	13-14	11-07
Fault finding	15	11-07
Removal-Installation – front axle	16-17-18-19	11-07
Removal-Installation – front axle differential and bevel drive support	20-21-22-23	11-07
Overhaul – front axle bevel drive	24-25	11-07
Adjustments – bevel drive	26-27-28-29-30-31	11-07
Overhaul – front differential	32	11-07
Overhaul – differential lock unit	33-34-35	11-07
Disassembly-Assembly – front epicyclic final drive with brake	36-37-38-39	11-07
Disassembly-Assembly – front epicyclic final drive ..	40-41-42	11-07
Wheel hub seal. Renew ..	43	11-07
Wheel hub and steering knuckle. Disassembly- Assembly	44	11-07
Adjustments – steering knuckle bearings	45	11-07
Replacing steering knuckle pins and bearings	46	11-07
Lead-drive wheel position check	47	11-07

	Page	Date		Page	Date
CHAPTER 2 – Front mechanical transmission (mod. T4040 Deluxe and T4050 Deluxe)			Adjustments – differential lock engagement sleeve position		
Data	1–2	11–07		20	11–07
Tightening torques	3–4	11–07	Adjustments – bevel drive	21–22–23– 24–25	11–07
Tools	5–6	11–07	Removal–Installation – final drive casing	26–27–28– 29	11–07
Sections	7–8	11–07	Disassembly–Assembly – drive wheel shaft	29–30–31	11–07
Description and operation	8–9	11–07	Disassembly–Assembly – epicyclic final drive	31	11–07
Fault finding	10	11–07	31 – POWER TAKE-OFF		
Removal–Installation – front axle	11–12–13– 14	11–07	CHAPTER 1 – Mechanical power take-off		
Front axle. Disassembly–Assembly	15–16–17– 18–19–20– 21–22–23	11–07	Data	1–2–3	11–07
Overhaul – differential lock unit	24–25	11–07	Tools	4	11–07
Replacing steering knuckle pins and bearings	26	11–07	Tightening torques	5–6	11–07
Adjustments – steering knuckle bearings	27–28	11–07	Sections	7–8	11–07
Adjustments – bevel drive	29–30–31– 32–33–34– 35	11–07	Description and operation .	9–10–11	11–07
Overhaul – front differential	36	11–07	Fault finding	11	11–07
LIM–SLIP self–locking differential	37–38	11–07	Disassembly – Assembly – power take-off	12–13–14– 15	11–07
Checking leading wheel alignment	39	11–07	33 – BRAKES		
Disassembly–Assembly – front epicyclic final drive . .	40–41	11–07	Data	1–2	11–07
Disassembly–Assembly – front epicyclic final drive with brake	42–43–44	11–07	Tightening torques	2	11–07
27 – REAR MECHANICAL TRANSMISSION			Sections	3–4–5	11–07
Data	1–2	11–07	Tools	5–6	11–07
Tightening torques	3–4	11–07	Description and operation .	6	11–07
Tools	5–6–7–8	11–07	Fault finding	7–8	11–07
Sections	9–10	11–07	Removal–Installation – service brake	9–10	11–07
Description and operation .	11–12	11–07	Removal–Installation – service brake pump	11–12–13– 14	11–07
Fault finding	12–13	11–07	Adjustments – service brake pedals travel	15–16	11–07
Disassembly–Assembly – transmission–gearbox casing	14–15–16– 17–18–19	11–07	Service brake circuit air bleeding	16–17–18	11–07
			Removal–Installation – parking brake	19–20	11–07

	Page	Date
Adjustments – parking handbrake travel	21	11-07

35 – HYDRAULIC SYSTEMS

CHAPTER 1 – Rear mechanical hydraulic lift

Data	1-2-3	11-07
Tightening torques	3-4	11-07
Tools	5-6	11-07
Sections	7-8-9-10-11	11-07
Description and operation .	12-13-14-15	11-07
Fault finding	16-17	11-07
Lift internal controls. Disassembly- Assembly	18-19-20-21	11-07
Adjusting the lift	22-23-24-25-26-27-28-29-30-31	11-07
Lift cylinder and arms shaft. Disassembly- Assembly ..	32-33-34-35	11-07
Disassembly-Assembly – lift control valve	36-37-38-39	11-07
Lift pressure relief valve ..	40	11-07

CHAPTER 2 – Open centre system auxiliary control valves

Data	2	11-07
Tools	2	11-07
Tightening torques	2	11-07
Sections	3-4	11-07
Description and operation .	5-6-7-8	11-07
Lift electronic control unit. Renew	9	11-07
Auxiliary control valves. Disassembly- Assembly ..	10-11-12	11-07

CHAPTER 3 – Trailer brakes auxiliary control valves

Sections	1	11-07
Description and operation .	1-2-3-4-5-6-7	11-07
Fault finding	8-9-10	11-07

	Page	Date
Removal-Installation – trailer brake valve	11	11-07

CHAPTER 4 – Electronically controlled hydraulic lift

Data	2-3	11-07
Tightening torques	4	11-07
Tools	4-5-6	11-07
Sections	7-8-9	11-07
Location of Components ..	10-11-12	11-07
Description and operation .	13-14-15-16-17-18	11-07
Removal-Installation – lift .	19-20-21-22-23	11-07
Draft sensor support. Removal – Installation	24	11-07
Replacement – control unit	25	11-07
Lift arm potentiometer. Renew	26-27	11-07
Replacement – draft sensor	28-29	11-07
Electronically controlled hydraulic lift. Disassembly-Assembly	30-31-32-33-34	11-07
Removal-Installation – hydraulic control valve	35	11-07
Hydraulic control valve. Disassembly- Assembly ..	36-37-38	11-07

CHAPTER 5 – Constant flow gear pump

Data	1-2	11-07
Description and operation .	2	11-07
Diagrams	3	11-07
Disassembly-Assembly – lift oil pump	4	11-07

CHAPTER 6 – Electronic lift and front Power Take-Off

Main specifications of front lift	1-2-3	11-07
Tightening torques	3-4-5	11-07
Cross-sectional views of implement linkage	6-7	11-07
Cross-sectional views of front PTO	8-9-10	11-07

	Page	Date		Page	Date
Description and operation .	11-12-13-14	11-07	Description and operation of front electronic lift hydraulic control valve	17-18-19-20	03-08
Front lift hydraulic diagram	15	11-07	Fault finding	21-22	03-08
Front lift troubleshooting . .	16-17	11-07	Front electronic lift operating instructions	23-24-25-26	03-08
Removal-Installation - Front power take-off transmission shaft	18-19-20-21-22-23-24-25	11-07	Front electronic lift calibration	27-28-29	03-08
Disassembly-Assembly - Front PTO transmission shaft	26	11-07	Removal-Installation - front mechanical/electronic lift	30-31	03-08
Front PTO casing cross-sectional view	27	11-07	Removal-Installation - front power take-off	32-33	03-08
Removal-Installation - Front PTO electromagnetic coupling	28-29-30	11-07	Disassembly-Assembly - front power take-off	34-35	03-08
Disassembly-Assembly - Front PTO electromagnetic coupling	31-32-33-34	11-07	Removal-Installation - front electronic lift control unit	36	03-08
Removal-Installation - Front lift support	35-36-37	11-07	Removal-Installation - front electronic lift hydraulic control valve	37	03-08
CHAPTER 7 - Front lift and power take-off (for mod. T4030 Deluxe, T4040 Deluxe and T4050 Deluxe)			Fault code indication	38	03-08
Data	1-2	03-08	Diagnostics	39-40-41-42-43-44-45-46-47-48-49-50-51-52-53-54-55-56	06-09
Tightening torques	3-4	03-08			
Sections	5-6	03-08			
Description and operation of front power take-off . . .	7	03-08			
Front power take-off control adjustment	8	03-08			
Front power take-off control valve	9	03-08			
Sectional view of front power take-off clutch	10	03-08			
Front mechanical lift	11	03-08			
Electronic front lift	12-13-14	03-08			
Front electronic lift hydraulic control valve diagram	15	03-08			
Front electronic lift hydraulic control valve	16	03-08			
			41 - STEERING		
			CHAPTER 1 - Steering		
			Data	2	11-07
			Tightening torques	2	11-07
			Tools	2	11-07
			Description and operation .	3-4-5	11-07
			View of hydrostatic steering control valve components .	6	11-07
			Fault finding	7-8	11-07
			Replacement - hydrostatic steering wheel	9	11-07
			Removal-Installation - hydrostatic steering control valve	10-11-12	11-07

	Page	Date
Disassembly–Assembly – hydrostatic control valve	13–14–15–16–17–18–19–20–21–22–23–24–25–26–27–28	11–07
Hydrostatic steering control valve bench testing	29–30	11–07
Pressure relief valve testing	31	11–07
Steering control cylinder. Removal – Installation	32–33	11–07
Steering control cylinder. Disassembly–Assembly	34–35	11–07
CHAPTER 2 – Constant flow gear pump		
Data	1–2	11–07
Diagrams	3–4	11–07
Description and operation	4	11–07
Disassembly–Assembly – hydrostatic steering oil pump	5	11–07
44 – AXLES AND WHEELS		
Data	1–2	11–07
Front wheel track diagram	2	11–07
Sections	3	11–07
Tightening torques	4–5–6	11–07
Tools	6–7	11–07
Fault finding	7	11–07
Disassembly–Assembly – wheel axle hub	8–9–10	11–07
Removal–Installation – front axle	11–12–13	11–07
Stub axle hub overhaul	14–15–16–17	11–07
Checking leading wheel alignment	18	11–07
50 – CAB AIR CONDITIONING SYSTEM		
Safety regulations	2	11–07
Data	3	11–07
Tools	4	11–07
Operating principles	5	11–07

	Page	Date
Conditioning system components	6–7–8–9–10	11–07
Cab controls	11–12–13	11–07
Testing operation and cooling	14–15	11–07
Air conditioning system maintenance	16–17	11–07
Fault finding	18–19–20–21	11–07
Refrigerant recovery – recycling and evacuation – charging stations	22–23	11–07
Dehydration, recharging and refrigeration check	24–25–26–27–28–29–30	11–07
Checking for and eliminating any gas leaks	31–32	11–07
Compressor drive belt tension adjustment	33	11–07
Cab air infeed vents. Removal – Installation	34	11–07
Cab heating/air-conditioning system. Removal – Installation	35–36	11–07
Cab heater. Disassembly–Assembly	37	11–07
Cab air conditioning system evaporator unit. Disassembly– Assembly	38	11–07
Cab electric fan unit. Disassembly– Assembly	39	11–07
55 – ELECTRICAL SYSTEM		
CHAPTER 1 – Instruments		
Analogue instrumentation	1–2–3–4	11–07
Digital instrumentation	5–6–7–8–9	11–07
Transmitters, sensors and switches	10–11–12–13–14–15–16–17	11–07
CHAPTER 2 – Components		
Introduction	1	11–07

	Page	Date		Page	Date
Components	1-2-3-4-5 -6-7	11-07			
Service	8-9-10-11 -12	11-07			
CHAPTER 3 – Starting System					
Technical data	1	11-07			
Description and operation .	2	11-07			
Fault finding	3	11-07			
System testing	4-5-6	11-07			
View of starter motor components	7	11-07			
Revision	8-9	11-07			
Starter motor testing	9-10	11-07			
CHAPTER 4 – Charging system					
Technical data	1	11-07			
Tightening torques	1	11-07			
Description and operation .	2-3	11-07			
System testing	4-5-6-7-8 -9	11-07			
Removal-Installation and Overhaul – alternator	9-10-11- 12-13-14- 15-16	11-07			
CHAPTER 5 – Battery					
Technical data	1	11-07			
Description and operation .	1	11-07			
Removal-Installation – battery	2	11-07			
Battery Service	3	11-07			
Battery charging	4-5-6	11-07			
Battery troubleshooting ...	6	11-07			
CHAPTER 6 – Electrical circuits for tractors with cab					
Index	1	06-09			
CHAPTER 7 – Electrical circuits for tractors with platform					
Index	1	11-07			
CHAPTER 8 – Connectors					
Index	1	11-07			
CHAPTER 9 – Error codes					
Index	1	06-09			
CHAPTER 10 – HH Menu and calibrations					
Index	1	06-09			
CHAPTER 11 – Front electronic lift (mod. T4030 Deluxe, T4040 Deluxe and T4050 Deluxe)					
Index	1	03-08			
Electrical circuit components	2-3	03-08			
Wiring diagrams	4	03-08			
Wiring diagrams	6-7-8-9- 10-11	03-08			
Connectors	14-15-16- 17-18-19- 20	03-08			
90 – PLATFORM, CAB, BODYWORK					
CHAPTER 1 – Cab					
Hood. Removal – Installation	2	11-07			
Instrument panel lower guard. Removal – Installation	3	11-07			
Platform assembly. Removal – Installation	4-5-6-7- 8-9-10	11-07			
Canopy for rops. Removal – Installation	11	11-07			
Cab assembly with platform. Removal – Installation	12-13-14- 15-16-17- 18-19	11-07			
Cab windows. Renew	20-21-22	11-07			
Right/left-hand upright seals. Removal – Installation	23	11-07			
Cab ceiling fitting. Removal – Installation	24-25	11-07			
Sunshade. Removal – Installation	26	11-07			

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**