

# SERVICE MANUAL

**T9.390 / T9.450 / T9.505 /  
T9.560 / T9.615 / T9.670**

**Tractor**

*PIN ZCF200001 and above*

*PIN ZDF200001 and above*


Part number 47488219

English

March 2013



## SERVICE MANUAL

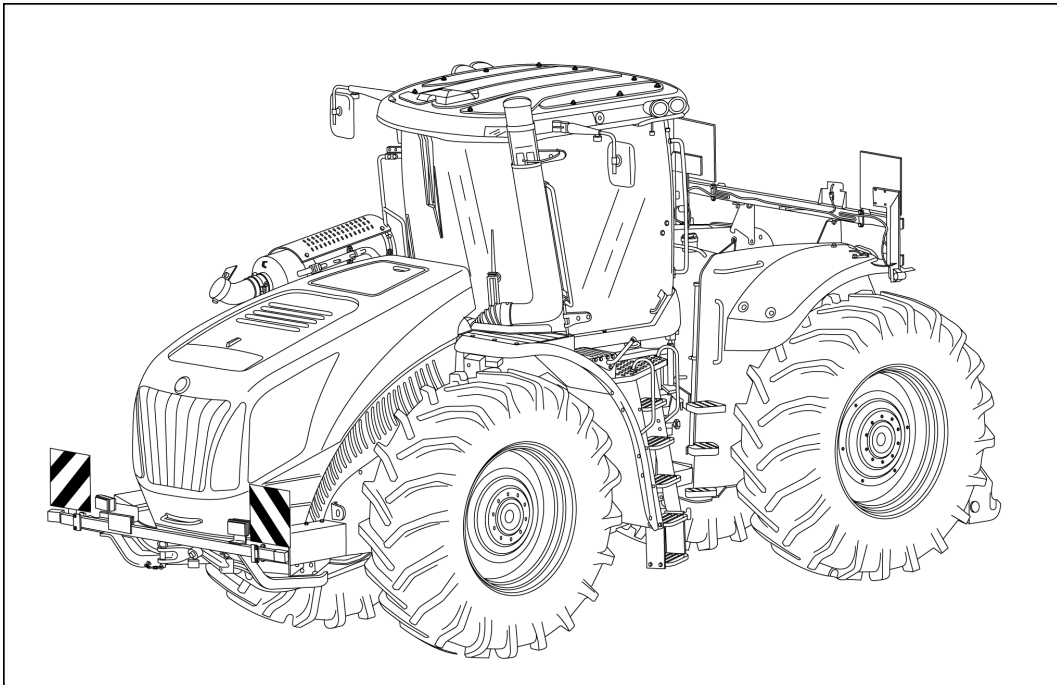

**T9.390 [ZCF200001 - ], T9.390 [ZDF200001 - ], T9.450 [ZCF200001 - ], T9.450 [ZDF200001 - ], T9.505 [ZCF200001 - ], T9.505 [ZDF200001 - ], T9.560 [ZCF200001 - ], T9.560 [ZDF200001 - ], T9.615 [ZCF200001 - ], T9.615 [ZDF200001 - ], T9.670 [ZCF200001 - ], T9.670 [ZDF200001 - ]**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.400] Engine cooling system .....	10.3
[10.414] Fan and drive .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment .....	10.5
Transmission.....	21
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives.....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.220] Gearbox .....	31.3
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1

[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump .....	35.4
[35.204] Remote control valves .....	35.5
[35.220] Auxiliary hydraulic pump and lines .....	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units .....	35.8
[35.600] High flow hydraulics.....	35.9
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
[39.110] Drawbar and hitch assembly .....	39.2
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump.....	41.3
[41.910] Auxiliary steering .....	41.4
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.104] Ventilation .....	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system.....	50.3

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**