

# SERVICE MANUAL

**T9.435 / T9.480 / T9.530 / T9.565**

**T9.600 / T9.645 / T9.700**

**Tier 4B (final)**

**Tractor**

*PIN ZEF400001 and above*

Part number 47680535

1<sup>st</sup> edition English

March 2014





## **SERVICE MANUAL**

**T9.435 Europe heavy duty wheeled model [ZEF400001 - ] , T9.480 Europe heavy duty wheeled model [ZEF400001 - ] , T9.530 Europe heavy duty wheeled model [ZEF400001 - ] , T9.530 Europe wheeled scraper model [ZEF400001 - ] , T9.565 Europe heavy duty wheeled model [ZEF400001 - ] , T9.600 Europe heavy duty wheeled model [ZEF400001 - ] , T9.600 Europe wheeled scraper model [ZEF400001 - ] , T9.645 Europe wheeled model [ZEF400001 - ] , T9.645 Europe wheeled scraper model [ZEF400001 - ] , T9.700 Europe heavy duty wheeled model [ZEF400001 - ]**

## Link Product / Engine

Product	Market Product	Engine
null Europe heavy duty wheeled model [ZEF400001 - ]	Europe	F2CFE614A*B
null Europe heavy duty wheeled model [ZEF400001 - ]	Europe	F3HFE613G*B001
null Europe heavy duty wheeled model [ZEF400001 - ]	Europe	F3HFE613B*B001
null Europe wheeled scraper model [ZEF400001 - ]	Europe	F3HFE613B*B001
null Europe heavy duty wheeled model [ZEF400001 - ]	Europe	F3HFE613B*B001
null Europe heavy duty wheeled model [ZEF400001 - ]	Europe	F3DFE613J*B001
null Europe wheeled scraper model [ZEF400001 - ]	Europe	F3DFE613J*B001
null Europe wheeled model [ZEF400001 - ]	Europe	F3DFE613G*B001
null Europe wheeled scraper model [ZEF400001 - ]	Europe	F3DFE613G*B001
null Europe heavy duty wheeled model [ZEF400001 - ]	Europe	F3DFE613F*B001

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system .....	10.5
[10.414] Fan and drive .....	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.7
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.220] Gearbox.....	31.3

<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump .....	35.4
[35.204] Remote control valves .....	35.5
[35.220] Auxiliary hydraulic pump and lines .....	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units .....	35.8
[35.600] High flow hydraulics .....	35.9
<b>Hitches, drawbars, and implement couplings</b> .....	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
<b>Frames and ballasting</b> .....	<b>39</b>
[39.100] Frame .....	39.1
[39.110] Drawbar and hitch assembly .....	39.2
<b>Steering</b> .....	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3
[41.910] Auxiliary steering .....	41.4
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control</b> .....	<b>50</b>
[50.104] Ventilation .....	50.1

[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.301] Alternator.....	55.3
[55.302] Battery.....	55.4
[55.010] Fuel injection system.....	55.5
[55.014] Engine intake and exhaust system.....	55.6
[55.024] Transmission control system.....	55.7
[55.045] Front axle control system .....	55.8
[55.046] Rear axle control system.....	55.9
[55.048] Rear Power Take-Off (PTO) control system .....	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.11
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.12
[55.404] External lighting .....	55.13
[55.522] Cab Power Take-Off (PTO) controls .....	55.14
[55.640] Electronic modules .....	55.15
[55.035] Remote control valve electric control .....	55.16
[55.130] Rear three-point hitch electronic control system .....	55.17
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.18
[55.DTC] FAULT CODES.....	55.19
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.102] Engine shields, hood latches, and trims .....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**