

5130
6130
7130
Combine

SERVICE MANUAL

Part number 47871441

English

February 2016

© 2016 CNH industrial Latin America LTDA. All Rights Reserved.



Link Product / Engine

Product	Market Product	Engine
AXIAL-FLOW® 5130 Máquina padrão [JHFY5130AEJG05686 -]	Latin America	F4HFP613B*H005
AXIAL-FLOW® 5130 [YCG008901 -]	North America	F4HFE613T*A004
AXIAL-FLOW® 5130 [YCG007403 -]	Europe	F4HFE613T*A004
AXIAL-FLOW® 5130 [YDG009296 -]	Europe	F4HFE613T*A004
AXIAL-FLOW® 5130 [YDG009296 -]	North America	F4HFE613T*A004
AXIAL-FLOW® 5130 [YCG007403 -]	North America	F4HFE613T*A004
AXIAL-FLOW® 5130 [YCG008901 -]	Europe	F4HFE613T*A004
AXIAL-FLOW® 5130 Máquina padrão com autonivelamento [JHFY5130AEJG05686 -]	Latin America	F4HFP613B*H005
AXIAL-FLOW® 6130 [YCG007403 -]	Europe	F2CFE613H*A
AXIAL-FLOW® 6130 [YCG008901 -]	North America	F2CFE613H*A
AXIAL-FLOW® 6130 [YDG009296 -]	North America	F2CFE613H*A
AXIAL-FLOW® 6130 Máquina padrão [JHFY6130AFJG05962 -]	Latin America	F2CFP613A*H001
AXIAL-FLOW® 6130 Máquina padrão com autonivelamento [JHFY6130AFJG05962 -]	Latin America	F2CFP613A*H001
AXIAL-FLOW® 6130 Máquina para arroz [JHFY6130AFJG05962 -]	Latin America	F2CFP613A*H001
AXIAL-FLOW® 6130 [YDG009296 -]	Europe	F2CFE613H*A
AXIAL-FLOW® 6130 [YCG007403 -]	North America	F2CFE613H*A
AXIAL-FLOW® 6130 [YCG008901 -]	Europe	F2CFE613H*A
AXIAL-FLOW® 7130 [YCG007403 -]	North America	F2CFE613E*A
AXIAL-FLOW® 7130 [YCG007403 -]	Europe	F2CFE613E*A
AXIAL-FLOW® 7130 [YDG009296 -]	Europe	F2CFE613E*A
AXIAL-FLOW® 7130 [YCG008901 -]	Europe	F2CFE613E*A
AXIAL-FLOW® 7130 Máquina para arroz [JHFY7130ATFJ05805 -]	Latin America	F2CFP614A*H001

Product	Market Product	Engine
AXIAL-FLOW® 7130 [YDG009296 -]	North America	F2CFE613E*A
AXIAL-FLOW® 7130 Máquina padrão [JHFY7130ATFJ05805 -]	Latin America	F2CFP614A*H001
AXIAL-FLOW® 7130 [YCG008901 -]	North America	F2CFE613E*A
AXIAL-FLOW® 7130 Máquina padrão com autonivelamento [JHFY7130ATFJ05805 -]	Latin America	F2CFP614A*H001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.216] Fuel tanks	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.418] Rotary screen	10.8
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.145] Gearbox internal components.....	21.2
[21.182] Differential.....	21.3
Front axle system	25
[25.310] Final drives.....	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.124] Final drive hub, steering knuckles, and shafts	27.2
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.134] Two-speed assembly.....	29.2
[29.202] Hydrostatic transmission	29.3
[29.204] Reservoir, cooler, and lines	29.4

[29.218] Pump and motor components	29.5
[29.300] Rear hydrostatic transmission	29.6
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.322] Regulated/Low pressure system	35.1
[35.359] Main control valve	35.2
[35.410] Header or attachment height system	35.3
[35.415] Header or attachment tilting system	35.4
[35.420] Reel vertical positioning system.....	35.5
[35.430] Reel fore-and-aft positioning system.....	35.6
[35.440] Grain tank unload system	35.7
[35.536] Crop processor system	35.8
[35.760] Header reverser drive	35.9
[35.796] Chaff spreader control	35.10
Hydraulic systems.....	35
[35.000] Hydraulic systems	35.11
[35.102] Pump control valves.....	35.12
[35.106] Variable displacement pump	35.13
[35.220] Auxiliary hydraulic pump	35.14
[35.300] Reservoir, cooler, and filters.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump	41.4
Wheels	44

[44.511] Front wheels.....	44.1
Cab climate control	50
[50.300] Cab pressurizing system.....	50.1
[50.200] Air conditioning	50.2
[50.100] Heating.....	50.3
[50.104] Ventilation	50.4
Electrical systems.....	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.031] Parking brake electrical system	55.7
[55.036] Hydraulic system control	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.201] Engine starting system	55.11
[55.202] Cold start aid	55.12
[55.301] Alternator.....	55.13
[55.302] Battery.....	55.14
[55.405] External lighting switches and relays	55.15
[55.408] Warning indicators, alarms, and instruments	55.16
[55.421] Feeding control system	55.17
[55.423] Cleaning control system.....	55.18
[55.426] Harvest material flow control system.....	55.19
[55.512] Cab controls.....	55.20
[55.518] Wiper and washer system.....	55.21

[55.520] Cab harvesting controls	55.22
[55.610] Ground speed control	55.23
[55.628] Threshing electrical control	55.24
[55.640] Electronic modules	55.25
[55.DTC] FAULT CODES	55.26
Attachments/Headers	58
[58.105] Attachment/Header reel control system	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing	60.2
[60.122] Length-of-cut gearbox	60.3
[60.150] Feeder drive system	60.4
Threshing	66
[66.105] Concave	66.1
[66.110] Concave control system	66.2
[66.260] Threshing mechanism drive system	66.3
[66.331] Rotor	66.4
Separation	72
[72.410] Rotary separator drive system	72.1
[72.420] Rotary separator	72.2
[72.430] Separator grates	72.3
Residue handling	73
[73.210] Straw chopper drive system	73.1
[73.230] Straw chopper	73.2
[73.335] Chaff spreader	73.3
Cleaning	74
[74.000] Cleaning	74.1
[74.101] Cleaning drive systems	74.2

[74.114] Upper shaker shoe	74.3
[74.118] Lower shaker shoe	74.4
[74.130] Fan housing	74.5
[74.140] Tailings return system	74.6
Crop storage / Unloading	80
[80.101] Clean grain elevator	80.1
[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Platform, cab, bodywork, and decals	90
[90.105] Machine shields and guards	90.1
[90.124] Pneumatically-adjusted operator seat	90.2
[90.150] Cab	90.3
[90.151] Cab interior	90.4

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**