

8840 Windrower

Table of Contents

DIVISION / SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Index		Rac 8-97500-1
Introduction	1001	Rac 8-97130
Safety Rules, General Machine Specifications, and Standard Torque Specifications	1002	Rac 8-97141
Maintenance and Lubrication	1003	Rac 8-97151
Decals	1004	Rac 8-97160
Specification Details	1024	Rac 8-24162
 2 ENGINE		
Index		Rac 8-97500-2
Engine Removal and Installation and Radiator Removal and Installation	2001	Rac 8-97170
Engine Accessories	2002	Rac 8-97180
Cylinder Head and Valve Train	2415	Rac 8-24172
Cylinder Block	2425	Rac 8-24182
Lubrication System	2445	Don 8-24192
Cooling System	2455	Don 8-24202
Turbocharger	2465	Rac 8-25550
Turbocharger Failure Analysis	2565	Rac 9-78235
 3 FUEL SYSTEM		
Index		Rac 8-97500-3
Fuel System and Engine Controls	3001	Rac 8-97190
Fuel System and Filters	3410	Rac 8-24212
Fuel Injectors	3413	Don 8-24232
Bosch Fuel Injection	3415	Don 7-37140
 4 ELECTRICAL SYSTEM		
Index		Rac 8-97500-4
Removal and Installation of Electrical Components	4001	Rac 8-97200
Specifications, Schematics, Troubleshooting, and Using Booster Batteries to Start the Engine	4002	Rac 8-97210
Instruments	4004	Rac 8-97220
 5 STEERING		
Index		Rac 8-97500-5
Removal and Installation of Steering Components	5001	Rac 8-97231
Steering Control Linkage Troubleshooting and Adjustment Reprinted	5002	Rac 8-97240

6	POWER TRAIN	
	Index	Rac 8-97500-6
	Ground Drive Hydraulic System Specifications, Operation, Schematics, Troubleshooting, and Tests	6001 Rac 8-97250
	Charge Pump	6010 Rac 8-97260
	Tandem Pump.....	6011 Rac 8-97270
	Drive Motors	6020 Rac 8-97280
	Two Speed Control Valve and Two Speed Cylinder	6030 Rac 8-97290
	Drive Controls	6031 Rac 8-97300
	Drive Shafts.....	6050 Rac 8-97310
	Chain Cases.....	6051 Rac 8-97321
	Wheels and Tires	6052 Rac 8-97330
7	BRAKES	
	Index	Rac 8-97500-7
	Parking Brake.....	7001 Rac 8-97340
8	HYDRAULIC SYSTEM	
	Index	Rac 8-97500-8
	Hydraulic System Specifications, Operation, Schematics, Troubleshooting, and Tests	8001 Rac 8-97350
	Cleaning the Hydraulic System	8003 Rac 8-97360
	Header Drive Pump.....	8010 Rac 8-97370
	Header Drive Motor	8020 Rac 8-97380
	Header Lift and Flotation Valve, Guard Angle Control Valve, and Bypass Valve	8030 Rac 8-97390
	Accumulator	8040 Rac 8-97400
	Cylinders	8090 Rac 8-97410
9	CHASSIS	
	Index	Rac 8-97500-9
	Removal and Installation of Air Conditioning Components	9000 Rac 8-97420
	Air Conditioning Troubleshooting and System Checks ...	9001 Rac 8-97430
	Air Conditioning System.....	9002 Rac 8-97440
	Cab	9003 Rac 8-97450
	Header	9011 Rac 8-97460
	Removal and Installation of Double Windrow Hydraulic Components	9012 Rac 8-97470
	Double Windrow Attachment.....	9013 Rac 8-97480
	Walking Beam	9020 Rac 8-97490

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**