



950106-01198

Operation & Maintenance Manual

DIESEL ENGINE

D24NAP

Table of contents

1. General Introduction.....	1-3
General Information.....	1-3
Danger, Warning, Caution, and Comment	1-4
Engine Management	1-7
2. Operation and Management.....	2-3
Starting and Stopping an Engine.....	2-3
Break-in Period of an Engine	2-4
Operation in Winter	2-6
Inspecting and Repairing an Engine	2-7
3. Performance and Specifications	3-3
Engine Specifications and Performance.....	3-3
Outside Drawing of the Engine (DL02-LEE00, DL02-LEE01, DL02-MDE00, DL02-MDE01)	3-14
Outside Drawing of the Engine (DL02-LEL00, DE02 LEL01, DL02-LEL02, DL02-LEL03, DL02-LEL05, DE02-MDL00, DL02-MDL01, DL02-MDL02, DL02-MDL03, DL02-MDL05).....	3-18
Outside Drawing of the Engine (DL02-LEL04, DL02-MDL04).....	3-22
Outside Drawing of the Engine (DL02-LEU00, DL02-MDU00)	3-26
Engine Identification Number	3-30
4. Regular Inspection.....	4-3
General Information.....	4-3
Regular Inspection Table	4-4
Engine Oil.....	4-5
Coolant	4-9
Fuel	4-13
Air Filter	4-14
6. About the engine.....	6-3
Marking System of Units.....	6-3
Tightening Torque	6-4
Engine Disassembly	6-7
Engine Assembly.....	6-21

7. Cooling System	7-3
General Information.....	7-3
water Pump	7-7
Thermostat	7-9
8. Lubrication System	8-3
General Information.....	8-3
Oil Pump.....	8-7
Oil Filter Assembly.....	8-13
9. Fuel System	9-3
General Information.....	9-3
Fuel return hose	9-5
Injector.....	9-6
Common Rail.....	9-12
Fuel injection pump	9-17
10. Intake/Exhaust System	10-3
General Information.....	10-3
Specifications	10-4
Intake manifold	10-6
Turbocharger	10-10
Exhaust Gas Recirculation (EGR) System	10-23
11. Cylinder block/head	11-3
General Information.....	11-3
Cylinder Block	11-5
Timing Gear Case	11-7
Breather.....	11-9
Cylinder Head.....	11-10
Cylinder Head Cover	11-11
Oil Pan.....	11-17
Valve	11-19
Rocker Arm	11-22
Valve Tappet and Push Rod	11-31
Camshaft	11-42
Idle Gear.....	11-43
Lifting Hook	11-47

12. Electric System	12-3
Electric Parts	12-3
Circuit Diagram.....	12-4
Air Heater	12-8
Switches and Sensors	12-11
Wire harness	12-17
Electronic Control Unit (ECU).....	12-18

13. Others/Driving System	13-3
General Information.....	13-3
Crankshaft	13-6
Connecting Rod.....	13-9
Piston	13-12
Crankshaft Pulley	13-14
Others.....	13-15

1. General Introduction

General Information.....	1-3
General Information	1-3
Danger, Warning, Caution, and Note	1-4
General Information	1-4
General Instructions	1-4
Cautions for Starting the Engine	1-4
Cautions for Inspection and Repair	1-4
General Repair	1-5
Other Safety Instructions and Environmental Pollution	1-6
Use of Genuine Parts	1-6
Engine Management	1-7
Prevention of damage and abrasion	1-7
Prevention of Pollution	1-7
Handling of Engine Oil	1-8

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**