
SECTION 00 - GENERAL INFORMATION

BOOK 1

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Introduction	00-2
	Safety	00-3
	Technical Information	00-4
	Safety Precautions	00-5
	Safety Decals - TC35, 40, 45	00-8
	Instruction Decals - TC35, 40, 45	00-9
	Safety Decals - TC35D, 40D, 45D	00-12
	Instruction Decals - TC35D, 40D, 45D	00-13
	International Symbols	00-17
	Specifications - TC35, 40, 45	00-18
	General Dimensions - TC35, 40, 45	00-25
	Specifications - TC35D, 40D, 45D	00-31
	General Dimensions - TC35D, 40D, 45D	00-37
	Minimum Hardware Tightening Torques	00-41
	Special Tools	00-43
	Lubricants	00-44
00 400	Recommended Lubricants	00-44
	Adjustments	00-45
	Tire Inflation Pressure - Adjustments	00-45
00 100	Pre-Season and Pre-Delivery Checklist	00-46

SECTION 10 - ENGINE

BOOK 1

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	10-3
	Metric Bolt Torque Specifications	10-12
	Special Tools	10-13
	General Information	10-15
	Description of Operation	10-15
	Troubleshooting	10-16
10 101	Cylinder Head Removal	10-53
10 106	Timing Gears and Camshaft Removal	10-57
10 102	Oil Sump Removal	10-58
10 110	Balancer Assembly-Removal	10-59
10 105	Connecting Rods, Bearings, and Pistons, Rings Removal	10-59
10 103	Flywheel	10-60
	Disassembly, Inspection, Fits, Clearances, and Assembly of Component Assemblies	10-61
10 101	Cylinder Head Disassembly	10-61
10 105	Pistons, Piston Rings, and Connecting Rods Disassembly and Inspection	10-67
10 103	Crankshaft	10-72
10 106	Timing Gear	10-76
10 103	Flywheel	10-77
10 102	Timing Gear Housing	10-78
	Engine Reassembly	10-79
10 103	Crankshaft and Bearing Holder Reassembly	10-79
10 105	Pistons and Connecting Rods	10-80
10 110	Balancer Assembly-Installation	10-81
10 106	Timing Gear Cover, Timing Gears, and Camshaft Assembly	10-82
10 106	Idle Gear, Oil Pump, and Injection Timing	10-83
10 101	Head Gasket Selection	10-86
10 106	Valve Clearance Adjustment	10-87
10 218	Fuel Piping	10-89
	Engine Lubrication System	10-91
10 304	Engine Lubrication System - Description of Operation	10-91
10 218	Fuel Piping	10-91
10 206	Oil Filter	10-95

10 304	Oil Pump	10-95
	Cooling System	10-99
10 400	Cooling System - Description of Operation	10-99
10 402	Thermostat	10-102
10 402	Water Pump	10-102
10 414	Cooling Fan	10-102
	Cooling System Overhaul	10-103
10 406	Radiator	10-103
10 402	Water Pump Removal	10-105
10 402	Thermostat Removal	10-108

SECTION 10 - ENGINE

BOOK 1

Chapter 2 - Fuel Systems

CONTENT

Section	Description	Page
	Specifications	10-112
	Torque Specifications	10-113
	Special Tools	10-113
10 242	Description of Operation	10-114
	Troubleshooting	10-116
10 244	Fuel Variation Mechanism	10-121
10 244	CTD (Compact Timing Device)	10-122
10 236	Pumping Elements	10-124
10 214	Delivery Valves	10-126
10 242	Injection Pump Removal	10-128
10 230	Timing and Governor Adjustments	10-131
	Spill-Timing Procedure	10-132
	Auto Bleed	10-137
	Bleeding to Fuel System	10-138
	Fuel Scre/High Idle Adjustment	10-138
10 230	Governor Operation	10-139
10 218	Injectors	10-145

SECTION 18 - CLUTCH

BOOK 1

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
18 000	Specifications	18-2
	Bolt Torque Specifications	18-3
	Special Tools	18-3
	Description of Operation	18-4
	Troubleshooting	18-6
	Overhaul	18-7
18 110	Clutch Removal	18-13
18 110	Clutch Installation	18-14
18 110	Clutch Related Components	18-21
	Clutch Linkage Components	18-24
18 100	Clutch Cross Shaft Bushings	18-24
	Clutch Pedal Adjustments	18-27
	Clutch Pedal Maximum Travel Adjustment	18-27

SECTION 21 - TRANSMISSION

BOOK 1

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

CONTENT

Section	Description	Page
	Specifications	21-2
	Metric Bolt Torque Specifications	21-3
	Special Tools	21-4
21 000	Description of Operation	21-5
	Powerflow	21-8
	Troubleshooting	21-12
	Overhaul	21-13
21 110 10	Overhaul - Removal	21-13
21 114	Separating at the Clutch Housing/Engine	21-13
	Clutch Housing Disassembly	21-19
21 148 63	Retainer Cover	21-23
21 148 63	Main Shift Rails and Shift Forks	21-24
21 148 63	Main Shaft	21-27
21 148 63	Range Shift Rail and Shift Fork	21-30
21 148 63	Range Gear Countershaft	21-31
21 148 63	Input Shaft	21-32
21 148 63	Reverse Idler Shaft	21-33
21 148 63	Shuttle Shift Rail and Fork	21-35
21 148 63	Main Countershaft	21-36
21 148 63	Synchronizers	21-38
21 148 63	Input Shaft	21-45
21 148 63	Main Countershaft End Float	21-46
21 148 63	Range Gear Countershaft	21-46
21 148 63	Range Shift Rail and Fork	21-47
21 148 63	Main Shaft	21-48
21 148 63	Main Shaft End Float	21-51
21 110 10	Clutch Housing	21-56
21 130	Transmission Shift Levers	21-67

SECTION 23 - DRIVELINE

BOOK 1

Chapter 1 - Driveline

CONTENTS

Section	Description	Page
23 000	Bolt Torque Specifications	23-2
	Special Tools	23-3
	Description of Operation	23-4
	Front Wheel Drive Take Off Gearbox	23-4
	Sensitrack	23-5
	Troubleshooting	23-9
	Lubrication	23-9
	Overhaul	23-10
	Front Wheel Drive Take Off Gearbox	23-10
23 260	Sensitrack Removal	23-14
23 260	Sensitrack Installation	23-31

SECTION 25 - 4WD FRONT AXLE, SUPERSTEER™ AND SENSITRACK™

BOOK 2

Chapter 1 - 4WD Front Axle, Supersteer™ and Sensitrack™

CONTENTS

Section	Description	Page
	Specifications	25-3
	Bolt Torque Specifications	25-6
	Special Tools	25-6
25 000	Description of Operation	25-7
	4WD Front Axle	25-7
	Troubleshooting	25-8
	Lubrication	25-10
	Overhaul	25-11
25 108	Disassembly	25-12
25 102	Front Axle and Differential	25-15
	Drive Pinion Disassembly	25-16
	Drive Pinion Inspection	25-17
	Drive Pinion Assembly	25-18
	Differential Gear Assembly	25-18
	Axle and Differential Assembly	25-19
	Differential Case Bearing Preload Check and Adjustment	25-20
	Ring Gear-to-Pinion Backlash Check and Adjustment	25-20
25 108	Gear Reduction Box Assembly	25-23
	Ring Gear-to-Pinion Backlash Check and Adjustment	25-25
	Bevel Gear-to-Pinion Backlash Check	25-26
25 100	Supersteer™	25-27
	Supersteer™ Front Axle	25-30
	Overhaul	25-33
25 100	Supersteer™ Axle Removal	25-35
	Gear Reduction-Drop Box Disassembly	25-40
25 102	Front Axle and Differential Disassembly	25-42
	Drive Pinion Disassembly	25-43
	Inspection	25-44
	Drive Pinion Assembly	25-45
	Differential Gear Assembly	25-45
25 102	Axle and Differential Assembly	25-46

	Differential Case Bearing Preload Check and Adjustment	25-47
	Ring Gear-to-Pinion Backlash Check and Adjustment	25-47
25 108	Gear Reduction Box Assembly	25-50
	Bevel Gear-to-Pinion Backlash Check	25-52
	Supersteer™ Axle Installation	25-53

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
27 000	Specifications	27-2
	Bolt Torque Specifications	27-3
	Special Tools	27-3
	Description of Operation	27-4
27 110	Differential	27-5
27 110	Differential Lock	27-5
27 126	Rear Axle	27-6
27 106	Differential Overhaul	27-7
27 126	Rear Axle Overhaul	27-16
27 126	Final Pinion Overhaul	27-25

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2

Chapter 1 - Hydrostatic Transmission

CONTENT

Section	Description	Page
	Specifications	29-2
	Metric Bolt Torque Specifications	29-4
	Special Tools	29-4
29 202	Description of Operation	29-5
29 212	Variable Displacement Pump Operation	29-11
29 212	Two Position Displacement Motor Operation	29-12
29 134	Hi/Lo Speed Control/Control Pod	29-13
29 200	Foot Control Pedals	29-13
	Troubleshooting	29-16
	Pressure Testing and Adjustments	29-19
	Separating the Tractor	29-23
	TC35D, TC40D, and TC45D w/HST Transmission	29-23
29 202	Hydrostatic Transmission Disassembly	29-44
29 130	Port Block Removal	29-47
29 218	Cylinder Block Assembly for Pump	29-50
29 218	Cylinder Block Assembly for Motor	29-51
29 130	Port Block Assembly	29-52
29 204	Check Valve	29-54
29 300	Hydrostatic Transmission Gearbox	29-55
	Gearbox Identification	29-56
29 214	Hi/Lo Solenoid Valve Assembly	29-68
	Cruise Control	29-76
	Electromagnet Air Gap Adjustment	29-77
29 200	HST Foot Control Pedals Neutral Adjustment	29-78

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 2

Chapter 1 - Power Take-Off (PTO) Systems

CONTENT

Section	Description	Page
	Specifications	31-2
	Metric Bolt Torque Specifications	31-3
	Special Tools	31-4
31 000	Description of Operation	31-5
31 110	Rear PTO-Power Flow Diagram - 12x12 Synchronized Shuttle Shift Transmission ...	31-6
31 110	Rear PTO-Power Flow Diagram - Hydrostatic Transmission (HST)	31-7
31 120	Mid PTO-Power Flow Diagram - Tractors Equipped with a Mid PTO Kit	31-8
31 104	Hydraulic Fluid Flow to the PTO Clutch Assembly	31-9
	Troubleshooting	31-12
	Pressure Testing	31-13
31 104 82	Overhaul	31-15
31 104 82	PTO Clutch Control Valve	31-18
31 114 62	PTO Clutch Assembly	31-23
31 114 68	PTO Clutch Disassembly	31-26
31 114 62	PTO Clutch Installation	31-34
31 114 42	PTO System Overhaul - 12x12 Synchronized Shuttle Shift Transmission	31-38
31 114 46	PTO Countershaft and Rear PTO Shaft	31-40
31 114 46	Countershaft Disassembly	31-42
31 114 00	PTO System Overhaul - Hydrostatic Transmission (HST) - Removal	31-47
31 114 42	PTO Input Shaft	31-47
31 114 46	PTO Countershaft and Rear PTO Shaft	31-49
31 114 42	PTO Countershaft and Rear PTO Shaft - Disassembly	31-53
31 114 19	PTO Countershaft and Rear PTO Shaft - Installation	31-57
31 120 00	Mid PTO Countershaft and Drop Box Overhaul	31-60

SECTION 33 - BRAKES

BOOK 2

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
33 000	Specifications	33-2
	Bolt Torque Specifications	33-3
	Description of Operation	33-4
33 120	Brakes	33-4
31 120	Brake Operation	33-5
33 110	Parking Brake	33-6
33 120	Overhaul	33-7
	Brake Adjustment	33-12

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2

Chapter 1 - Hydraulic System

CONTENT

Section	Description	Page
	Specifications	35-2
	Metric Bolt Torque Specifications	35-3
	Special Tools	35-4
35 100	Description of Operation	35-5
35 180	Combination System Relief - Diverter Valve Manifold Assembly	35-8
35 200	Control Valve Assembly (HPL)	35-9
35 210	Neutral Position - Fluid Flow	35-10
35 210	Raising Position - Fluid Flow	35-11
35 210	Lowering Position - Fluid Flow	35-12
35 200	Bypass Spool - Fluid Flow - Closed Position	35-13
35 200	Bypass Spool - Fluid Flow - Open Position	35-13
35 183	Flow Control Valve	35-14
35 108	Linkage Operation - Single Lever - Position Control	35-14
35 108	Position Control Operation - Neutral Position to Raise	35-15
35 112	Linkage Operation - Dual Lever Position Control (Draft Control)	35-16
35 124	Linkage Operation - Combining Position and Draft Control Settings	35-18
	Troubleshooting	35-19
	Pressure Testing	35-21
35 110	Hydraulic System Overhaul	35-23
35 200	Hydraulic Control Valve	35-34
35 180	Combination System Relief and Diverter Valve Assembly	35-38
35 182	PTO System Diverter Valve	35-41
35 124	Adjustments	35-44
35 304	Hydraulic Pump and Filter	35-45
35 304	Hydraulic Pump	35-46
35 300	Sump Tube and Screen Filter	35-52
35 204	Remote Valves	35-55
35 184	Front (Double-Spool) Remote Control System	35-61
35 184	Fluid Flow - Bucket Control - Dumping and Lift Control - Neutral	35-62
35 184	Fluid Flow - Bucket Control - Dumping Regen and Lift Control - Neutral	35-63
35 184	Fluid Flow - Bucket Control - Roll Back and Lift Control - Neutral	35-64
35 184	Fluid Flow - Bucket Control - Neutral and Lift Control - Raising	35-65
35 184	Fluid Flow - Bucket Control - Neutral and Lift Control - Lowering	35-66
35 184	Fluid Flow - Bucket Control - Neutral and Lift Control - Float	35-67
35 204	Overhaul	35-68
35 184	Front (Double Spool) Remote Control Valve	35-70

SECTION 41 - STEERING

BOOK 3

Chapter 1 - Steering

CONTENTS

Section	Description	Page
41 000	Specifications	41-2
	Bolt Torque Specifications	41-3
	Special Tools	41-4
	Description of Operation - Supersteer	41-5
	Description of Operation - Power Steering	41-7
41 204	Power Steering Control Motor	41-9
41 206	Power Steering Pump	41-10
41 216	Steering Cylinders	41-10
41 216	Power Steering Cylinders - 2WD and Standard 4WD	41-11
41 206	Power Steering Operation - Supersteer	41-12
41 200	Fluid Flow - Left Turn	41-13
41 200	Fluid Flow - Right Turn	41-14
41 200	Manual Operation	41-15
41 200	Power Steering Operation - 2WD and Standard 4WD	41-16
41 200	Fluid Flow - Left Turn	41-17
41 200	Fluid Flow - Right Turn	41-18
41 200	Manual Operation	41-19
	Troubleshooting	41-20
	Pressure Testing	41-22
	Lubrication	41-24
	Overhaul	41-25
41 204	Steering Control Motor Removal	41-25
41 204	Steering Control Motor	41-41
41 216	Steering Cylinder Removal - 4WD and Supersteer	41-42
41 216	Steering Cylinder Removal - 2WD	41-43
41 216	Steering Cylinder Installation - 4WD and Supersteer	41-52
41 216	Steering Cylinder Installation - 2WD	41-54
41 206	Power Steering Pump and Reservoir Tank	41-56
41 206	Pump Installation	41-58
	Steering Tubes	41-59

SECTION 44 - 2WD FRONT AXLE

BOOK 3

Chapter 1 - 2WD Front Axle

CONTENTS

Section	Description	Page
44 000	Specifications	44-2
	Bolt Torque Specifications	44-2
44 101	Description of Operation	44-3
	Troubleshooting	44-4
	Overhaul	44-5
44 103	Installation	44-12

SECTION 55 - ELECTRICAL

BOOK 3

Chapter 1 - Electrical

CONTENTS

Section	Description	Page
	Bolt Torque Specifications	55-3
	Introduction	55-4
55 100	Description	55-4
	Component Location and Function	55-4
55 100	Wire Harnesses	55-6
	Electrical System Components - Description and Testing	55-7
	Battery	55-7
	Main Fuse	55-9
	Fuse Block	55-10
	Key Switch	55-11
	Light Switch	55-13
55 404	Headlight	55-18

55 404	Taillight	55-19
	Rear Work Light (optional)	55-19
	Hazard Light Switch	55-20
	Hazard Light Switch Testing	55-21
55 408	Transmission Range Safety Switch	55-23
	Transmission Range Safety Switch Testing	55-24
55 408	Rear (Main) PTO Safety Switch	55-25
	Rear (Main) PTO Safety Switch Testing	55-25
55 408	Mid PTO Safety Switch	55-26
55 408	Seat Safety Switch	55-27
55 408	Parking Brake Safety Switch	55-29
	Relays	55-30
	Headlight and Neutral Start Relays	55-33
	Diodes	55-36
	Operator Safety Module	55-38
	Glow Plug Timer	55-40
55 201	Engine Glow Plugs	55-41
	NASO Hazard/Directional Signal Converter and Flasher Relay	55-44
55 410	Fuel Level Sending Unit	55-47
	Fuel Shutoff Solenoid	55-50
55 414	Engine Oil Pressure Switch	55-52
	Engine Coolant Temperature Switch (Economy)	55-53
	Engine Coolant Temperature Sending Unit (Deluxe)	55-53
	Hi/Low Transmission Range Switch	55-55
	Hi/Low Transmission Range Solenoid	55-58
	Electric Cruise Control Switch (Deluxe)	55-61
	Cruise Control Magnet (Deluxe)	55-63
	Cruise Control Brake Release Switch	55-65
	Instrument Panel - Component Operation and Servicing	55-67
	Instrument Panel (Economy)	55-68
	Instrument Panel (Deluxe)	55-69
	Instrument Panel Removal	55-70
	Instrument Panel Disassembly	55-70
	Fuel Gauge Removal	55-70
	Fuel Gauge Testing	55-70
	Temperature Gauge Removal (Deluxe)	55-72
	Temperature Gauge Testing	55-72
	Tachometer Removal	55-73
	Tachometer Testing	55-74

	PTO Speed Indicator Adjustment (Deluxe)	55-74
	Instrument Lights	55-75
	Circuit Diagrams and Troubleshooting	55-77
	Alternator Specifications	55-170
	Alternator Troubleshooting	55-171
	Charging System	55-173
55 301	Description of Operation	55-173
	Preliminary Alternator Tests	55-176
	Alternator Component Testing and Inspection	55-182
	Starter Motor Specifications	55-192
	Starter Motor Troubleshooting	55-193
55 201	Starting System	55-195
	Description of Operation	55-195
	Components	55-195
	Electrical Testing	55-205

SECTION 90 - PLATFORM

BOOK 3

Chapter 1 - Platform

CONTENTS

Section	Description	Page
90 105	Hood	90-2
90 100	Rear Hood Side Panels	90-4
90 110	Dash Console	90-6
90 120	Seat	90-11
90 114	ROPS	90-30
	Fuel Tank	90-34
90 116	Fenders	90-36
90 115	Deck	90-40

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**