

U80 Loader Landscaper

Service Manual

6-81730

Table of Contents

Description	Section No.	Publication Form No.
General		Tab 1
Section Index - General		6-81750
Standard Torque Specifications	1001	6-80470
Fluids and Lubricants	1002	6-81760
Metric Conversion Chart	1003	6-80690
Engine		Tab 2
Section Index - Engine		6-81770
Engine and Radiator Removal and Installation	2000	6-81780
Stall Tests	2002	6-81790
Specification Details 4-390 Diesel Engine	2402	5-2100
After Cooler	2411	5-2110
Cylinder Head	2415	5-2120
Cylinder Block	2425	5-2130
Lubrication System	2445	5-2140
Balancer	2447	5-2150
Cooling System	2455	5-2160
Turbocharger	2465	5-2170
HX25W and HX30W Turbocharger	2470	5-2180
Fuel System		Tab 3
Section Index - Fuel System		6-81800
Fuel System and Filters	3410	5-2190
Fuel Injectors	3413	5-2200
CAV Fuel Injection Pump	3414	5-2210
BOSCH Model VE Fuel Injection Pump	3415	5-2220
BOSCH Model A Fuel Injection Pump	3416	5-2230
Electrical		Tab 4
Section Index - Electrical		6-81810
Removal and Installation of Electrical Components	4001	6-81820
Electrical Specifications and Troubleshooting	4002	6-81830
Batteries	4003	6-81270
Starter Motor - Denso	4004	6-81840
Instrument Cluster	4005	6-81850
Alternator	4007	6-81860

Table of Contents

Description	Section No.	Publication Form No.
Steering		
	Tab 5	
Section Index - Steering		6-81870
Removal and Installation of Steering Components	5001	6-81880
Steering Specifications, Pressure Checks and Troubleshooting	5002	6-81890
Steering Control Valve	5003	6-81900
Steering Cylinders	5004	6-81910
Front Axle - Two Wheel Drive	5005	6-81920
Front Axle - Four Wheel Drive	5006	6-81930
Power Train		
	Tab 6	
Section Index - Power Train		6-81940
Removal and Installation of Power Train Components	6001	6-81950
Standard Transmission Specifications, Pressure Checks and Troubleshooting	6002	6-81960
Wheels and Tires	6003	6-81970
Rear Axle and Planetaries	6004	6-81980
Standard Transmission	6007	5-1000
Brakes		
	Tab 7	
Section Index - Brakes		5-1010
Removal and Installation of Brake Components	7001	5-1020
Master Cylinder	7003	5-1030
Hydraulics		
	Tab 8	
Section Index - Hydraulics		5-1040
Removal and Installation of Hydraulic Components	8001	5-1050
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-1060
Cleaning the Hydraulic System	8003	5-1070
Hydraulic Pump	8004	5-1080
Loader Control Valve	8005	5-1090
Cylinders	8006	5-1100
Three Point Hitch Control Valve	8007	5-1110
Accumulator for Machines with Optional Ride Control	8009	5-1120
Solenoid Valve for Machines with Optional Ride Control	8010	5-1130
Flow Control Valve	8011	5-1140
Lock Valve	8012	5-1150
flow Control Priority Valve	8013	5-1160
Mounted Equipment		
	Tab 9	
Section Index - Mounted Equipment		5-1170
Pedals and Levers	9001	5-1180
Air Conditioning Troubleshooting For Systems With R-134a Refrigerant	9002	5-1190
Air Conditioning System Service For Systems With R-134a Refrigerant	9004	5-1200
Air Conditioning Components Service For Systems With R-134a Refrigerant	9005	5-1210
Loader	9006	5-1220
ROPS Cab and Canopy	9007	5-1230
Pedestal Seat	9009	5-1240

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**