

Solar 225LC-V

Shop Manual

023-00058E

Serial Number 1001 and Up

October 2002

TABLE OF CONTENTS

Safety

Track Excavator Safety.....	S0102000
-----------------------------	----------

Specifications

Specifications for Solar 225LC-V.....	S0205015K
---------------------------------------	-----------

General Maintenance

General Maintenance Procedures.....	S0302000
Standard Torques.....	S0309000

Upper Structure

Cab.....	S0402040K
Counterweight.....	S0403050K
Fuel Tank.....	S0405005K
Fuel Transfer Pump.....	S0405500
Swing Bearing.....	S0407000
Swing Reduction Gearbox.....	S0408015K

Lower Structure and Chassis

Track Assembly.....	S0505030
---------------------	----------

Engine and Drive Train

Air-Conditioner.....	S0605060K
Drive Coupling (Main Pump).....	S0609000

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	S0702170K
Accumulator.....	S0703010K
Center Joint (Swivel).....	S0704010
Cylinders.....	S0705000

Swing Motor.....	S0707200
Travel Motor (With Gearbox) (GM35VL).....	S0707330
Main Pump (With Regulator)	S0708320
Main Control Valve (Kayaba).....	S0709401K
Pilot Control Valve (Work Lever / Joystick).....	S0709451K
Travel Control Valve (With Damper).....	S0709820K
Hydraulic Schematic (Solar 225LC-V/225NLC-V)	S0792105K

Electrical System

Electrical System	S0802220K
Electrical Schematic (Solar 225LC-V/225NLC-V).....	S0892105K

Attachments

Boom and Arm.....	S0902010
Bucket.....	S0904015K

Publication Request for Proposed Revision