

# SECTION INDEX


NAME	SECTION
<b>GENERAL</b>	<b>0</b>
<b>ENGINE</b>	<b>1</b>
<b>TORQUE CONVERTER</b>	<b>2</b>
<b>PROPELLER SHAFT</b>	<b>3</b>
<b>DIFFERENTIAL</b>	<b>4</b>
<b>FRONT AXLE</b>	<b>5</b>
<b>REAR AXLE</b>	<b>6</b>
<b>STEERING</b>	<b>7</b>
<b>BRAKE</b>	<b>8</b>
	<b>.</b>
<b>MATERIAL HANDLING SYSTEM</b>	<b>10</b>
<b>MAST</b>	<b>11</b>
<b>CYLINDER</b>	<b>12</b>
<b>OIL CONTROL VALVE</b>	<b>14</b>
<b>HYDRAULIC PIPING</b>	<b>15</b>
<b>APPENDIX</b>	<b>16</b>

## GENERAL


0

	Page
EXTERIOR VIEWS .....	0-2
VEHICLE LISTING .....	0-3
FRAME NUMBER .....	0-3
HOW TO READ <b>THIS</b> MANUAL .....	0-4
EXPLANATION METHOD .....	0-4
TERMINOLOGY .....	0-5
ABBREVIATIONS .....	0-5
OPERATIONAL <b>TIPS</b> .....	0-6
STANDARD BOLT & NUT TIGHTENING TORQUE .....	0-7
BOLT STRENGTH TYPE IDENTIFICATION METHOD .....	0-7
TIGHTENING TORQUE TABLE .....	0-8
PRECOAT BOLTS .....	0-9
<b>HIGH</b> PRESSURE HOSE FITTING TIGHTENING TORQUE .....	0-9
<b>WIRE</b> ROPE SUSPENSION ANGLE <b>LIST</b> .....	0-10
SAFE LOAD FOR EACH <b>WIRE</b> ROPE SUSPENSION ANGLE .....	0-10
COMPONENTS WEIGHT .....	0-11
RECOMMENDED LUBRICANT QUANTITY & TYPES ...	0-12
LUBRICATION CHARTS .....	0-13
PERIODIC MAINTENANCE .....	0-14
PERIODIC REPLACEMENT LUBRICANTS & PARTS .....	0-20

**EXTERIOR VIEWS**

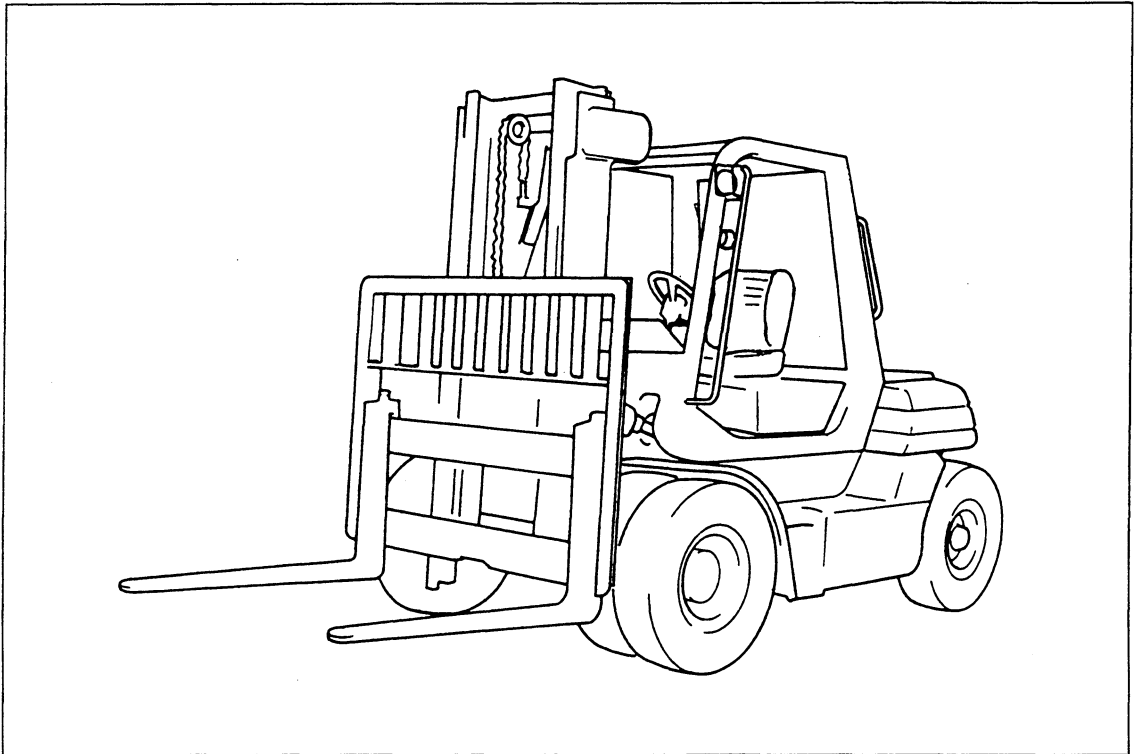

**Front View**

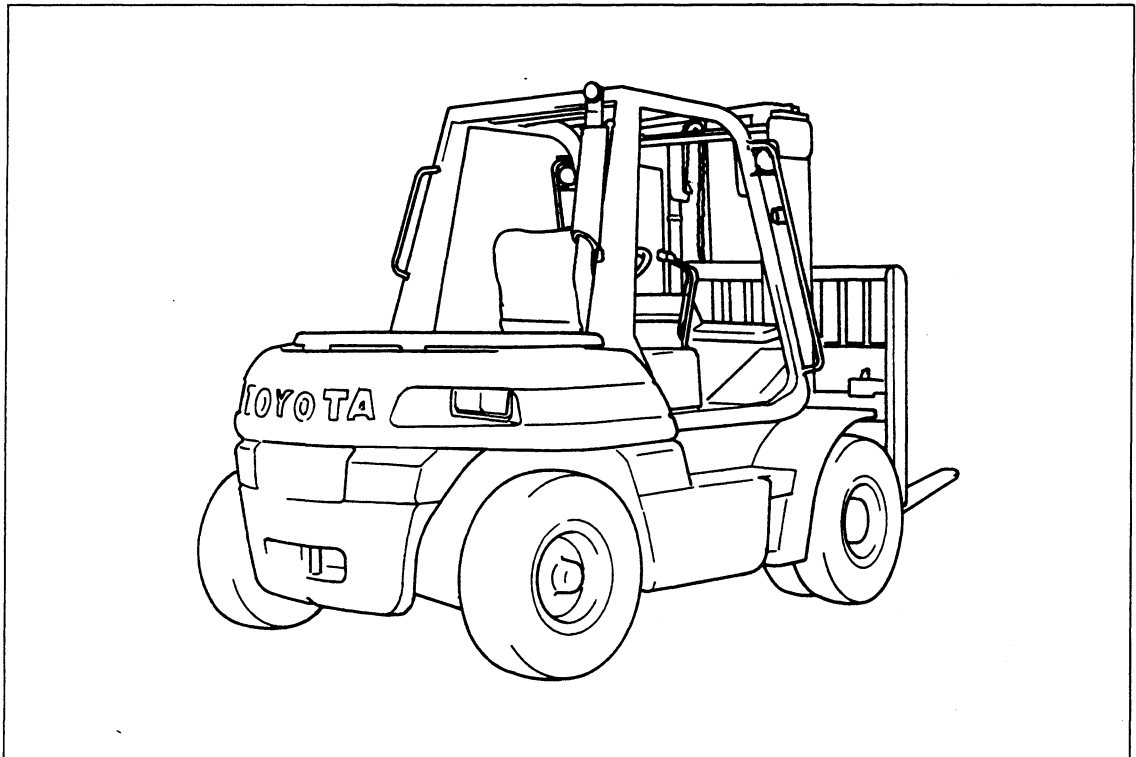


**Rear View**

## VEHICLE LISTING

Payload	Model	Engine model and type	
5.0 ton	5FG50	3F	Gasoline
	5FD50	12Z	Diesel
6.0 ton	5FG60	3F	Gasoline
	5FD60	12Z	Diesel
7.0 ton	5FD70	12Z	Diesel
8.0 ton	5FD80	W06E	Diesel

## FRAME NUMBER

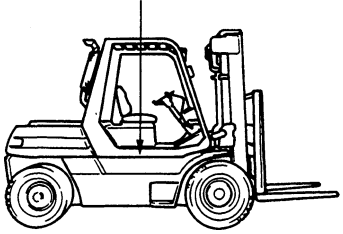Engine	Model	Punching format	Punching position
3F	5FG50	5FG60-10001	<p>Top on rear right frame</p> 
	5FG60		
12Z	5FD50	5FD70-10001	
	5FD60		
	5FD70		
W06E	5FD80	5FD80-10001	

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**