Model: 320C EXCAVATOR AMC

Configuration: 320C & 320C L Excavators AMC00001-UP (MACHINE) POWERED BY 3066 Engine

### Disassembly and Assembly 320C Excavator Machine Systems

Media Number -RENR3826-16

Publication Date -01/11/2014

Date Updated -30/03/2016

i02333043

### **Actuator Motor (Air Distributor) - Remove and Install**

**SMCS -** 7304-010-MQ; 7309-010-MQ; 7320-010-MQ

#### **Removal Procedure**

#### **Start By:**

a. Remove the storage box in the cab. Refer to Disassembly and Assembly, "Storage Box and Covers (Cab) - Remove and Install".

## Removal Procedure of the Actuator Motor for the Air Damper for the Temperature Control



Illustration 1

g00699772

1. Disconnect harness assembly (1) from the actuator motor.

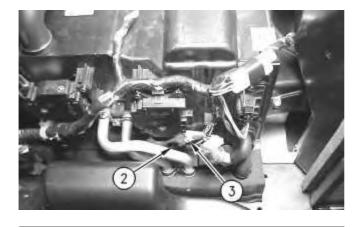


Illustration 2 g00699776

2. Remove screw (2) in order to disconnect linkage (3).

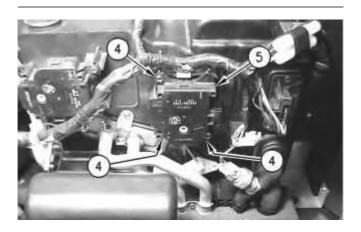


Illustration 3 g00699782

- 3. Remove screws (4) from the actuator motor.
- 4. Remove actuator motor (5).

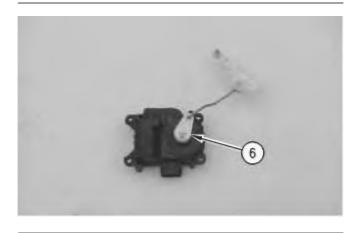


Illustration 4 g00699790

5. Remove linkage (6) from the actuator motor.

#### Removal Procedure of the Actuator Motor for the Front Air Damper

g00699809

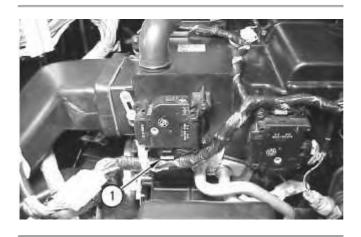


Illustration 5

1. Disconnect harness assembly (1) from the actuator motor.

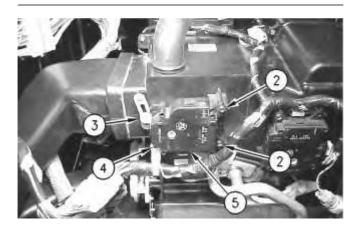


Illustration 6 g00699811

- 2. Remove screw (4). Remove the cable strap for the harness assembly.
- 3. Remove screws (2) from the actuator motor.
- 4. Remove actuator motor (5).

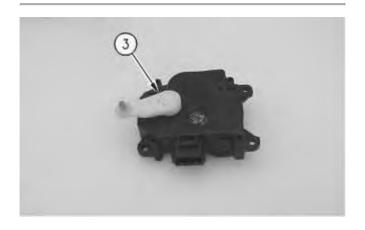


Illustration 7 g00699816

5. Remove linkage (3) from the actuator motor.

# Removal Procedure of the Actuator Motor for the Fresh Air or Recirculated Air Damper

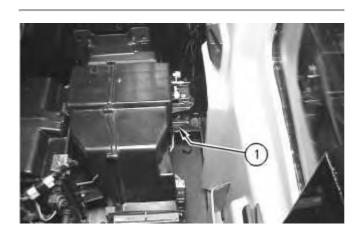


Illustration 8

g00699825

1. Disconnect harness assembly (1) from the actuator motor.

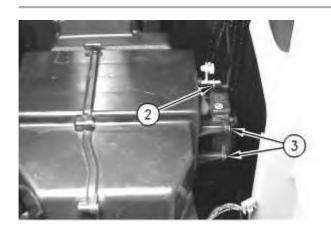


Illustration 9

g00699828

2. Remove screw (2) from the linkage.

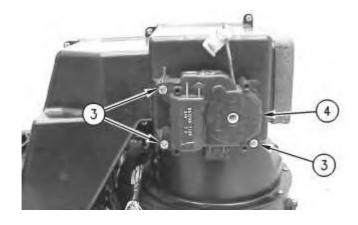


Illustration 10 g00699833

The heating and air conditioning unit is removed for photographic purposes.

- 3. Remove screws (3) from the actuator motor.
- 4. Remove actuator motor (4).


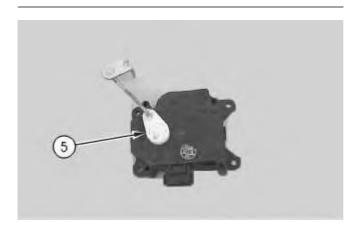


Illustration 11 g00699850

5. Remove linkage (5) from the actuator motor.

## Removal Procedure of the Actuator Motor for the Air Damper for the Rear Window Defroster

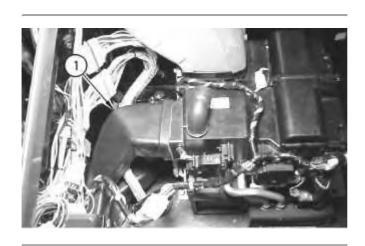

Thank you very much for your reading. Please click here to buy After you pay. Then, you can download the complete manual instantly.

No waiting.