



Illustration 2

g00698116

1. Install insulation (40) on the evaporator coil.



Illustration 3

g00698112

2. Install evaporator coil (39) in the case assembly.



Illustration 4

g00698110

Note: Make sure that the air dampers are properly installed in the case assembly.

3. Install case assembly (38).
-

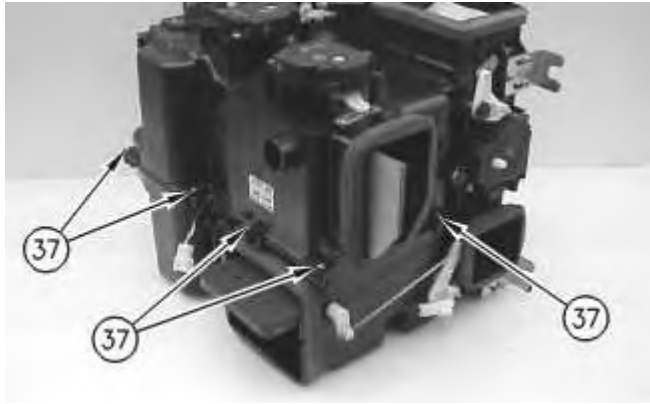


Illustration 5

g00698562

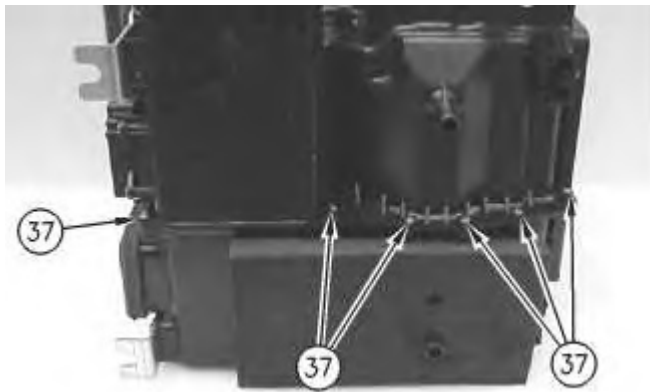


Illustration 6

g00698099

4. Install screws (37) in the case assembly.

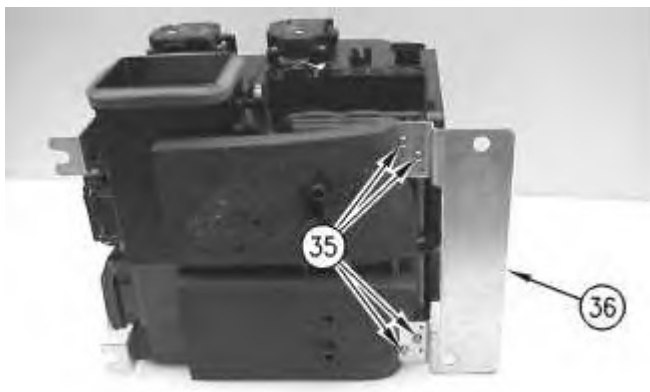


Illustration 7

g00698091

5. Position mounting bracket (36) on the case assembly. Install screws (35).

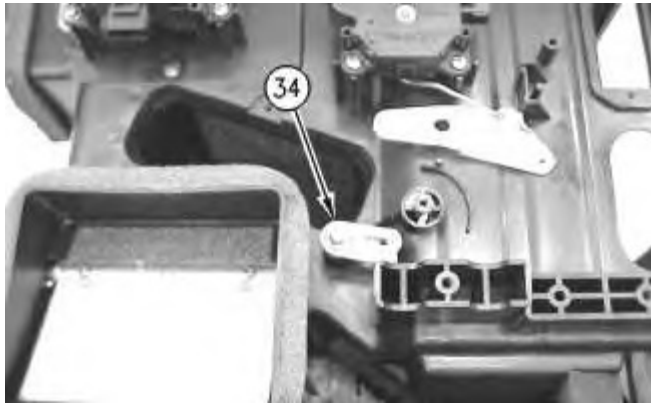


Illustration 8

g00698084

6. Install retainer (34) on the air damper.

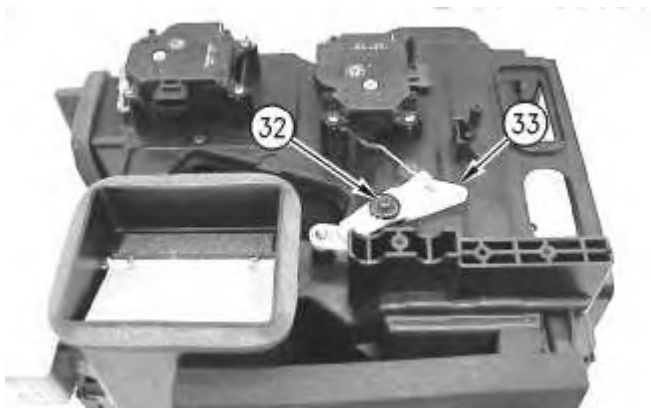


Illustration 9

g00698076

7. Connect linkage (33). Install screw (32).



Illustration 10

g00698555

8. Install O-ring seal (31) on the tube assembly.

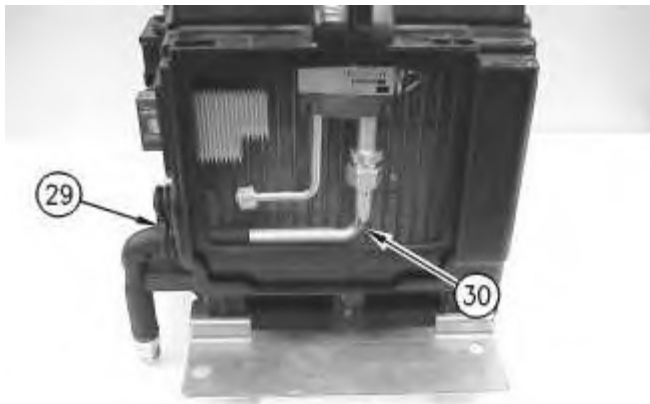


Illustration 11

g00698025

9. Install tube assembly (30) in grommet (29). Connect tube assembly (30).

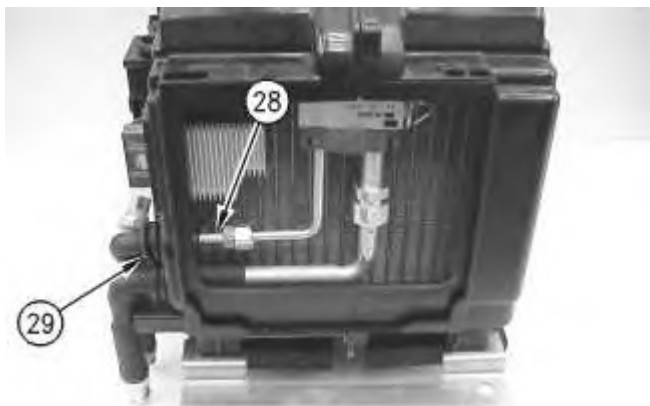


Illustration 12

g00698016

10. Install tube assembly (28) in grommet (29). Connect tube assembly (28).

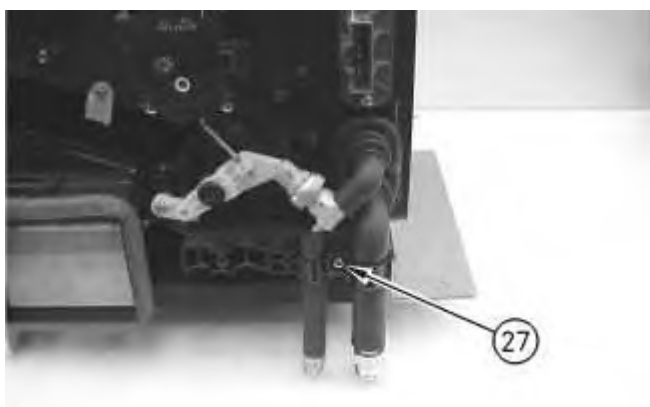


Illustration 13

g00698018

11. Install the clip and screw (27) on the tube assembly.

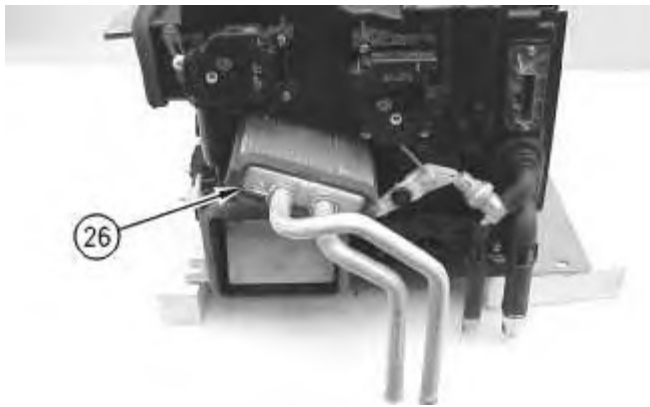


Illustration 14

g00698010

12. Install heater core (26).

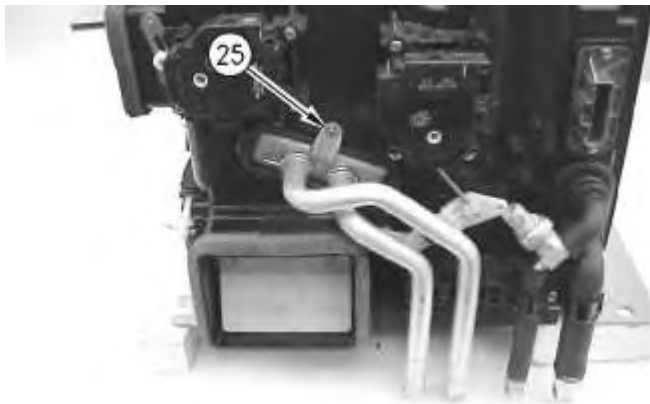


Illustration 15

g00698002

13. Install the clip and screw (25).

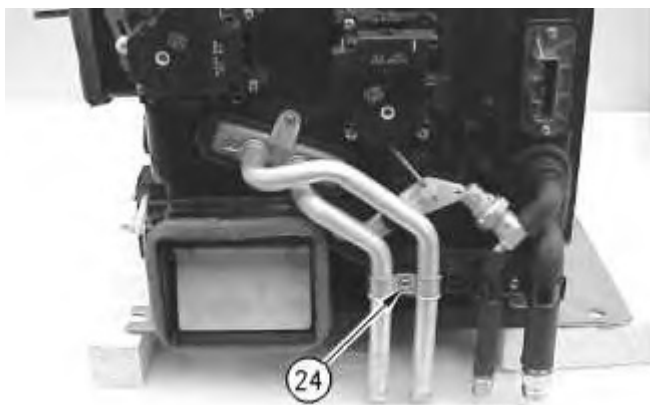


Illustration 16

g00698007

14. Install screw (24) in order to Install the clip on the tube assemblies.



Illustration 17

g00698546

15. Install insulation (23) on the tube assemblies.



Illustration 18

g00697999

16. Connect linkage (21). Install screw (22).



Illustration 19

g00697996

17. Install cam (20) on the damper motor.

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**