

DL300

Shop Manual

K1010636E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

Wheel Loader Safety	SP000095
---------------------------	----------

Specifications

Specification for DL300.....	SP000104
------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000097
Standard Torques	SP000098

Drive Train

Transmission and Torque Converter	SP000118
Transmission Error Codes (ZF)	SP000100
Front Axle (ZF-MT-L 3095)	SP000199
Rear Axle (ZF-MT-L 3085).....	SP000217
Drive Shaft.....	SP000218

Brake

Service Brake	SP000219
Brake Supply Valve	SP000220
Parking Brake	SP000221
Brake Pedal Valve	SP000222
Accumulator.....	SP000223

Steering

Steering	SP000224
Cushion Valve.....	SP000328
Emergency Steering	SP000225

Frame

Articulation Center SP000231
Counterweight..... SP000130

Tank

Oil Tank SP000226
Fuel Tank..... SP000227

Hydraulics

Main Control Valve SP000233
Load Isolation System SP000228
Cooling System..... SP000229
Pilot System..... SP000230
Hydraulic Schematic (DL300) SP000234

Electrical System

Air Conditioner SP000172
Electrical System SP000268
Electrical Schematic (DL300) SP000272

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**