

Product: TRACK-TYPE TRACTOR

Model: D8T TRACK-TYPE TRACTOR FMC

Configuration: D8T TRACK-TYPE TRACTOR FMC00001-UP (MACHINE) POWERED BY C15 Engine

Disassembly and Assembly D8T Track-Type Tractor Power Train

Media Number -UENR1388-02

Publication Date -01/03/2016

Date Updated -09/03/2016

i07232517

Final Drive Planetary Carrier (In Chassis) - Remove and Install

SMCS - 4092-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Description	Qty
A	3B-2968	Bolt	3
B	439-3939	Link Bracket As	1
C	439-3938	Link Bracket	1

1. Rotate the final drive until the drain plug is at the bottom.
 2. Drain the final drive oil. Refer to Operation and Maintenance Manual, "Final Drive - Change" for the correct draining and filling procedures.
 3. Remove the outer axle. Refer to Disassembly and Assembly, "Axle - Remove and Install".
-

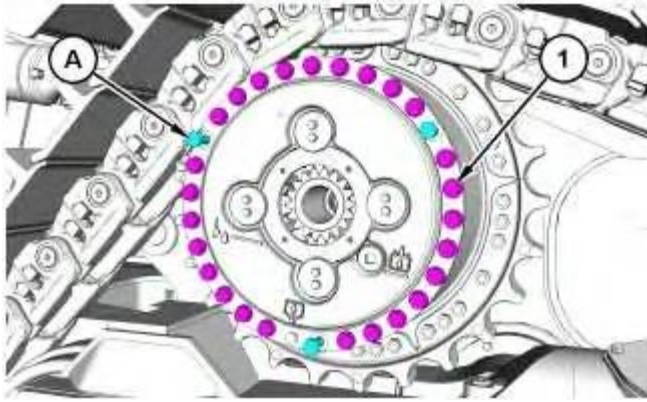


Illustration 1

g06321307

Note: Tooling (A) must be installed to a depth of 25 mm (1.0 inch) to hold the planetary carrier.

4. Remove three equally spaced bolts (1) and install Tooling (A).
5. Remove the remaining bolts (1).

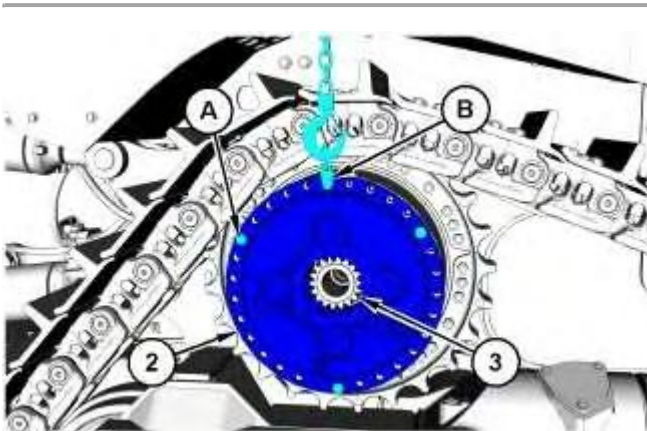


Illustration 2

g06319554

6. Position outer planetary carrier (2) away from the hub allowing enough room to install Tooling (B).
7. Install Tooling (B) and a suitable lifting device to outer planetary carrier (2). The weight of outer planetary carrier (2) is approximately 124 kg (273 lb).
8. Remove Tooling (A).

Note: Inner planetary carrier and sun gear (3) are to stay in the hub while outer planetary carrier (2) is being removed.

9. Use a suitable pry bar at the bottom of outer planetary carrier (2) to help keep outer planetary carrier (2) aligned straight with the hub during the removal process.
10. Remove outer planetary carrier (2).



Illustration 3

g06319673

11. Remove O-ring seal (4) from outer planetary carrier (2).

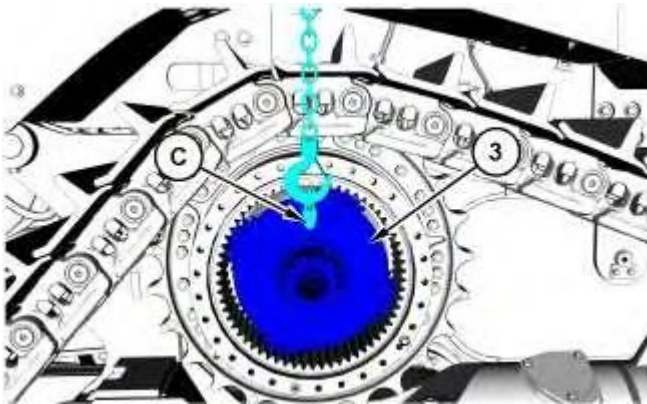


Illustration 4

g06319555

12. Attach Tooling (C) to inner planetary carrier and sun gear (3). The weight of inner planetary carrier and sun gear (3) is approximately 52 kg (115 lb).
13. Use a suitable pry bar in the center of inner planetary carrier and sun gear (3) to help keep inner planetary carrier and sun gear (3) aligned straight with the hub during the removal process.
14. Remove inner planetary carrier and sun gear (3).



15. Remove thrust ring (5) and O-ring seal (6).



Illustration 6

g06319684

16. Remove lip seal (7).

Installation Procedure

1. Install outer planetary carrier (2) and inner planetary carrier and sun gear (3) in the reverse order of removal.



Illustration 7

g06321778

- a. Install lip seal (7) in the direction indicated in Illustration 7 towards the center of the machine.
 - b. Lubricate the lip of lip seal (7) with lubricant being sealed.
 - c. Tighten bolts (1) to a torque of $430 \pm 60 \text{ N}\cdot\text{m}$ ($320 \pm 45 \text{ lb ft}$).
-

Product: TRACK-TYPE TRACTOR

Model: D8T TRACK-TYPE TRACTOR FMC

Configuration: D8T TRACK-TYPE TRACTOR FMC00001-UP (MACHINE) POWERED BY C15 Engine

Disassembly and Assembly D8T Track-Type Tractor Power Train

Media Number -UENR1388-02

Publication Date -01/03/2016

Date Updated -09/03/2016

i07232534

Final Drive, Steering Planetary, and Brake (Right Side) - Remove and Install

SMCS - 4050-010-RI; 4132-010-RI

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Description	Qty
A	142-6893	Adjustable Hook Gp	1
	142-1666	Bracket As	1
	1D-4615	Bolt	3
	2J-3506	Full Nut	3
	5P-8248	Washer	6
B	-	SAE 30	-

Start By:

- Separate the track.
 - Remove the axles.
-

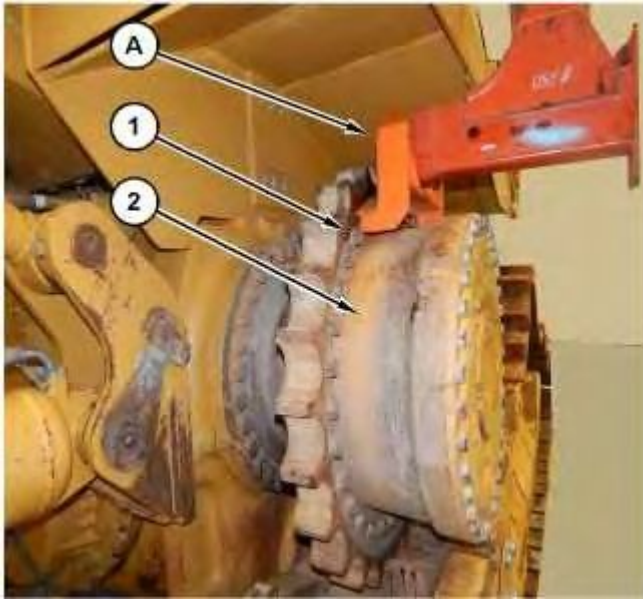


Illustration 1
Typical Example

g06302121

1. Attach a suitable lifting device to Tooling (A).
2. Remove seven bolts (1) and install Tooling (A) to final drive, steering planetary, and brake (2). The weight of final drive, steering planetary, and brake (2) is approximately 794 kg (1750 lb).

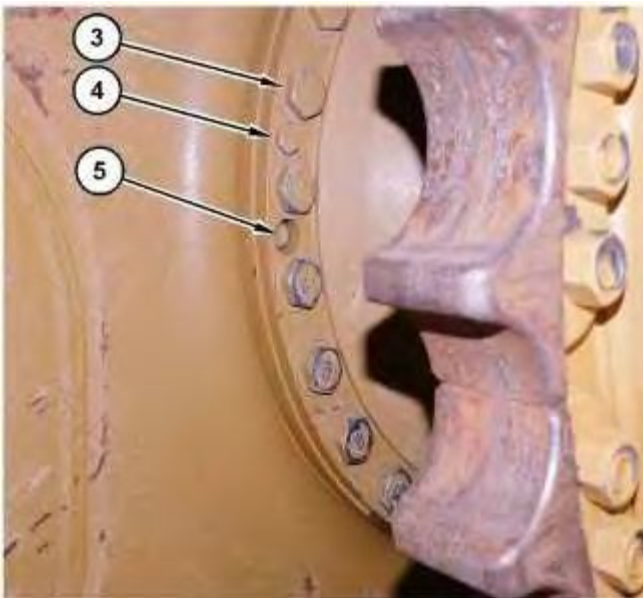


Illustration 2

g06302145

Note: Bolts (4) hold the final drive, the planetary assembly, and the brake together.

3. Remove bolts (3) and (5). **Do not remove bolts (4).**

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**