

Product: EXCAVATOR

Model: 320 GC EXCAVATOR DKJ

Configuration: 320 GC Excavator DKJ00001-UP (MACHINE) POWERED BY C4.4 Engine

Disassembly and Assembly 320GC, 320 and 323 Excavators Machine Systems

Media Number -M0080364-08

Publication Date -01/09/2018

Date Updated -12/09/2018

i07505832

Travel Motor - Disassemble

SMCS - 4351-015

Disassembly Procedure

Reference: Special Instruction, "Visual Service Procedures - Colors and Symbols" , M0066576

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
	FT-0957	Positioning Gp	3
B	-	M16x2 Threaded Rod	3
	8T-1757	Nut	9
	9X-8268	Washer	9
C	421-5662	Lifting Eye Assembly	1
D	421-5663	Lifting Eye Assembly	2
E	1U-9895	Crossblock	1
	3H-0465	Push-Puller Plate	1
	8T-0298	Bolt	2

Start By:

- a. Remove the travel motor.
-

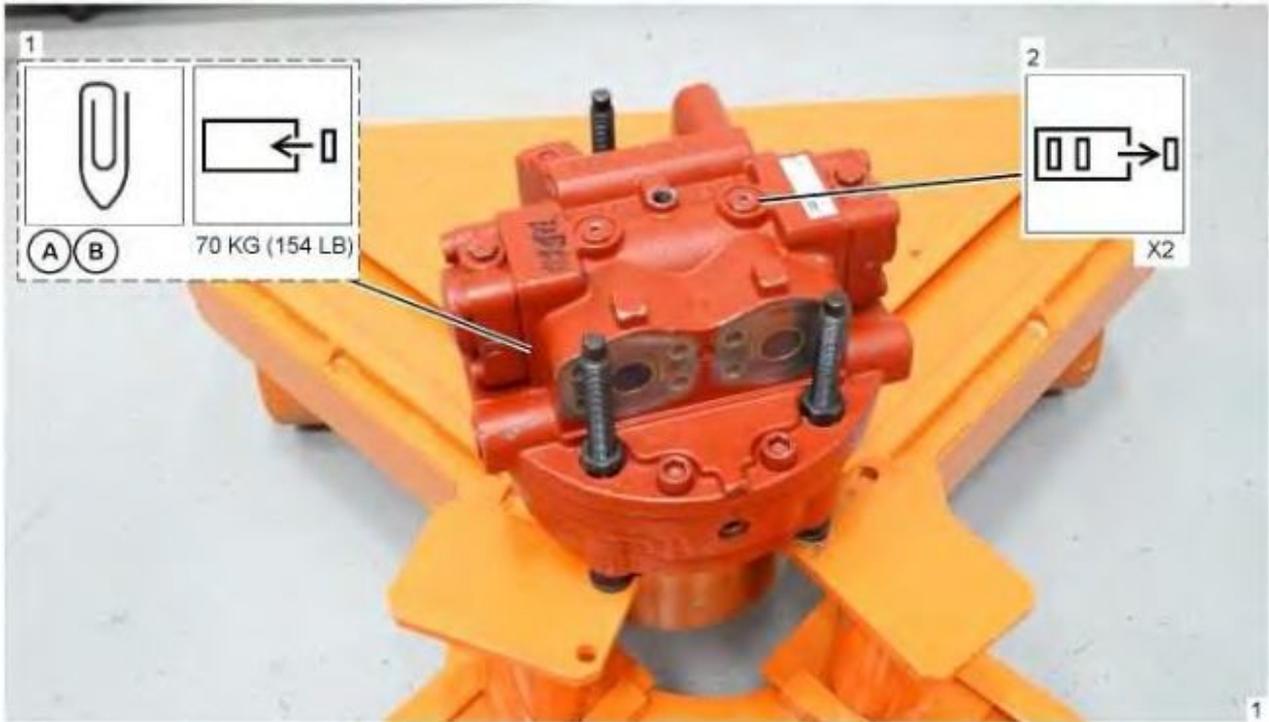


Illustration 1

g06345315

Remove plugs and the O-ring seals.

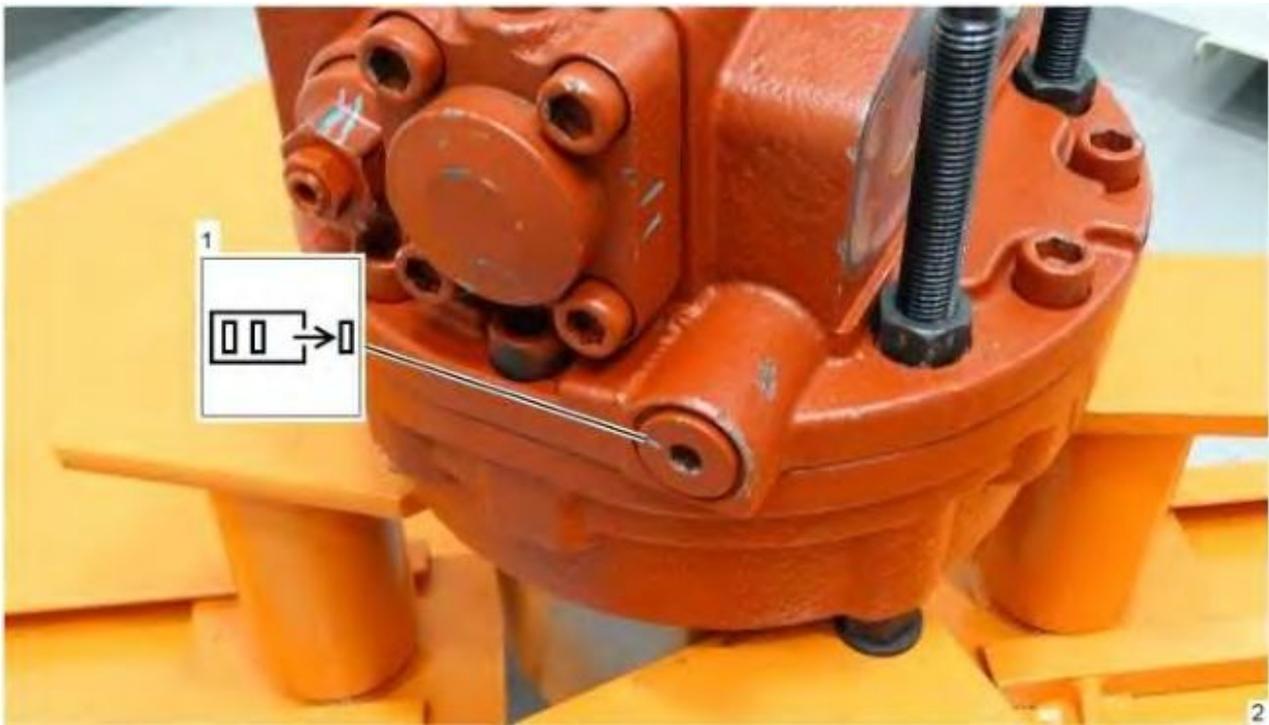


Illustration 2

g06344354

Remove plug and the O-ring seal. Repeat for the opposite side.



Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

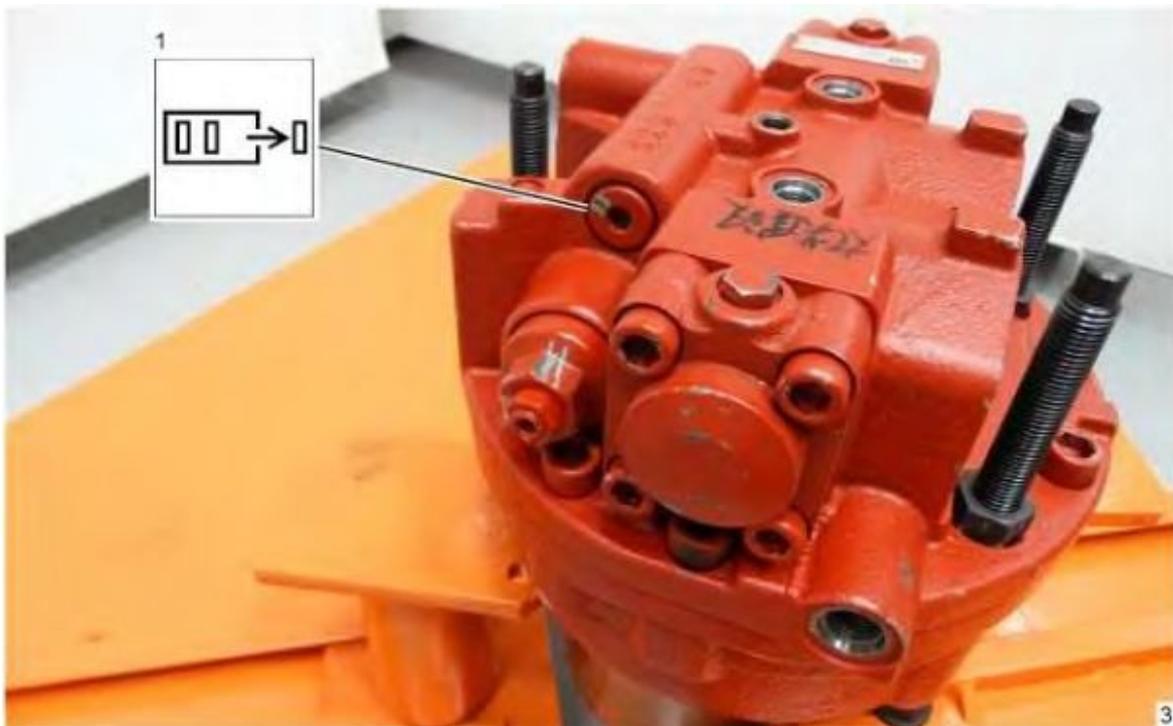


Illustration 3

g06344402

Remove plug and the O-ring seal. Repeat for the opposite side.

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**