

Product: SKID STEER LOADER

Model: 262B SKID STEER LOADER PDT

Configuration: 236B 246B 252B 262B SKID STEER LOADER PDT00001-UP (MACHINE) POWERED BY 3044C Engine

Disassembly and Assembly

236B, 236B2, 246B, 252B, 252B2 and 262B Skid Steer Loaders Power Train

Media Number -REN4864-04

Publication Date -01/12/2010

Date Updated -07/12/2010

i03644882

Piston Motor (Hydrostatic) - Assemble

SMCS - 4351-016

Assembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	161-0970	Grease	1
B	318-1478	Sleeve	1



Illustration 1

g01409739

1. Raise the temperature of bearing cone (42). Install bearing cone (42) onto shaft (41).
2. Pack bearing (42) with Tooling (A).



Illustration 2

g01409613

3. Lower the temperature of bearing cup (39). Install bearing cup (39).

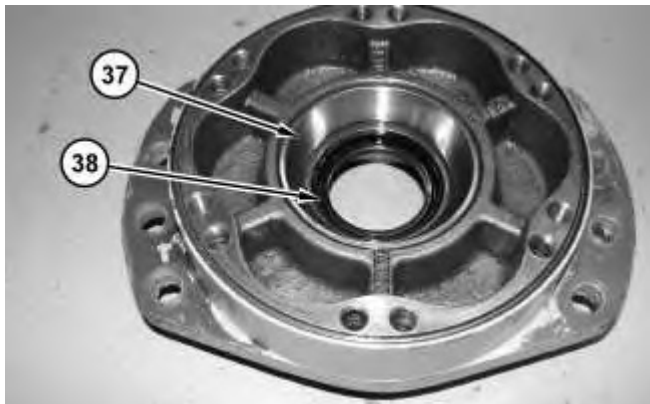


Illustration 3

g01409611

4. Install seal (38). Lower the temperature of bearing cup (37). Install bearing cup (37).

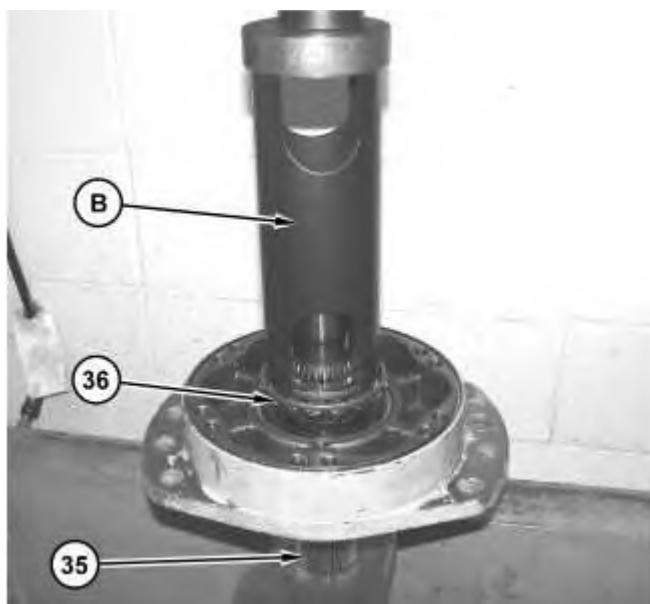


Illustration 4

g01409741

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**