

Product: EJECTOR TRUCK

Model: 740 EJECTOR TRUCK B1R

Configuration: 740 Ejector Articulated Truck B1R00001-UP (MACHINE) POWERED BY C15 Engine

Disassembly and Assembly 730 EJECTOR and 740 EJECTOR Articulated Trucks

Media Number -REN5176-07

Publication Date -01/04/2018

Date Updated -13/04/2018

i02381152

Ejector Blade Floor Rollers - Assemble

SMCS - 6229-016

S/N - AZZ1-UP

S/N - B1R1-UP

Assembly Procedure

Table 1

Required Tools			
Tools	Part Number	Part Description	Qty
B	1P-0510	Driver Group	1
C	7X-7699	Grease	1

1. Clean all parts and inspect all parts. If any parts are worn or damaged, use new Caterpillar parts for replacement.

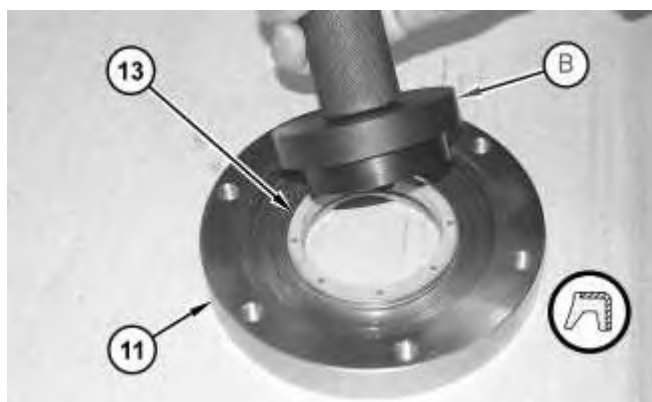


Illustration 1

g01188833

2. Use Tooling (B) in order to install lip seal (13) into housing (11).



Illustration 2

g01195296

3. Apply Tooling (C) to lip seal (13) on housing (11) before installing the housing onto bracket (3).



Illustration 3

g01188834

4. Install bearing race (12) onto the floor roller with the shoulder on the bearing race toward bracket (3).

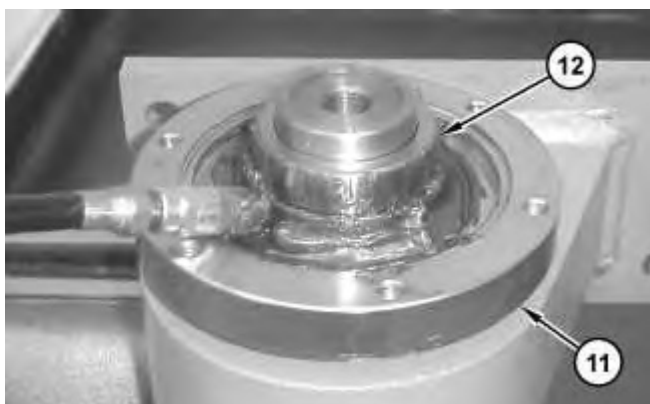


Illustration 4

g01188835

5. Apply Tooling (C) to the bearing cavity between bearing race (12) and housing (11).

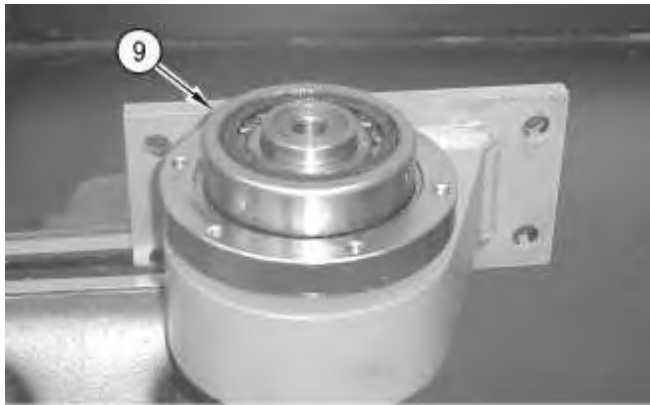


Illustration 5

g00896615

6. Install roller bearing (9).

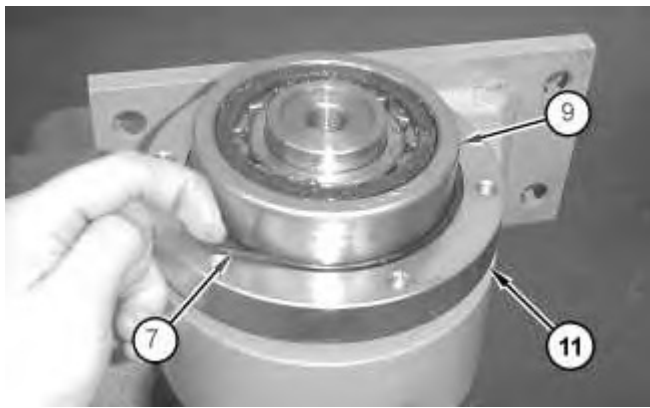


Illustration 6

g01195297

7. Install O-ring seal (7) onto housing (11) and roller bearing (9).



Illustration 7

g01188836

8. Apply Tooling (C) to roller bearing (9).

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**